

RSD SHIFT RODS

NOSTALGIA

VINTAGE

MOTO

## RSD SHIFT ROD INSTALLATION

1. Turn your motorcycle off, place securely on a lift or side stand.
2. Remove the factory shift rod. **Note:** refer to the HD service manual for additional instructions.





3. Compare the factory shift rod length to the RSD shift rod length. If the length is correct you are ready for installation. If the length needs to be adjusted, loosen the jam nuts using a 1/2" wrench and rotate the ball joints in or out to desired length.

**Disclaimer:** Make sure there is at least 1/2" of thread engagement on each ball joint to prevent failure.



4. Install the RSD shift rod using the factory hardware. Use blue threadlocker on the bolts and torque to 15 ft-lbs. Once both ends are installed tighten the jam nut using a 1/2" wrench.

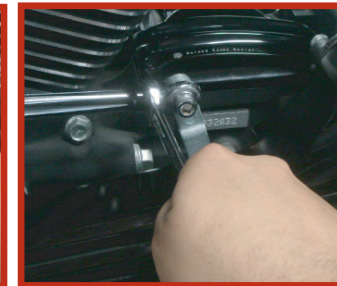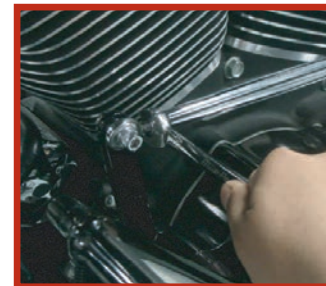

5. Make a few test shifts to make sure the function is correct and HIT the ROAD!

### PRODUCT DESCRIPTION

RSD NOSTALGIA SHIFT ROD

0173-1901

RSD VINTAGE SHIFT ROD

0173-1902

RSD MOTO SHIFT ROD

0173-1903