


SPORTS SPORTS WORKS TEAR-OFFS

INNOVATION TECHNOLOGY DESIGN



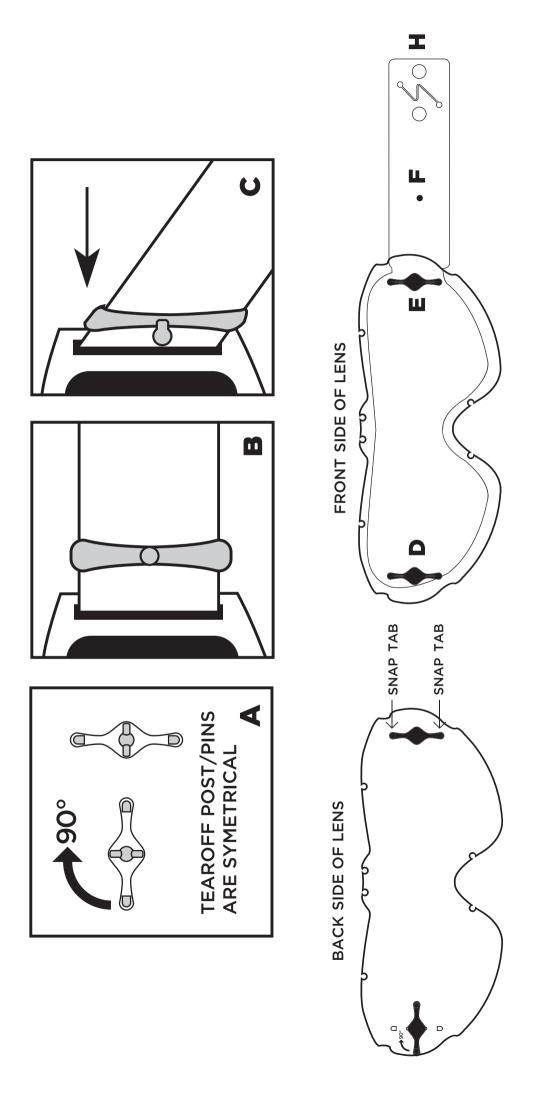

WORKS TEAR-OFFS

INSTALL AND REMOVE TEAR OFF PINS:


(A) To install hold pin 90° to center hole in lens. Insert pin and twist 90°. Make sure that top and bottom posts are snapped into the lens. To remove, apply pressure on the snapped-in pins from the back side of the lens. Once the pins have released, rotate the pin 90° and pull out.

INSTALL TEAR OFF POST:

(B) Position the tear off tab post over the strap on the rider's left side. when correctly installed, the tip of the tear off tab post (C) points away from the goggle frame.

INSTALL TEAF OFFS:

By snapping the hole opposite the tear off pull tab onto the tear off retention post (D), making sure the pull tab is on the rider's left. Then snap the other side onto the remaining tear off post (E). Snap the tear off hole (F) of the bottom tear off over the tear off tab post (B). Then fold back the tear off lens slot (H) over tear off post (B) and snap the next tear off's hole (F) over the tear off tab post (B). Continue this procedure until all tear off lenses are installed.

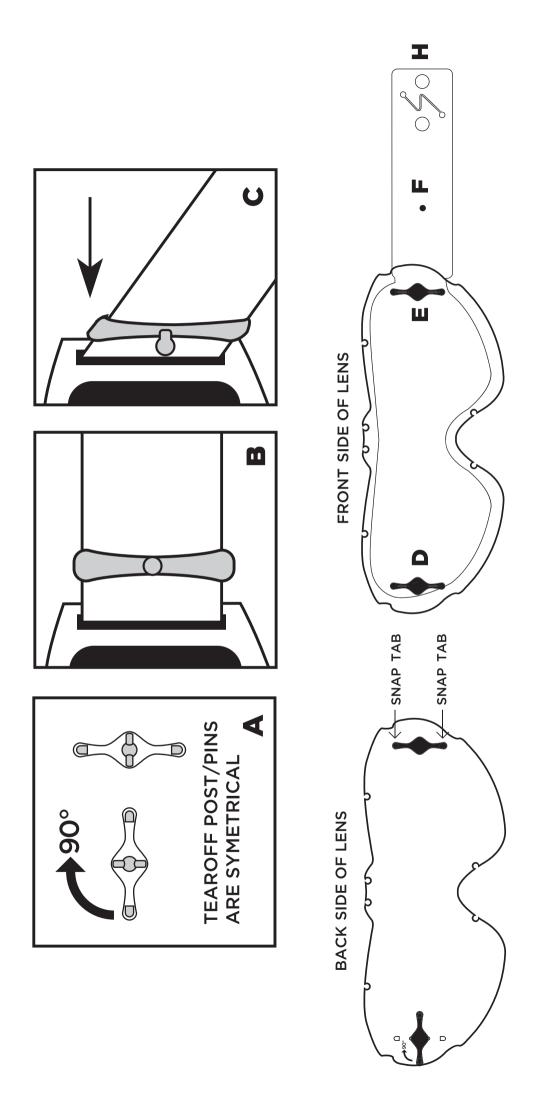

Check out the collection of motorcycle riding gear we offer.