



Advice for correct fitting of the kit: Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

1.

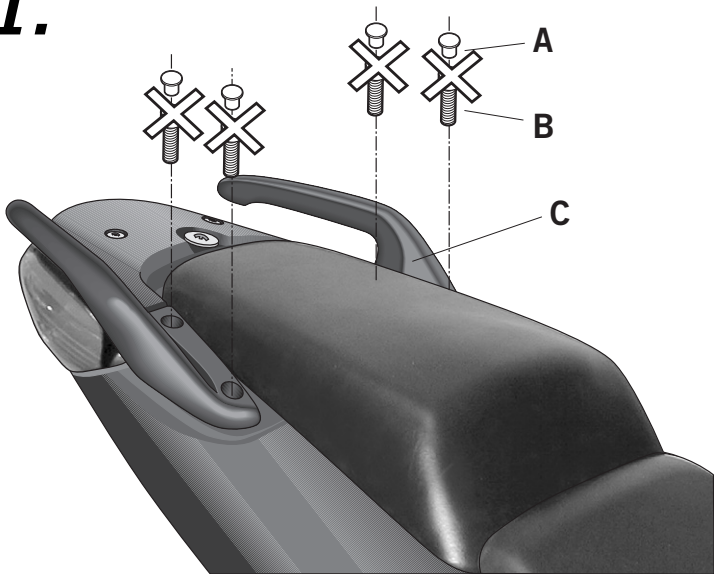

Take apart and reject the handle lids (A).
Take apart and reject the screws (B) from the back handles (C).

2.

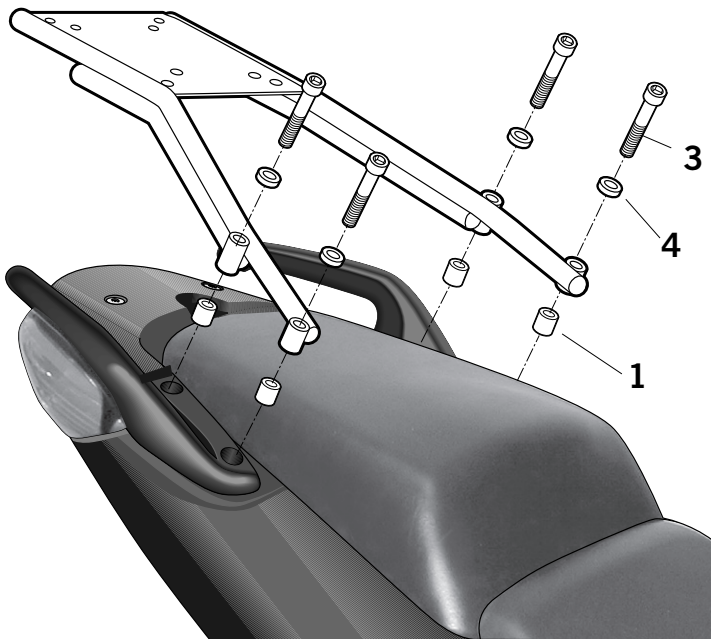

Place the separators (1).
Assemble the KIT TOP support (2) with the separators (1), screws (3) and washers (4).

PARTS :

Pos.	Ref.	Cant.	
1	260954	4	Distanciador Ø14 x Ø9 x 16 - Spacer
2	261281	1	KIT TOP
3	304173	4	Tornillo M8 x 75 DIN 7380 - Screw
4	303020	4	Arandela Ø8 - Washer

HONDA CBF 1000 '10
HOCB10ST
KIT TOPMASTER

SHAD

Find out more about luggage systems & saddlebags we have.