



Proper kit assembly: do not tighten the screws until ascertaining that the kit is properly positioned and aligned.

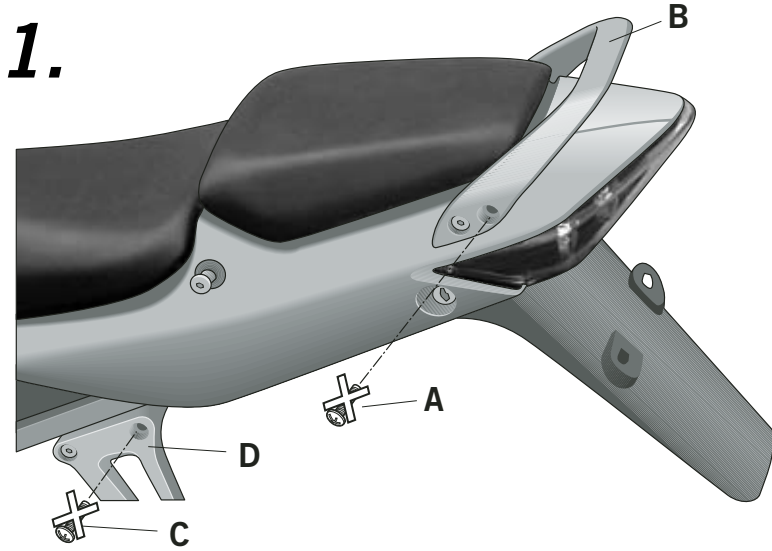

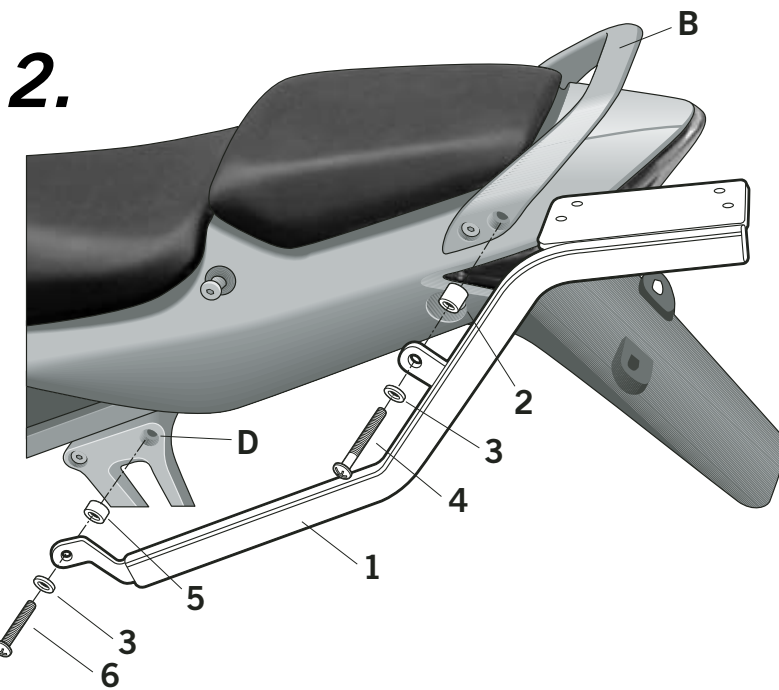





Disassemble and reject the screws (A) of the rear handle (B).
Disassemble and reject the screws (C) of the rear footrest (D).

Assemble the KIT TOP supports (1), fix them with the long spacing screws (2), the washers (3) and the screws (4) in the rear handle area (B).
Repeat the process in the rear footrest area (D), with the short spacing screws (5), the washers (3) and the screws (6).



PARTS :

Pos.	Ref.		Cant.	
1	260955		1	Top right support
	260956		1	Top left support
2	260596		2	Ø16 Ø9 x 20 - Spacer
3	303020		4	Ø8 - Washer
4	304171		2	M8 x 65 DIN 7380 - Screw
5	260213		2	Ø16 Ø9 x 12 - Spacer
6	304036		2	M8 x 45 DIN 7380 - Screw - Schraube

HONDA CBR 125/150 '04
HOCB14ST
KIT TOPMASTER



Find out more about luggage systems & saddlebags we have.