


SHAD

HONDA CB 500 X '16

KIT TOP HOCX56ST

1 261986 x1 →
261987 x1 ←

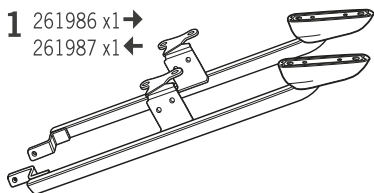

2 260417 x2
Ø16 Ø9 x 16



3 303020 x2
Ø8



4 304036 x2
M8 x 45 Din 7380



5 260648 x2
Ø16 Ø9 x 5



6 304081 x4
M8 x 20 Din 7380



7 303018 x4
Ø8



WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

