


SHAD

HONDA SERIES 700/750 S/X '16

HONT75ST

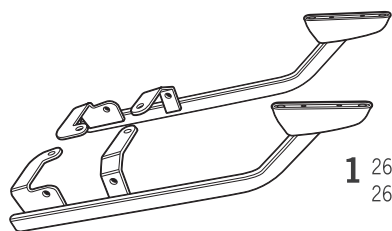

1 261945 x1 →
261946 x1 ←



2 304081 x4
M8 x 20 Din 7380



3 303018 x4
Ø8

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

