



HONDA CMX 500 REBEL '17-'18







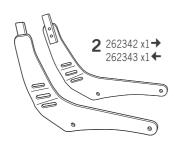



3 304211 x4 M8 x 15 DIN 933



4 303020 x8



5 304053 x4 M8 x 30 DIN 7380



6 303045 x8



Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

ATTENTION: For a full equip assembly, mount the 3p syste m after the Sissy Bar.

