


KIT TOPMASTER

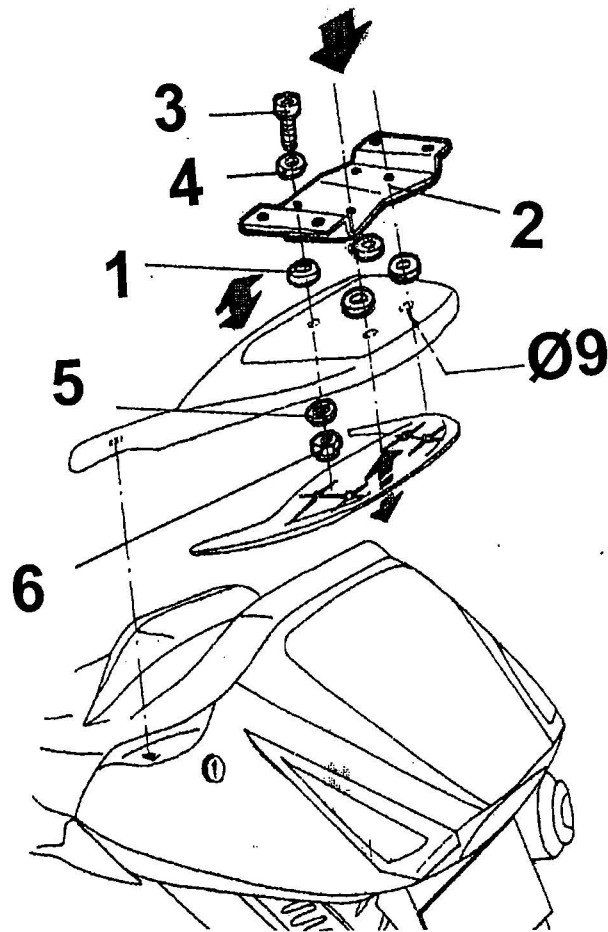

TOPMASTER INSTALLATION

Open the seat, take the motorcycle's original radiator grille off. Remove the motorcycle's original grille hudcap, make 4 holes as shown on the lower part of the support with an Ø9 drill. Next position the 4 distancers (1), as shown in the diagram and proceed to put the grill (2) in place, screws it with the screws (3), washers (4) and (5) and wind nuts (6). Finish the assembly following the instructions in the general booklet provided with the KIT TOP MASTER

POS.	REF.	PARTS	CANT.
1	260648 (DIST. Ø16XØ9X5)		4
2	260662 (KIT TOP)		1
3	304075 (M8x35 DIN 912)		4
4	303020 (Ø8)		4
5	303020 (Ø8)		4
6	302024 (M8)		4

