


SHAD


HONDA X-ADV 750 '21
HOXD714P

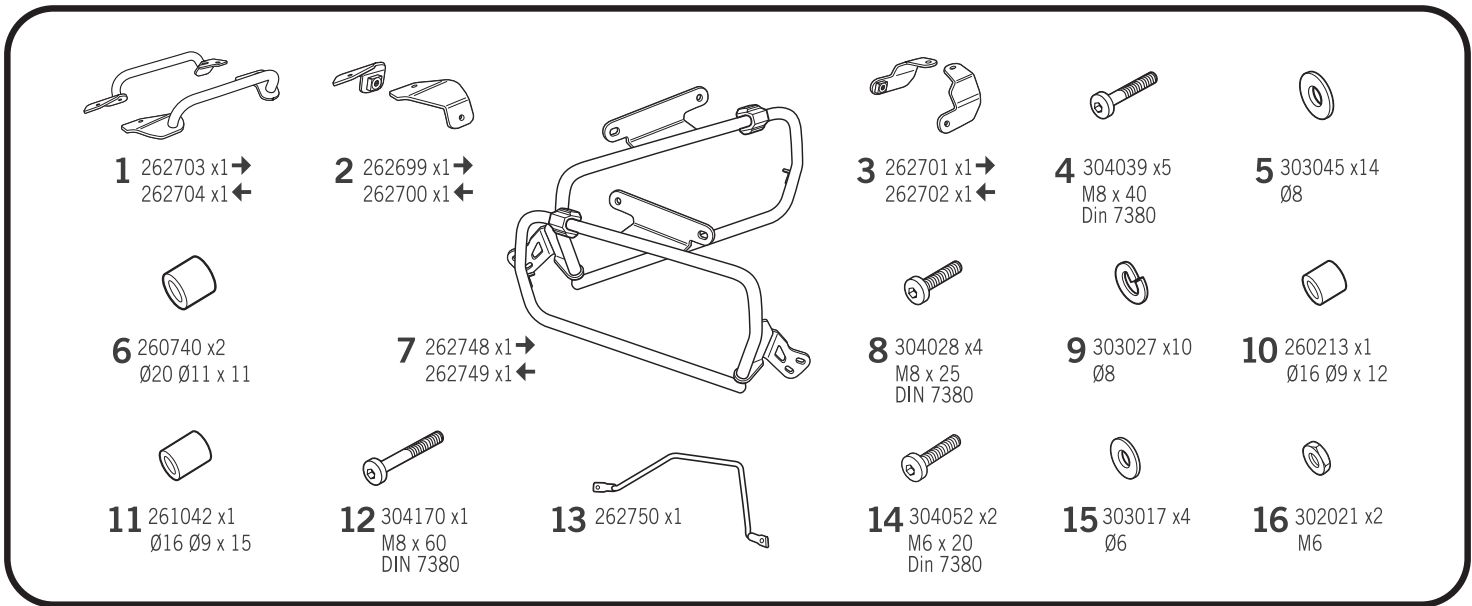

! WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

ATTENTION: For a full equip assembly, mount the 4P System after the top master.

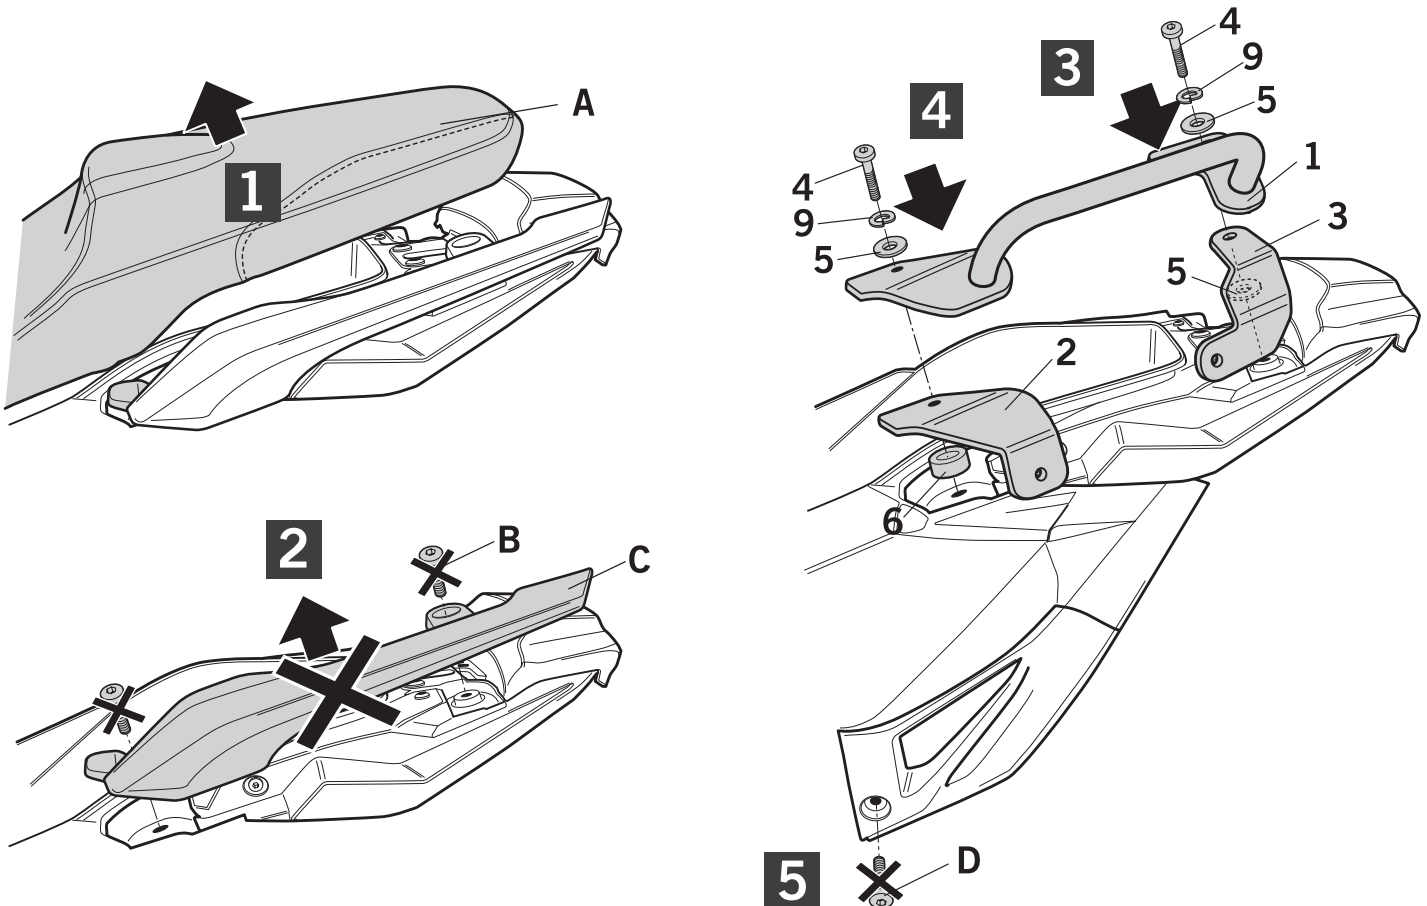

IMPORTANT: Based on European models.

