



Advice for correct fitting of the kit: Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

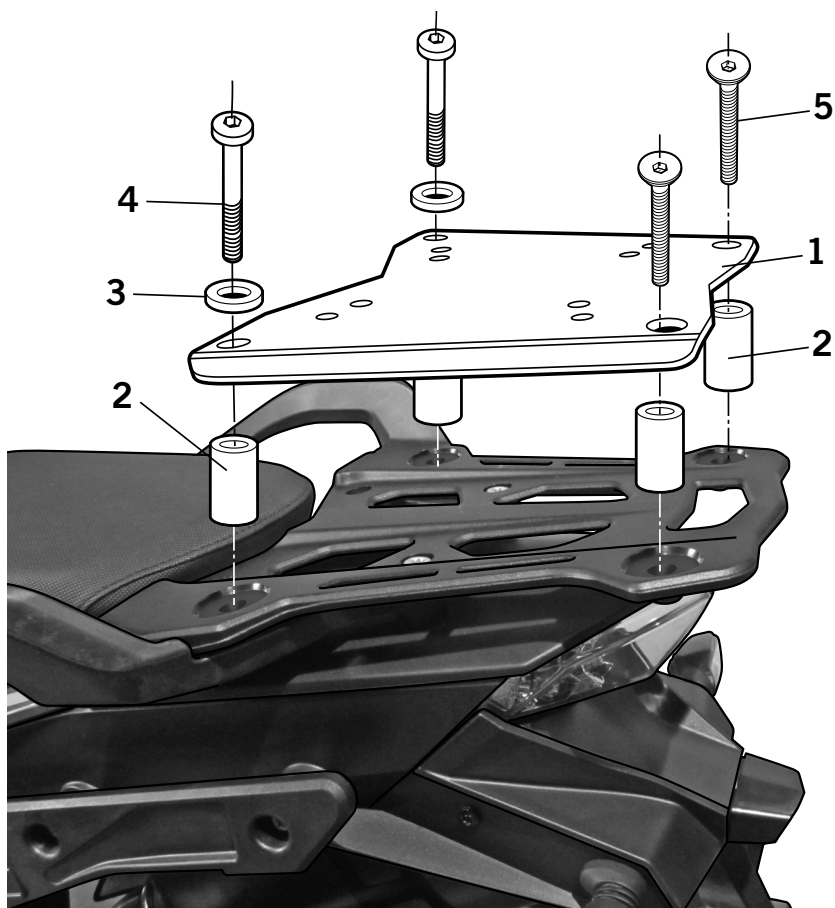

Assemble the KIT TOP support (1) by means of the spacers (2), washers (3) and the screws (4); and in the rear zone, by means of the spacers (2) and the screws (5).

PARTS:

Pos.	Ref.		Cant.	
1	261630		1	Kit Topmaster
2	261072		4	Ø20 Ø11 x 32 - Spacer
3	303020		2	Ø8 - Washer
4	304170		2	M8 x 60 7380 - Screw
5	304032		2	M8 x 50 DIN 7991 - Screw

KTM ADVENTURE 1190 '14
KODV14ST
KIT TOPMASTER

SHAD

Discover other luggage systems & saddlebags on our website.