


SHAD

KTM ADVENTURE 1050 / 1090 '14-'17

ADVENTURE 1190 '14-'16

SUPER ADVENTURE 1290 '14-'17

KIT TOP K0DV17ST



1 262139 x1




2 260538 x2
Ø16 Ø9 x 9



3 260983 x2
Ø14 Ø9 x 29



4 303045 x2
Ø8



5 304123 x2
M8 x 85
Din 912



6 260817 x2
Ø14 Ø9 x 27



7 303025 x2
Ø10






8 304331 x2
M8 x 75
Din 7991

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

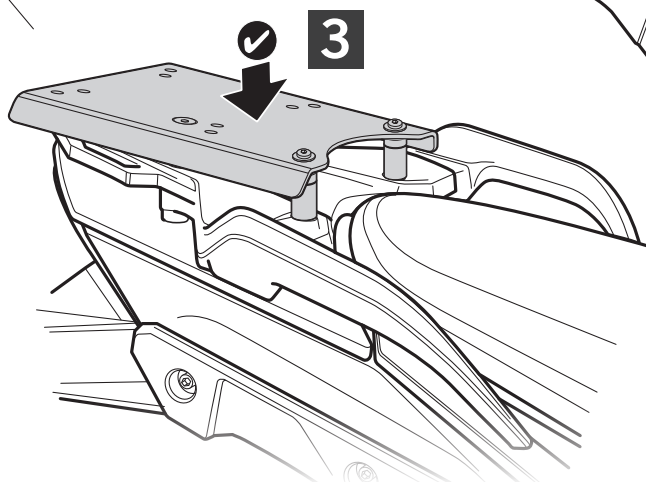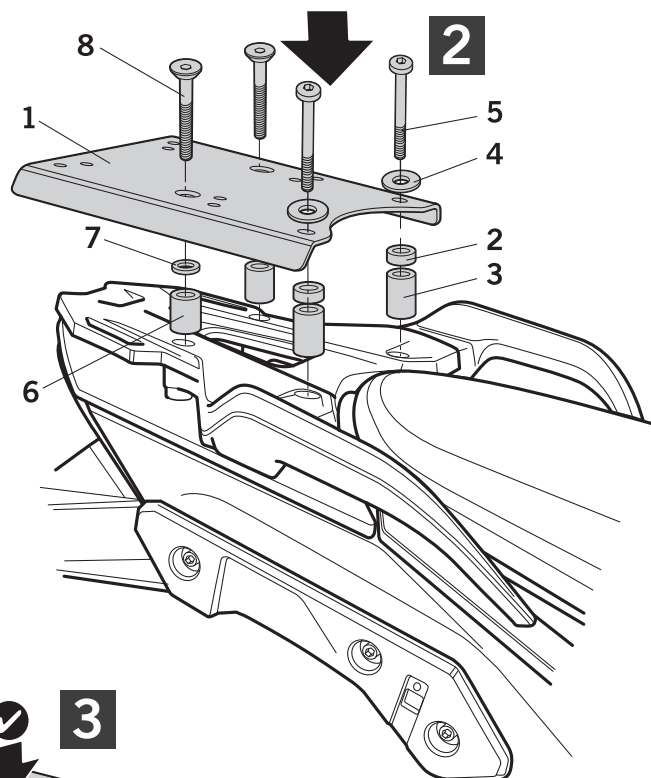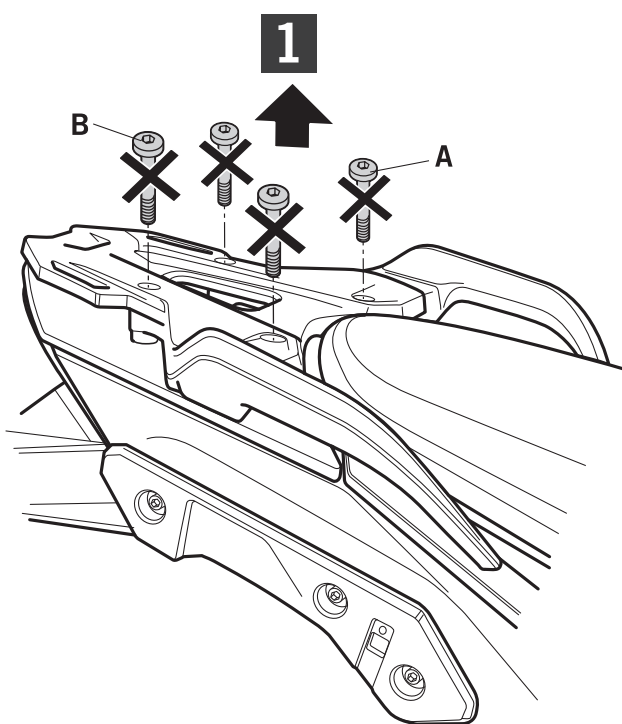

Find out more about luggage systems & saddlebags we have.