



GB Advice for correct fitting of the kit: Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

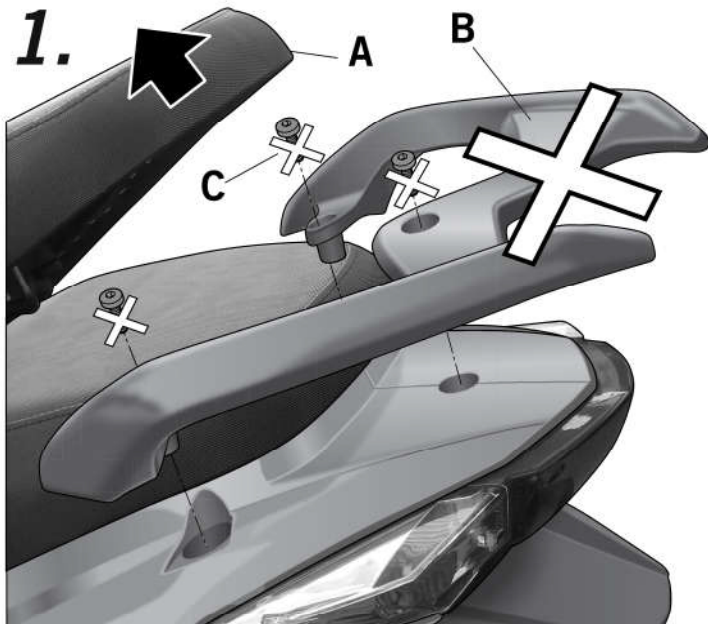

GB Open the rear seat (A), disassemble and remove the original handrail (B) and the screws (C).

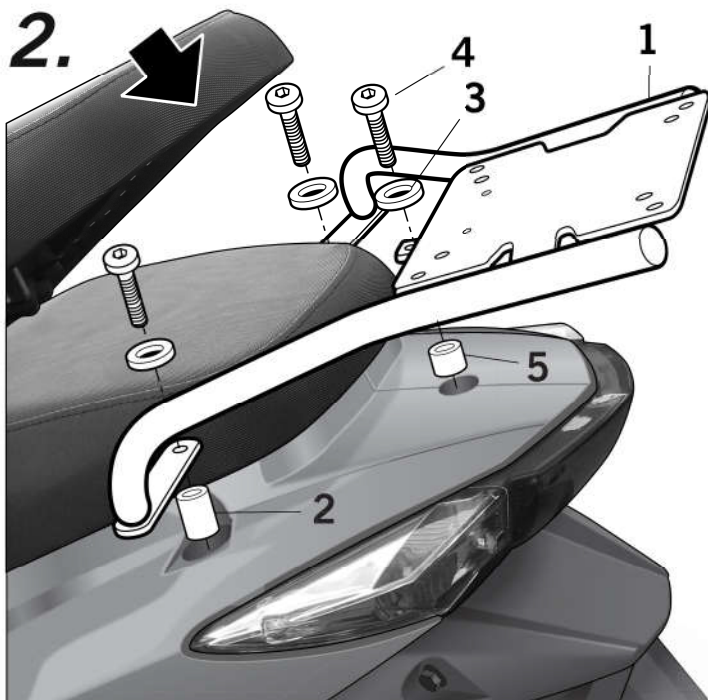

GB Place the KIT TOP (1) support, by means of the spacers (2), the washers (3) and the nuts (4), and in the rear area by means of the spacer (5), the washer (3) and the nut (4). Close the seat (A).

PARTS

Pos.	Ref.		Cant.	
1	261397		1	SOPORTE KIT TOP
2	260712		2	r Ø20 Ø11 X 22 - Spacer
3	303020		3	Ø8 - Washer
4	304039		3	M8 x 40 DIN 7380 - Screw
5	260760		1	Ø20 Ø11 X 16 - Spacer