


SHAD

KTM SUPER ADVENTURE 1290 '14-'20
KOSP194P

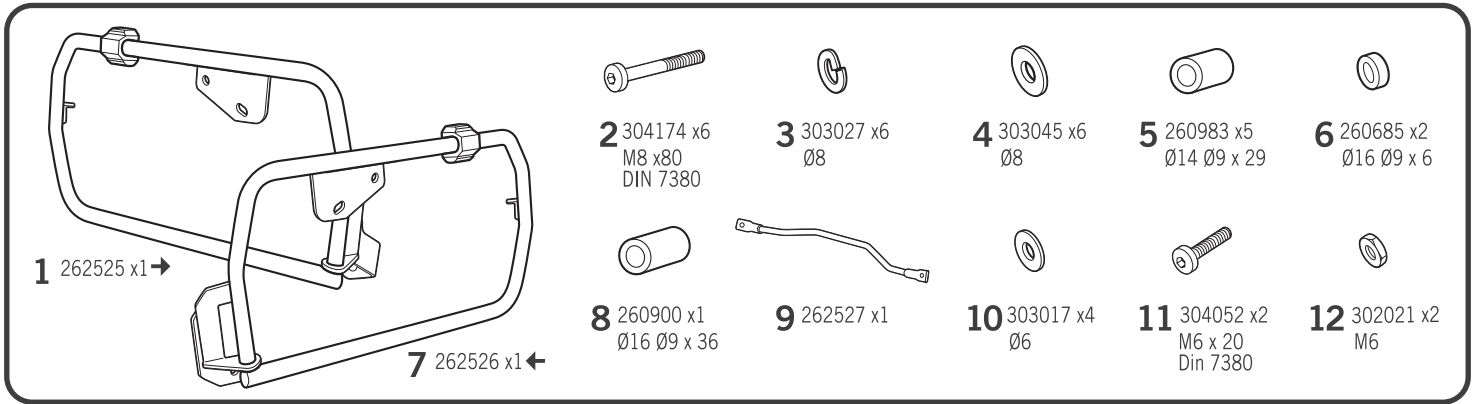

WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

