



**Proper kit assembly:** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned. N.B. When assembling KIT TOP support and the bike already has the KIT FULL support (SOBN60SF or SOBN21SF) attached, the spacers (5) and the screws (4) must be in position. N.B. If the bike does not have KIT FULL (SOBN60SF or SOBN21SF) attached keep spacers (5) and screws (4) for any future assembly of KIT FULL.

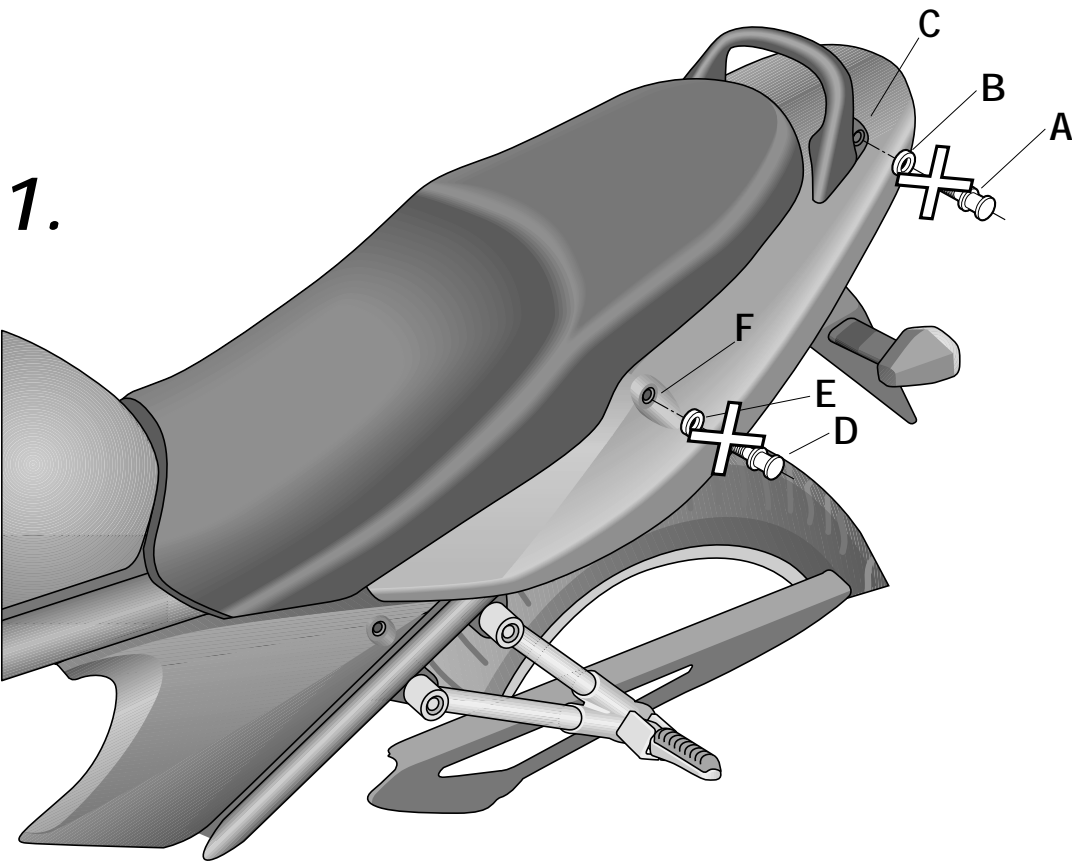


Dismantle and remove screws (A) and washers (B) in area (C).  
Dismantle and remove screws (D) and washers (E) in area (F).

SUZUKI GSF 600'00/1200S'01 BANDIT  
SOBN60ST  
KIT TOPMASTER

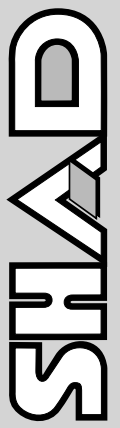




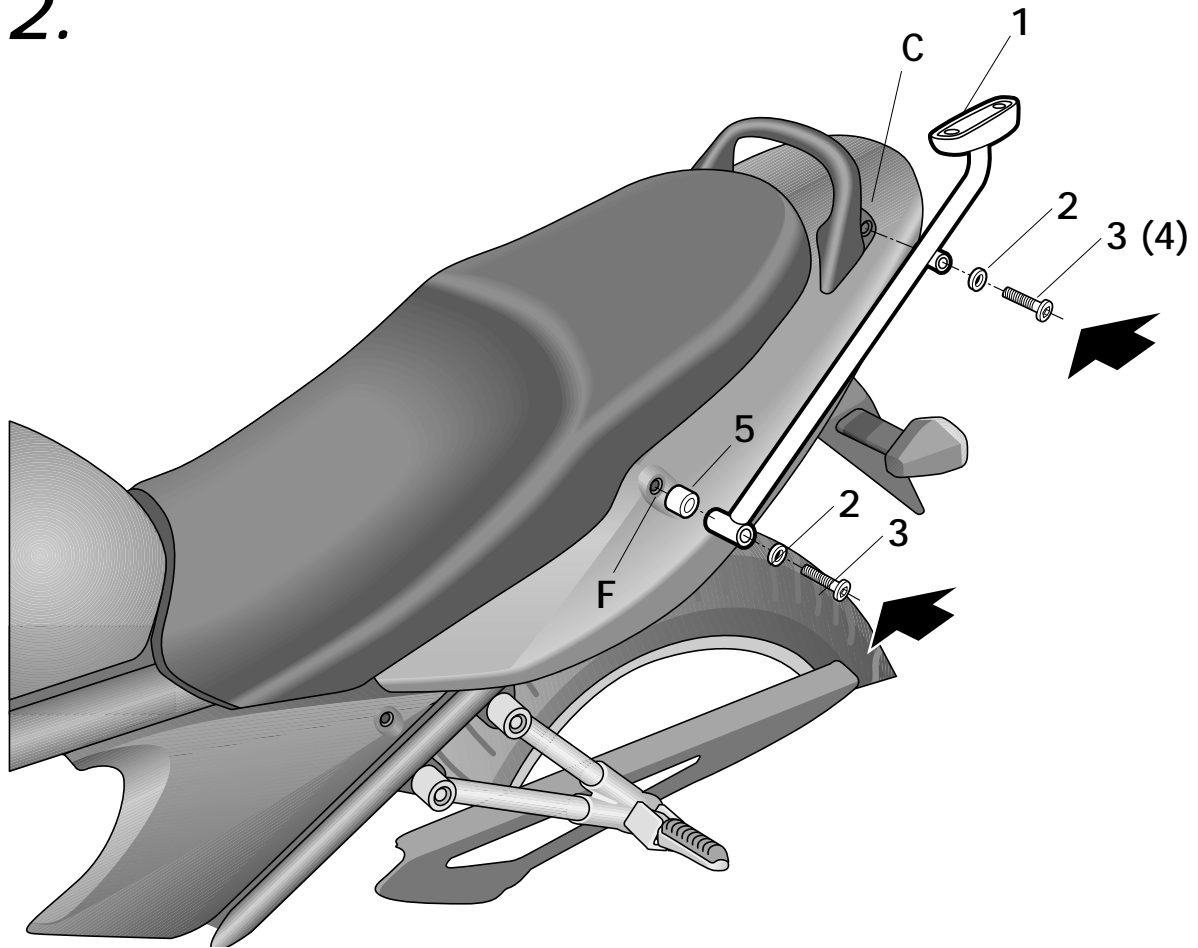


2.



Assemble KIT TOP supports (1) in area (C) using washers (2) and screws (3). N.B. To assemble this with KIT FULL (SOBN60SF or SOBN21SF) attached, instead of using screws (3) use screws (4). And in area (F) using washers (2) and screws (3). N.B. To assemble this kit with KIT FULL (SOBN60SF or SOBN21SF) attached use spacers (5).

PARTS:

Pos.	Ref.		Cant.	
1	260741		1	Top right support
	260742		1	Top left support
2	303020		4	Ø8 - Washer -
3	304173		4	M8 x 75 DIN 7380 - Screw
4	304123		2	M8 x 85 DIN 912 - Screw
5	260686		2	ø16 ø9 x 8 - Spacer