

SHAD

SUZUKI BURGMAN 125/200 '07

KIT RESPALDO SOBR17RV




1 261029 x2
Ø20 Ø10 x 15



2 261772 x1



3 304032 x2
M8 x 50 Din 7991

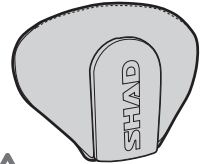


! NOT INCLUDED

! WARNING!

GB

To complete the set, remember to purchase the backrest with your preferred color. Do not fully tighten. Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

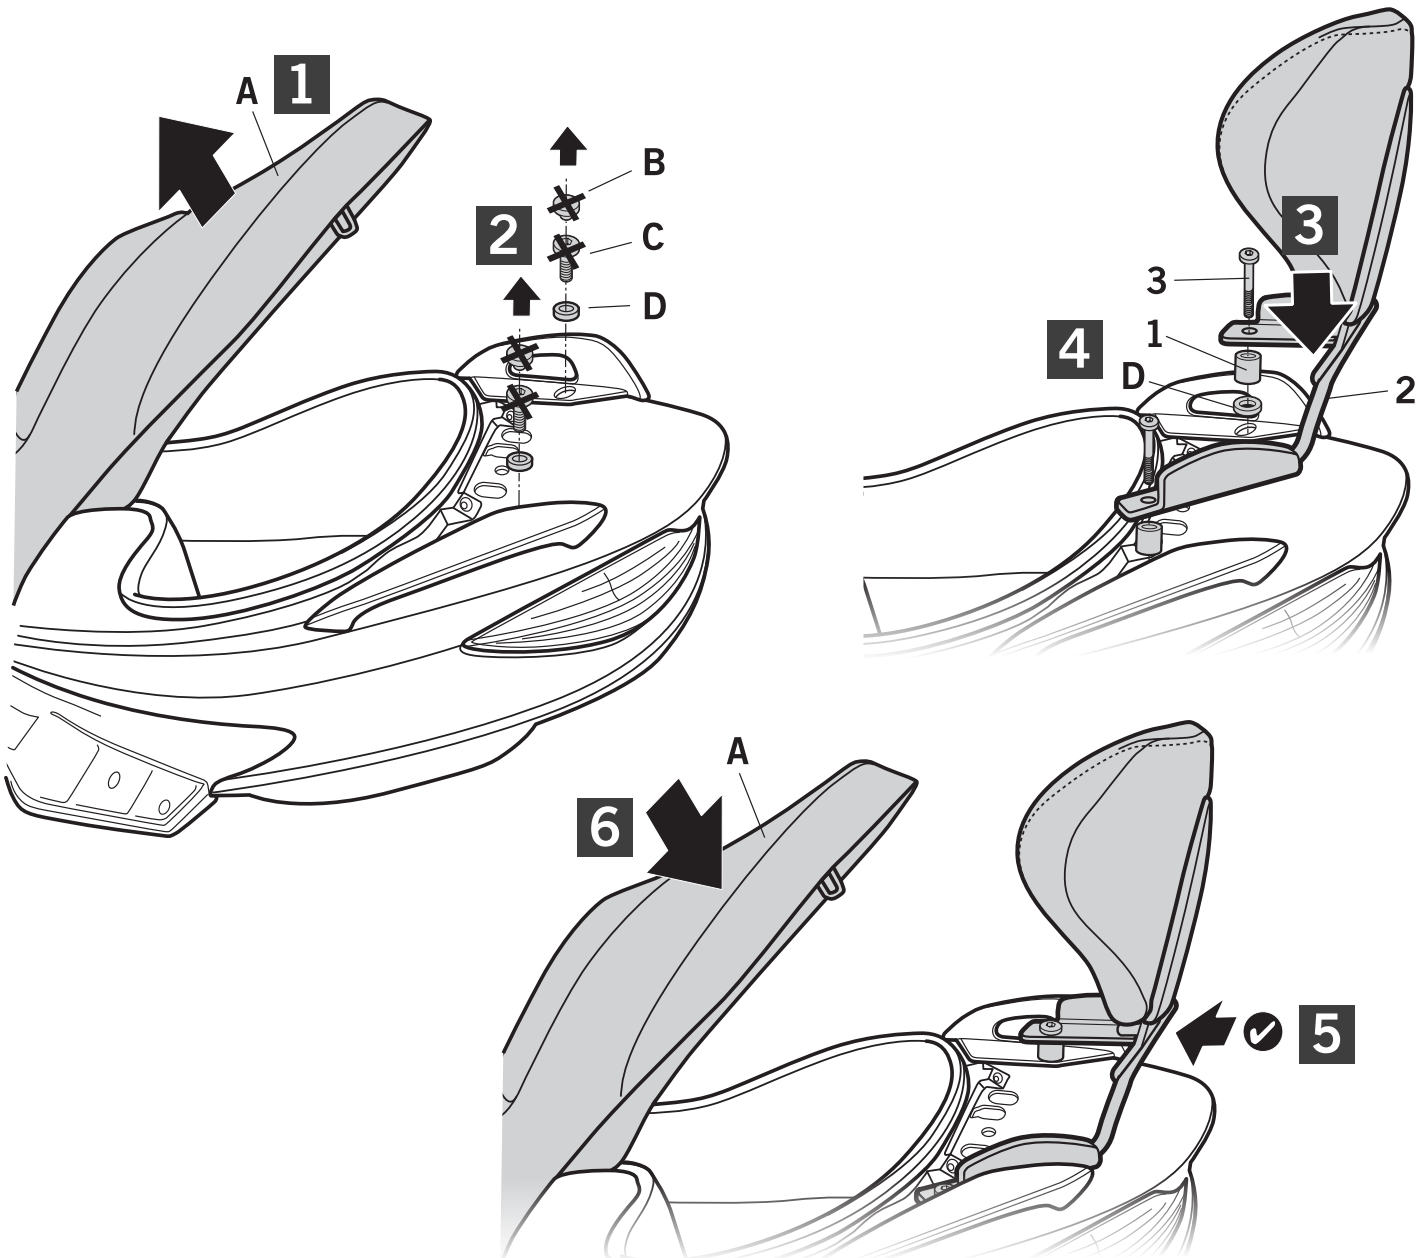

Find out more about seat & backrests we have.