


KIT TOPMASTER

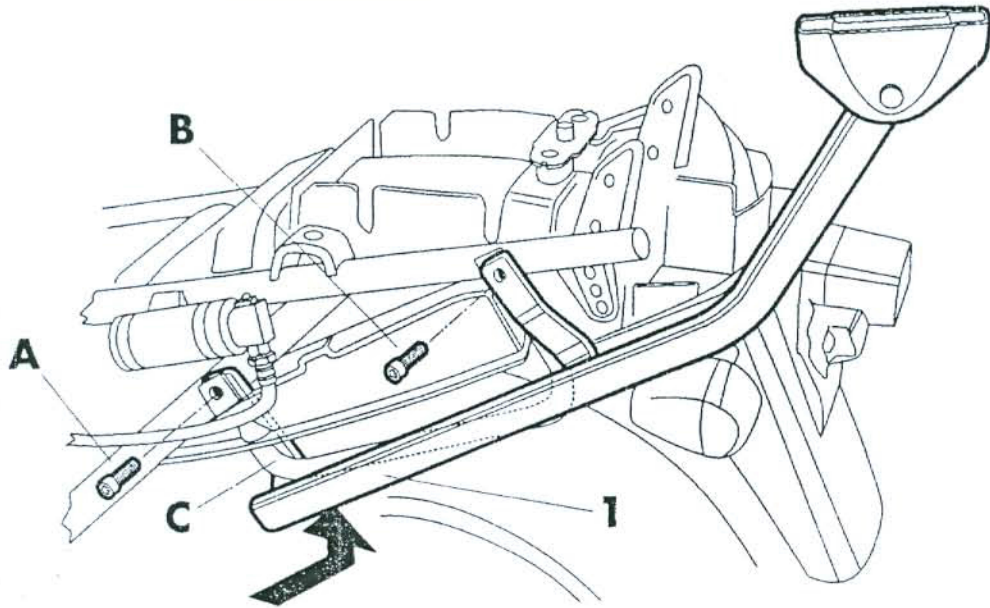

Ⓜ MONTAGE TOPMASTER

Take off the seat, pillion grip, indicators and rear and side fairings together. Remove the screws (A) and (B) securing the side grips (C) on the chassis. Remove the part (C) and fit it together with the part (1), as shown in the diagram, bearing in mind that the front anchorage point of the part (1) goes underneath the part (C) and the rear anchorage point of the part (1) goes over the part (C). Fit both parts together and secure the assembly by means of the screws (A) and (B). Put back the grip, seat and rear fairing.

Complete the assembly according to the instructions in the booklet supplied with the TOPMASTER KIT.

PARTS

Pos.	Ref.	Cant.
1	260381	1
	260382	1