


## **UM RENEGADE SCRAMBLER 125 '18**

KIT TOP U0SC18ST

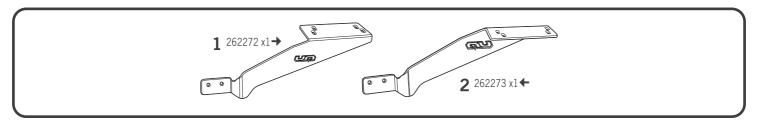



## **WARNING!**

(GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

