



1.

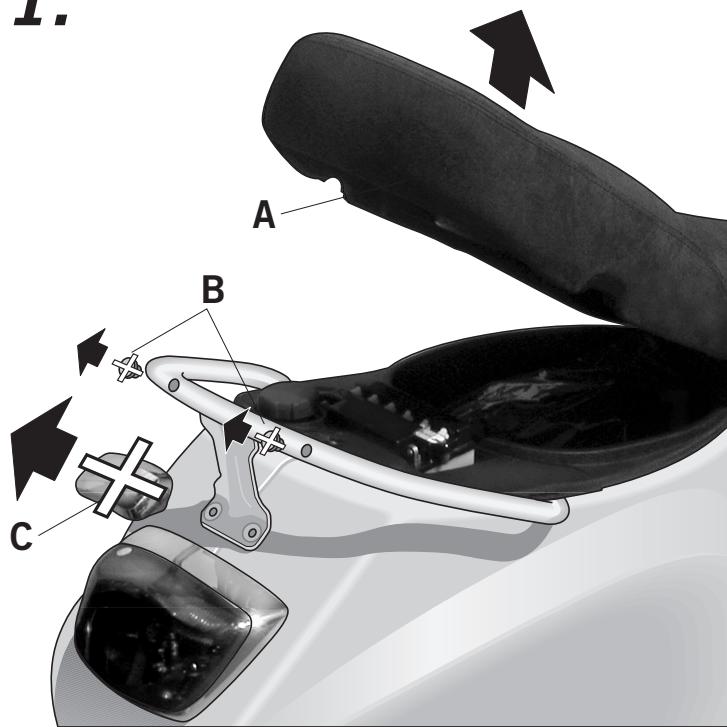

Open the seat (A).
Dismantle and put aside the stopper (B) of the back handle.
Dismantle and put aside el back wheel cover (C).

2.

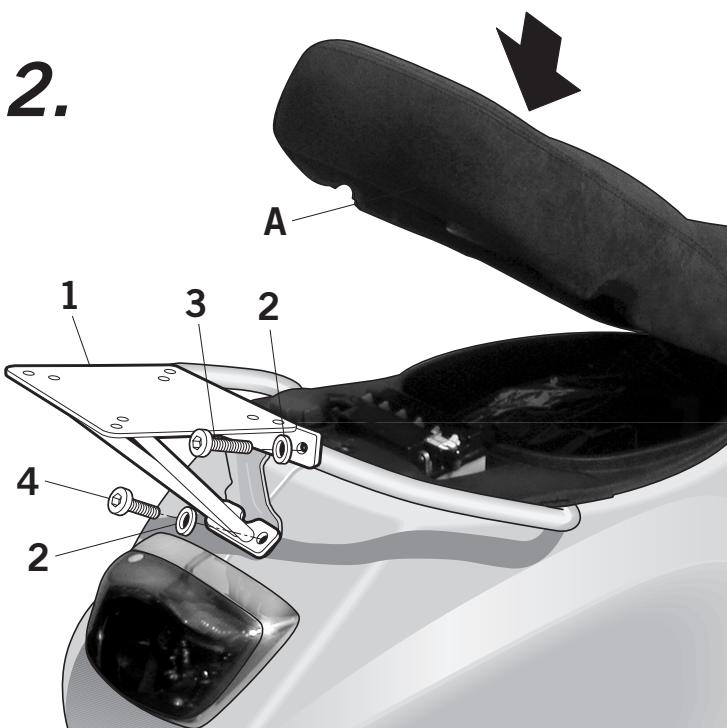

Assemble the KIT TOP support (1) in top area using the washers (2) and the screws (3). And in low area using the washers (2) and the screws (4).
Close the seat (A).

PARTS :

Pos.	Ref.	Cant.	
1		260484	1
			KIT TOP
2		303000	4
			Ø6 - Washer
3		304057	2
			M6 x 25 DIN 912 - Screw
4		304052	2
			M6 x 20 DIN 7380 - Screw