

SHAD

VOGE 300R '20
VOVR30IF



1 262685 x1



2 304201 x4
M6 x 40 DIN 7380



3 303017 x8
Ø6



4 260213 x4
Ø16 Ø9 x 12



5 302021 x4
M6




7 304053 x6
M8 x 30 Din 7380



8 303045 x10
Ø8



9 302024 x4
M8

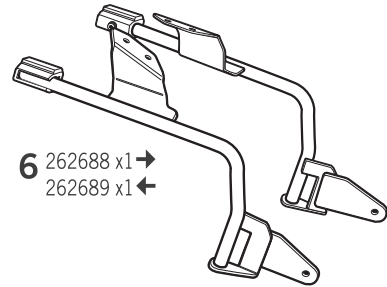


6 262688 x1 →
262689 x1 ←

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

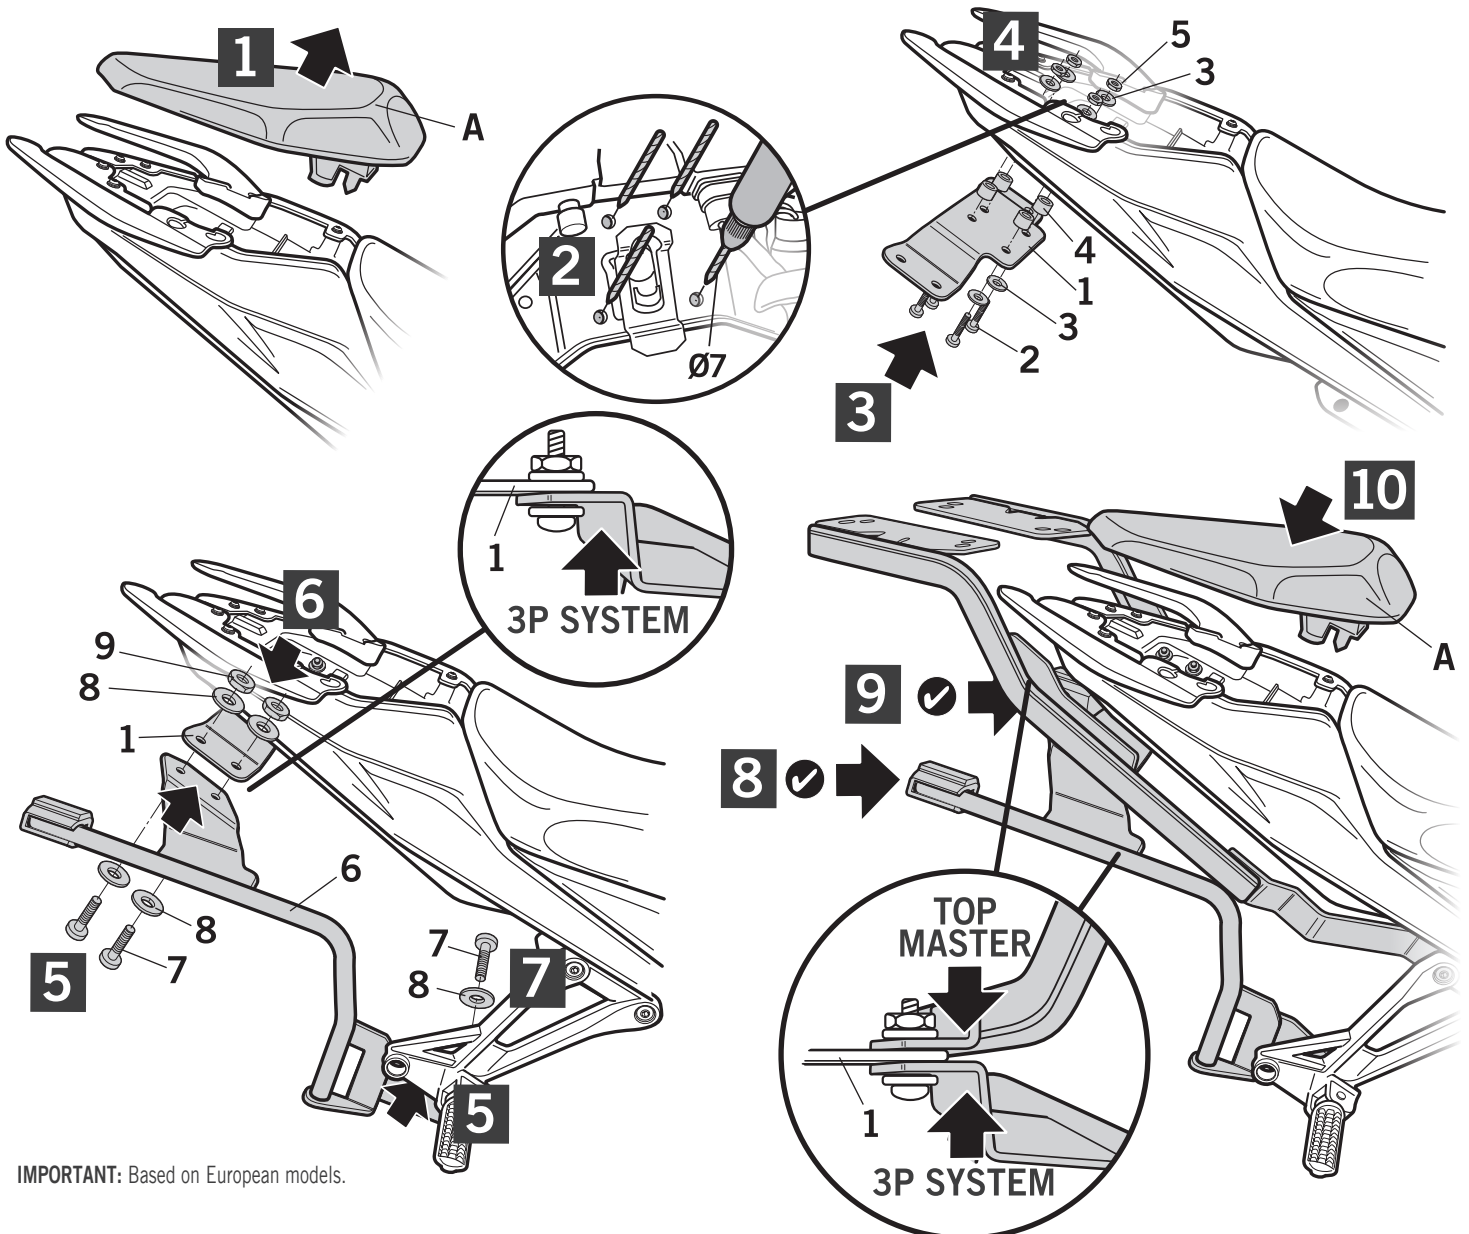

IMPORTANT: Based on European models.

Learn more about motorcycle luggage systems and saddlebags we have.