


PIAGGIO X-9 250 '01 - AMALFI 180 '03
KIT TOPMASTER


V0X20T

1.

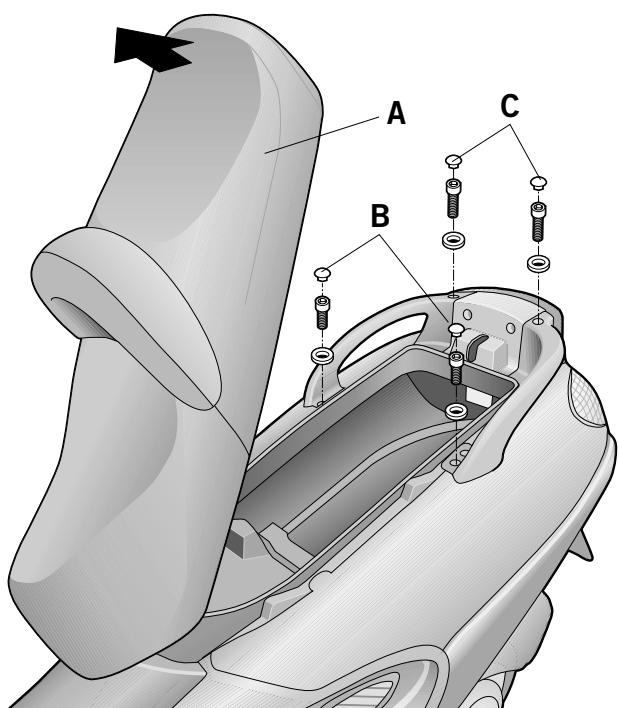


Open the seat (A).
 Loosen and remove the covers (B) and (C).

2.

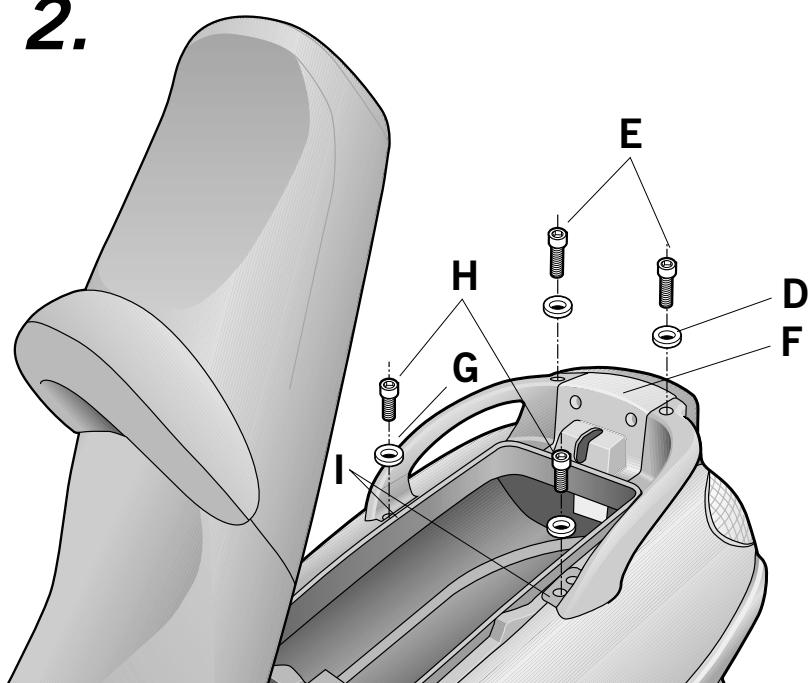

Loosen and remove the washers (D) and the screws (E) in the zone (F), and the washers (G) and the screws (H) in the zone (I).

3.

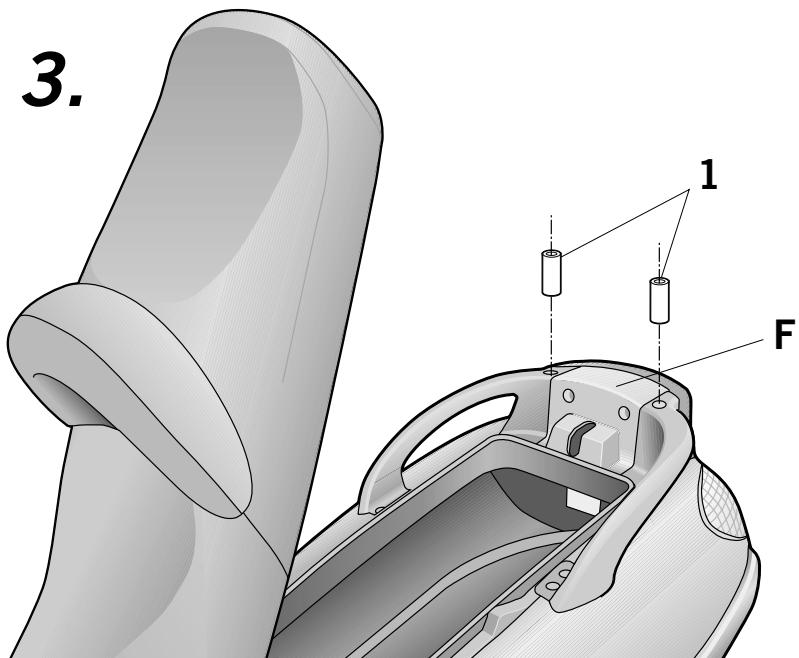

Place the spacers (1) in the zone (F).

SHAD

SHAD


SHAD

SHAD

KIT TOPMASTER


PIAGGIO X-9 250 '01 - AMALFI 180 '03

4.

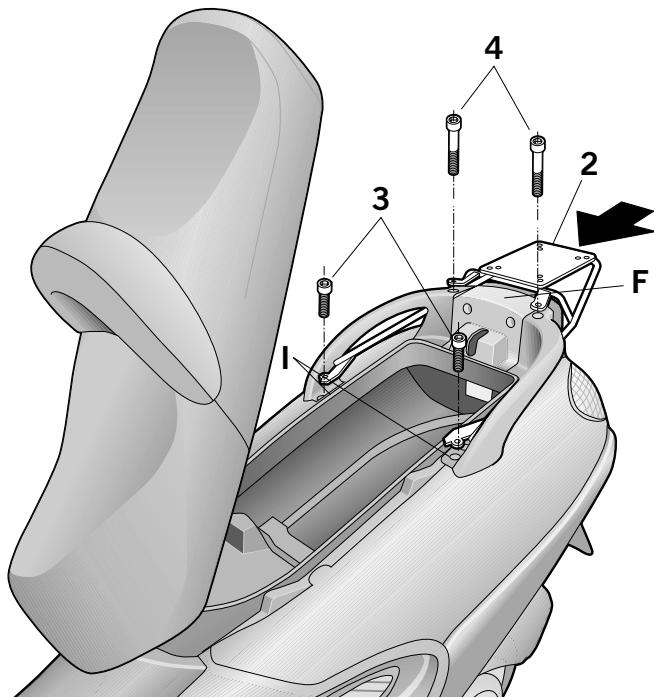

Assemble the KIT TOP (2) with the screws (3) in the zone (I), and screws (4) in the zone (F).

5.

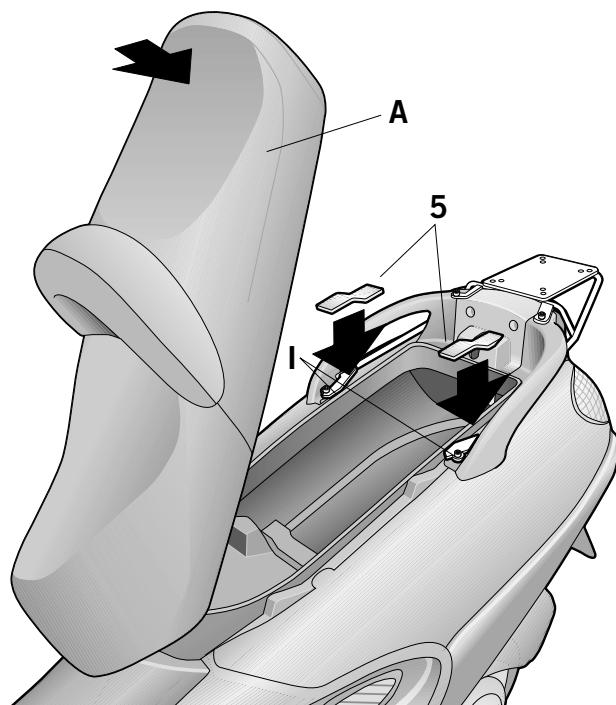

Place the foam protection (5) in the zone (I). Close the seat (A).

PARTS :

Pos.	Ref.	Cant.	
1	260611	2	ø13 x 68 - Spacer - Entre-toise
2	260612	1	Kit top
3	304061	2	M6 x 60 DIN 7991 - Screw
4	304153	2	M6 x 110 DIN 912 - Screw
5	260291	2	Adhesive foam

Find out more about luggage systems & saddlebags we have.