


SHAD

BMW C 650GT '12 KIT TOP WOCG62ST

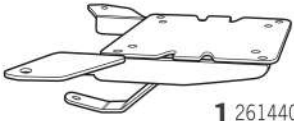

1 261440 x1



2 303017 x2
Ø6



3 304012 x2
M6 x 16 Din 912



4 260747 x1
Ø20 Ø9 x 13



5 303020 x1
Ø8



6 304272 x1
M8 x 35 Din 7380



7 260648 x1
Ø16 Ø9 x 5

! WARNING!

Ⓒ Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

