


SHAD


BMW G 310 R '17 KIT TOP WOG317ST

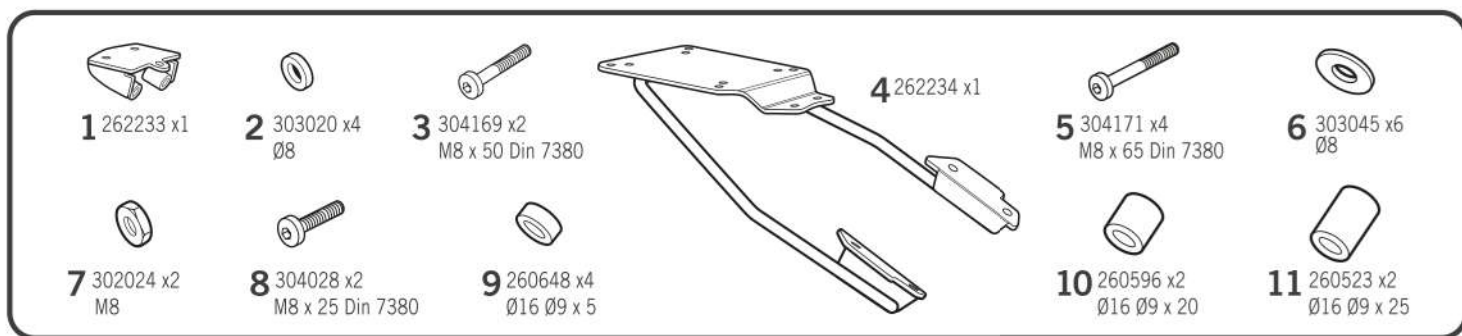


WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

ATTENTION: For a full equip assembly, mount the 3p system before the top master.

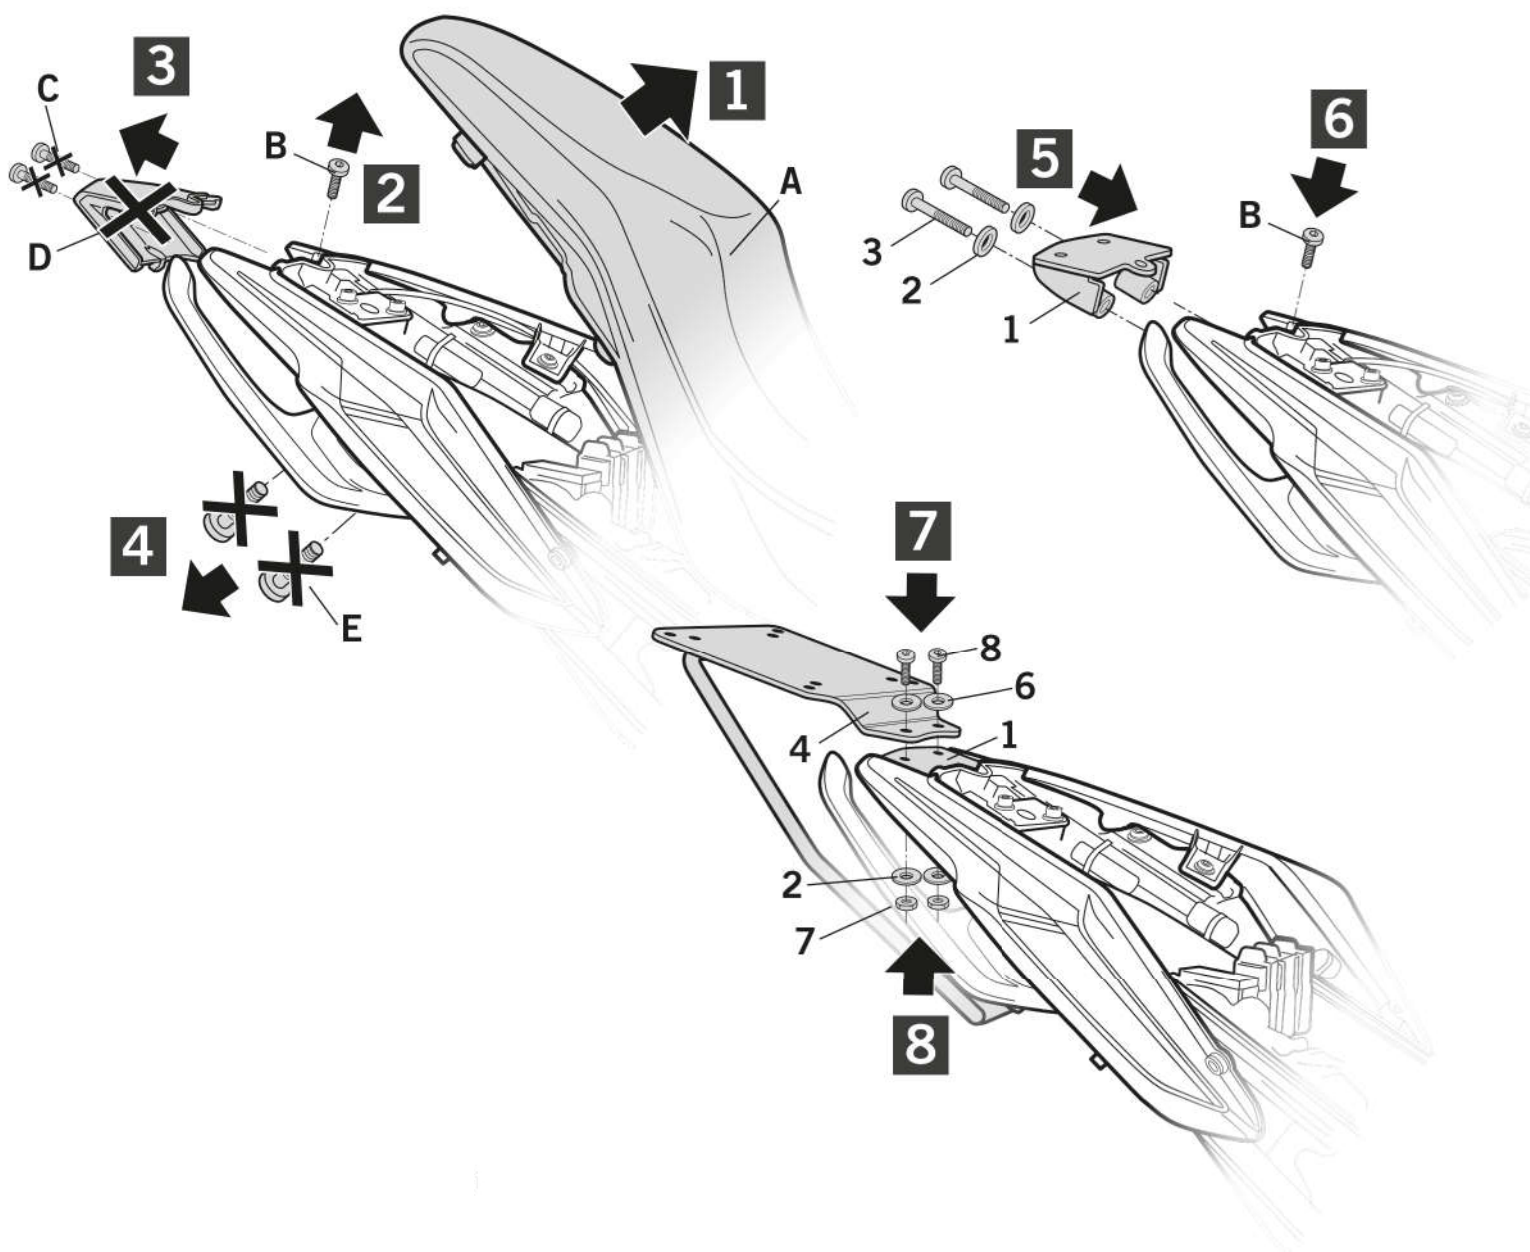

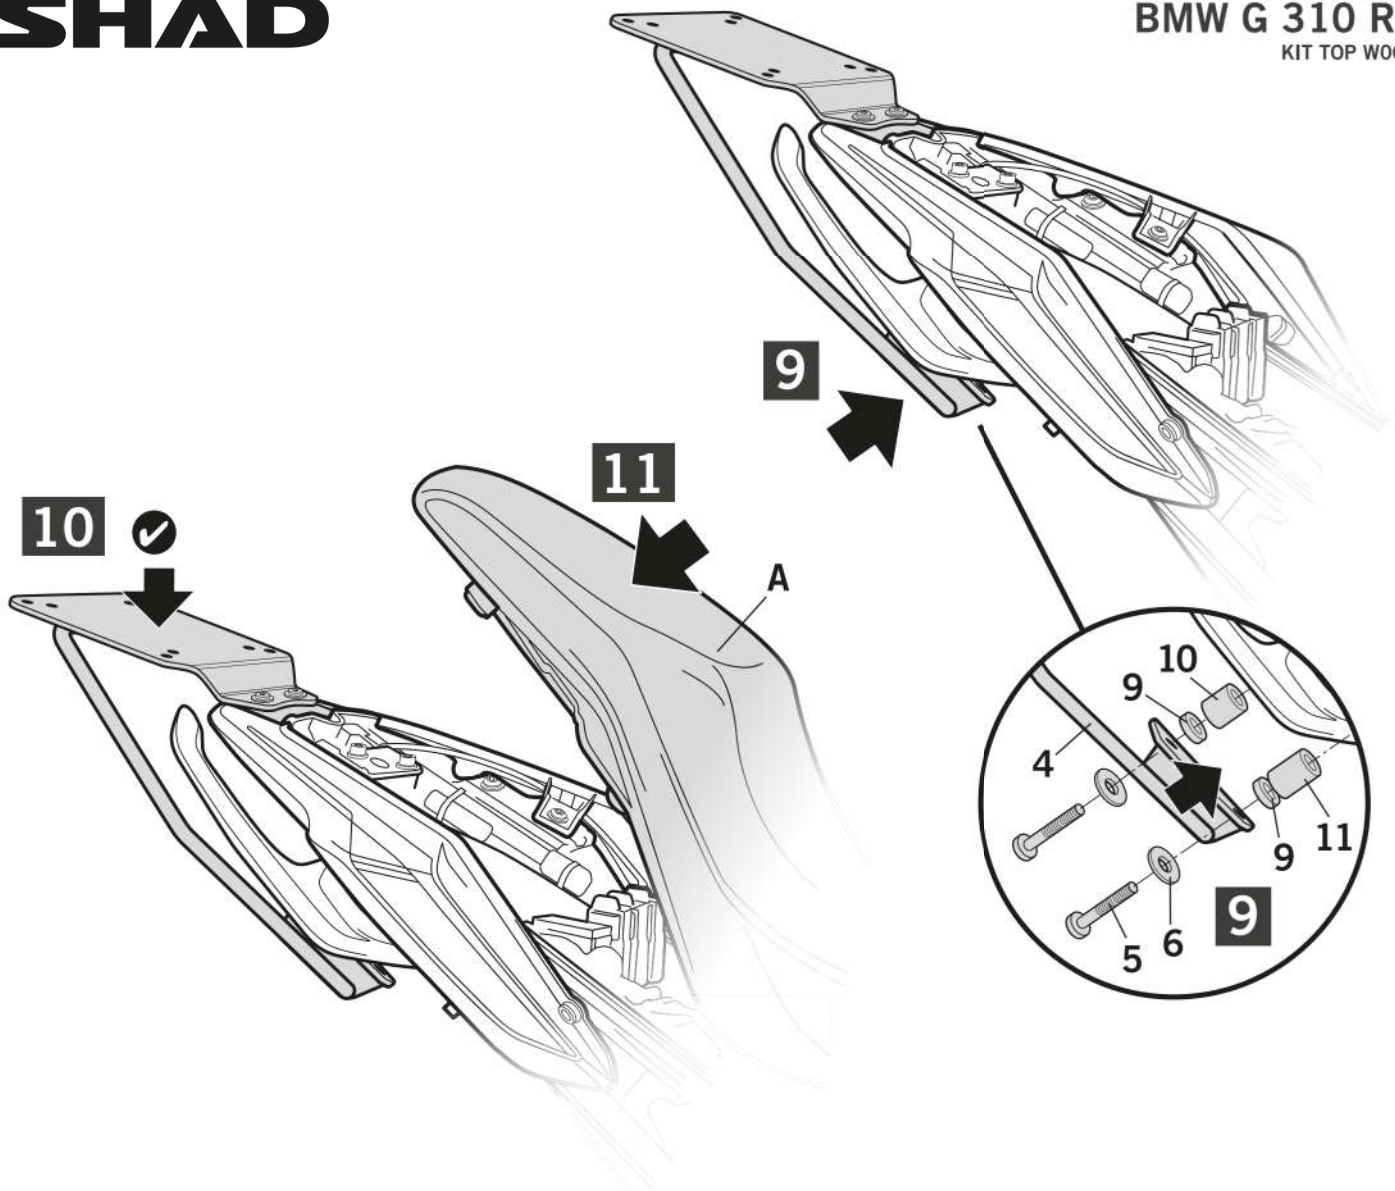

TOP MASTER
+
3P SYSTEM

