


Advice for correct fitting of the kit: Do not fully tighten the screws until sure that the kit is correctly positioned and aligned.

Note: If your motorbike already has the full kit (YOFZ11SF), fit the top kit (YOFZ11ST), according to the instructions, discarding the spacers (1).

Remove the seat (A) (fig. 1). Remove and discard the side grip bars (B), via the screws (C)

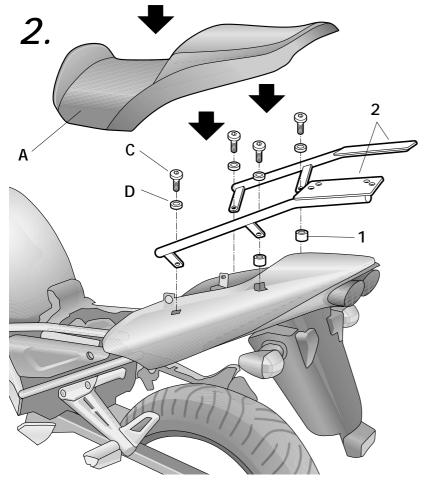

Position the spacers (1). Position the top kit supports (2), using the screws (C). Fit the seat (A).

## PARTS:

7711170				
Pos.	Ref.		Cant.	
1	260648	9	2	ø16 x ø9 x5 - <i>Spacer</i>
2	260738		1	Right top kit support
	260739		1	Left top kit support