

Copyright © 2020 by Big Bike Parts, Inc. No part of this instruction sheet may be reproduced without the written permission of Big Bike Parts, Inc.

PART NO. 41-187

FRONT FENDER AMBER LED

FITMENT: CAN-AM SPYDER/RYSKER 2019-NEWER

TOOLS NEEDED:	DRILL	5/16" DRILL BIT	METRIC SOCKET SET	WIRE CUTTER/CRIMPER	TORX SET
	RUBBING ALCOHOL	LINT FREE TOWEL	REMOVABLE THREAD LOCK		



**PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING. USE REMOVABLE THREAD LOCK WHEN INSTALLING ALL SCREWS. ESTIMATED INSTALLATION TIME: 90 TO 120 MIN.**






**INSTALLATION (RYKER):**

- STARTING AT THE LEFT FRONT FENDER, CAREFULLY PEEL OFF THE OEM REFLECTOR AND CLEAN ANY RESIDUE FROM THE TAPE ON THE FENDER.
- PLACE MASKING TAPE ON THE FENDER AS SHOWN IN **FIG. 1**.
- MARK THE FENDER ACCORDING TO **FIG. 1** AND DRILL A 5/16" HOLE CENTERED ON THE MARK. (BBP RECOMMENDS USING A STEP DRILL TO DRILL PLASTIC PARTS.) *REMOVE ANY BURRS FROM DRILLING.*
- REMOVE MASKING TAPE AND CLEAN THE SURFACE WHERE THE LIGHT WILL MOUNT WITH RUBBING ALCOHOL AND A LINT FREE TOWEL. (**FIG. 1**).
- LET THE FENDER DRY COMPLETELY
- USE A 13MM SOCKET TO REMOVE THE FOUR BOLTS HOLDING THE LEFT FRONT FENDER AND REMOVE THE FENDER (**FIG. 2**).
- USE **FIG 3** TO DETERMINE THE LEFT AND RIGHT AMBER LED LIGHT. SET THE RIGHT AMBER LED LIGHT ASIDE FOR NOW.
- FEED THE THREE WIRE CABLE FROM THE LEFT AMBER LED LIGHT THROUGH THE HOLE FROM STEP 3 IN THE LEFT FRONT FENDER.
- PEEL THE BACKER FROM THE LIGHT AND CAREFULLY PRESS LIGHT INTO PLACE ON THE FENDER.
- RUN THE WIRES FOR THE AMBER LED LIGHT ALONG THE WIRES FOR THE OEM FRONT FENDER LIGHT. *USE WIRE TIES TO SECURE AS NEEDED.*
- INSTALL THE PARTS REMOVED IN STEP 6.
- REPEAT STEPS 1 THROUGH 11 ON THE RIGHT SIDE.
- CONNECT THE LIGHTS ACCORDING TO **FIG. 4** USING THE SUPPLIED T-TAP CONNECTORS. (*BBP RECOMMENDS USING AN ISOLATION FUSE BLOCK WHEN ADDING ELECTRICAL ACCESSORIES*)
- LET THE TAPE CURE FOR 24 HOURS BEFORE USING.

**INSTALLATION (RT 2020-NEWER):**

- STARTING AT THE LEFT FRONT FENDER, CAREFULLY PEEL OFF THE OEM REFLECTOR AND CLEAN ANY RESIDUE FROM THE TAPE ON THE FENDER.
- PLACE MASKING TAPE ON THE FENDER AS SHOWN IN **FIG. 1A**.
- MARK THE FENDER ACCORDING TO **FIG. 1A** AND DRILL A 5/16" HOLE CENTERED ON THE MARK. (BBP RECOMMENDS USING A STEP DRILL TO DRILL PLASTIC PARTS.) *REMOVE ANY BURRS FROM DRILLING.*
- USE A 13MM SOCKET TO REMOVE THE FOUR SCREWS HOLDING THE LEFT FRONT FENDER AND REMOVE THE FENDER (**FIG. 2A**).
- REMOVE THE SCREW HOLDING THE COVER INSIDE THE LEFT FENDER SHOWN IN **FIG. 3A** AND REMOVE THE COVER.
- REMOVE MASKING TAPE AND CLEAN THE SURFACE WHERE THE LIGHT WILL MOUNT WITH RUBBING ALCOHOL AND A LINT FREE TOWEL. (**FIG. 2A**).
- LET THE FENDER DRY COMPLETELY.
- USE **FIG. 3** TO DETERMINE THE LEFT AND RIGHT AMBER LED LIGHT. SET THE RIGHT AMBER LED LIGHT ASIDE FOR NOW.
- FEED THE THREE WIRE CABLE FROM THE LEFT AMBER LED LIGHT THROUGH THE HOLE FROM STEP 3 IN THE LEFT FRONT FENDER.
- PEEL THE BACKER FROM THE LIGHT AND CAREFULLY PRESS LIGHT INTO PLACE ON THE FENDER.
- RUN THE WIRES FOR THE AMBER LED LIGHT ALONG THE WIRES FOR THE OEM FRONT FENDER LIGHT **FIG. 3A**. *USE WIRE TIES TO SECURE AS NEEDED. (BE SURE WIRES DO NOT INTERFERE WITH ANY MOVING PARTS OR WITH STEERING)*
- INSTALL THE PARTS REMOVED IN STEP 4 AND 5.
- REPEAT STEPS 1 THROUGH 12 ON THE RIGHT SIDE.
- CONNECT THE LIGHTS ACCORDING TO **FIG. 4** USING THE SUPPLIED T-TAP CONNECTORS. (*BBP RECOMMENDS USING AN ISOLATION FUSE BLOCK WHEN ADDING ELECTRICAL ACCESSORIES*)
- LET THE TAPE ON THE AMBER LED LIGHTS CURE FOR 24 HOURS BEFORE USING.

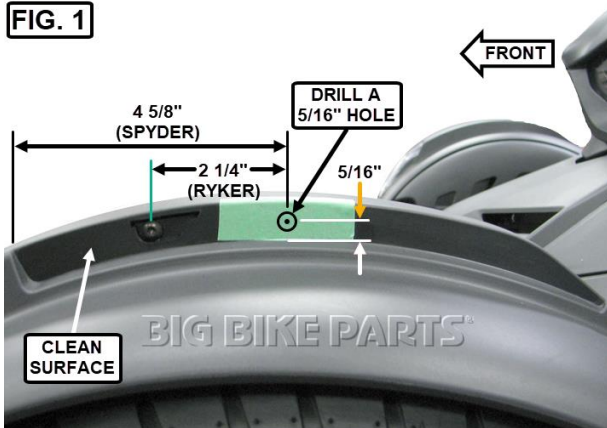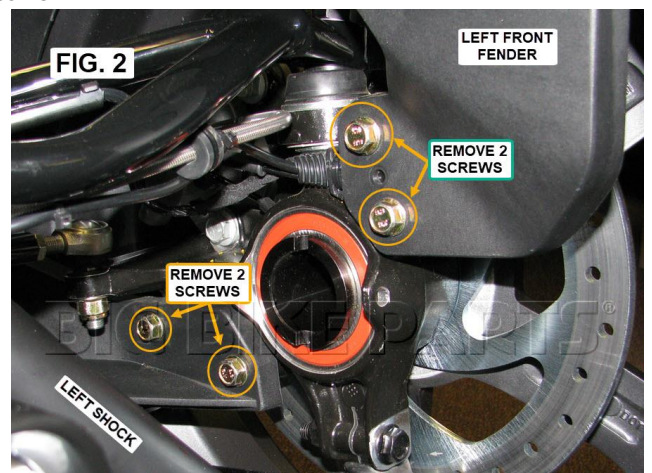**FIG. 1****FIG. 2**

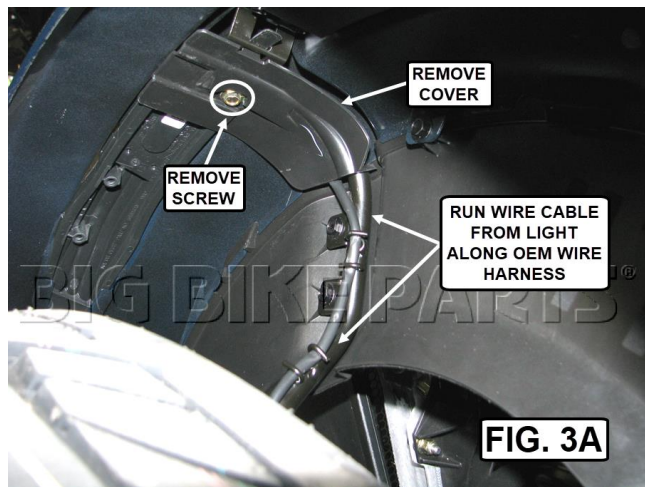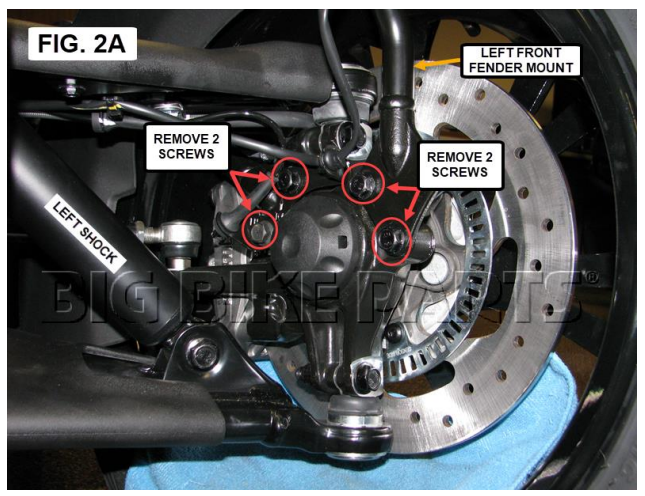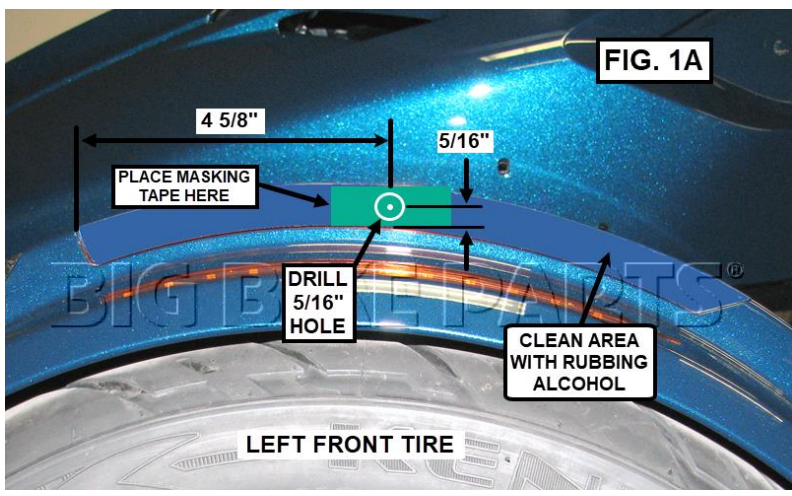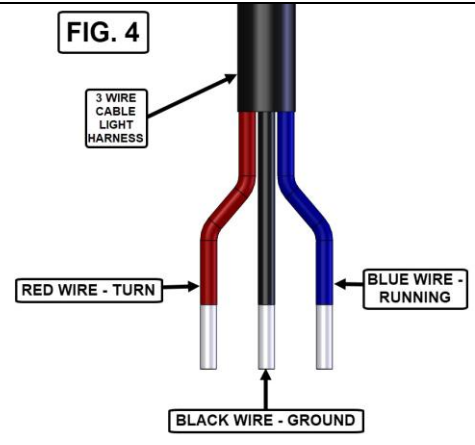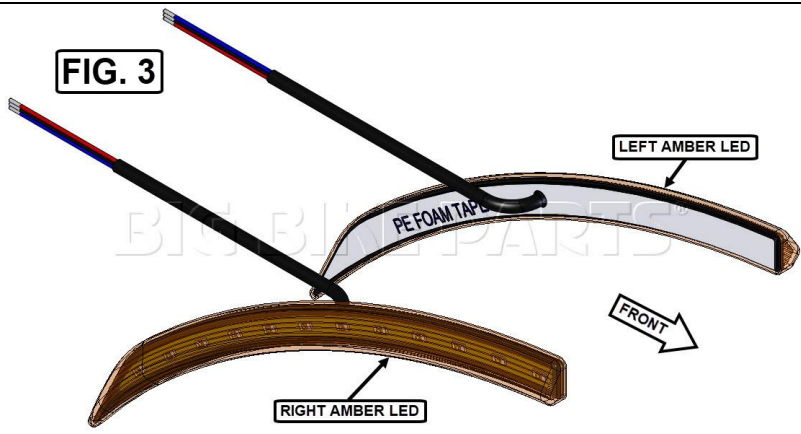

**NOTICE**  
 IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

**NOTICE**  
 THIS IS AN ADHESIVE BACKED PRODUCT. CAUTION MUST BE TAKEN DURING INSTALLATION TO PROPERLY POSITION FOR ONE TIME PLACEMENT. REPEAT TRIALS WILL RESULT IN FAILURE OF THE ADHESIVE.

**NOTICE**  
**CAN-AM RYKER**  
 BIG BIKE PARTS RECOMMENDS INSTALLING AN ISOLATION FUSE BLOCK (PART NUMBER 41-403) BEFORE CONNECTING ANY ADDED ELECTRICAL ACCESSORIES TO THE RYKER.

**NOTICE**  
 BIG BIKE PARTS RECOMMENDS INSTALLING AN ISOLATION FUSE BLOCK (PART NUMBER 13-311) BEFORE CONNECTING ANY ADDED ELECTRICAL ACCESSORIES TO THE BIKE