

BIG BIKE PARTS® INSTALLATION INSTRUCTION

CHROME FRONT FENDER EXT.

PART NO. 52-601A

PART NO. 52-655

HONDA GL1800 GOLD WING


NOT AIRBAG MODEL

ITEMS REQUIRED: 5MM ALLEN WRENCH
DRILL
3/8" DRILL BIT
WOODEN BLOCK

INSTALLATION:

NOTE: BEFORE YOU DRILL THE HOLE IN THE FENDER, MAKE SURE THAT THE FENDER EXTENSION IS CENTERED PROPERLY ON THE FENDER AND THAT THE DRILLED HOLES ARE CENTERED WITH THE HOLES IN THE FENDER EXTENSION. WE RECOMMEND USING LOC-TITE ON THE SCREWS. DO NOT OVER TORQUE. IF THE SCREWS ARE TOO TIGHT IT MAY CAUSE THE FENDER TO CRACK.

1. MAKE SURE BIKE IS SECURE ON ITS CENTER STAND.
2. POSITION FRONT FENDER EXTENSION ON THE FRONT FENDER. MAKE SURE THE RIBS IN BACK OF EXTENSION TOUCH FENDER.
3. MARK THE TWO HOLES ON FENDER TO BE DRILLED. REMOVE FENDER EXTENSION.
4. WITH DRILL & 3/8" DRILL BIT, DRILL HOLES FOR EXTENSION; BE SURE TO PLACE WOODEN BLOCK BEHIND FENDER SO YOU DON'T PUNCTURE TIRE.
5. CLEAN THE FENDER WHERE THE EXTENSION WILL BE PLACED.
6. REMOVE ADHESIVE BACKING AND ATTACH THE FENDER EXTENSION IN PLACE.
7. PUT THE SPECIAL NUT THROUGH HOLE ON BACKSIDE OF FENDER, TIGHTEN WITH SCREWS.

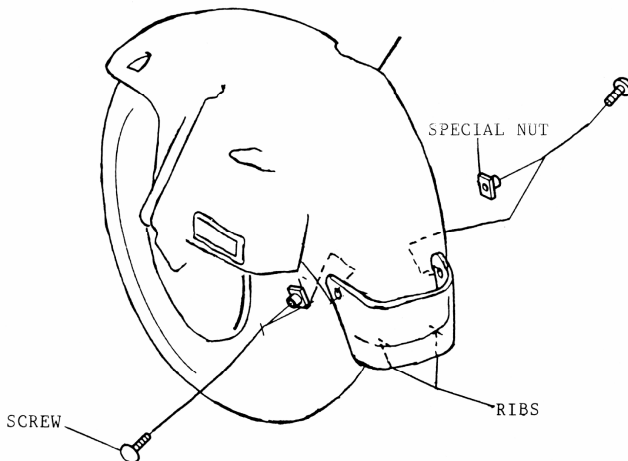

Check out the collection of custom motorcycle accessories and trim we offer.