BIG BIKE PARTS®

3/31/2022

INSTALLATION INSTRUCTIONS

PART NO. H40-405BK/H40-405RED	TANK MINI BRA
FITMENT: CAN-AM RYKER 2019- NEWER	

TOOLS NEEDED:	RUBBING ALCOHOL	LINT FREE TOWEL		

PLEASE READ THROUGH AND UNDERSTAND THESE INSTRUCTIONS BEFORE BEGINNING.
ESTIMATED INSTALLATION TIME: 10 TO 15 MIN.

INSTALLATION:

1. CLEAN THE AREAS OF THE TANK SHROUD WITH RUBBING ALCOHOL AND A LINT FREE TOWEL AS SHOWN IN **FIG. 1**. LET DRY COMPLETELY.

2. REMOVE THE TANK MINI BRA FROM THE PACKAGE AND USE **FIG. 2** TO DETERMINE ORIENTATION. TEST FIT ON THE BIKE TO SEE OREINTATION.

3. REMOVE THE TWO PIECES OF HOOK FROM EACH END OF THE TANK MINI BRA (**FIG. 2**) AND INSTALL THEM ON THE BACK SIDE OF THE TANK SHROUD AS SHOWN IN **FIG. 1**. (NOTE: *BE SURE NOT TO TOUCH ADHESIVE WITH ANYTHING BEFORE IT IS INSTALLED. ADHESIVE ON THE HOOK AND LOOP IS A ONE TIME INSTALLATION. THERE IS A SMALL RIB ON THE BACK SIDE OF THE TANK SHROUD. PLACE HOOK ABOVE AND BELOW THE RIB.*)

4. PEEL THE BACKER FROM THE LOWER HOOK AND LOOP ON THE BACK SIDE OF THE TANK MINI BRA (**FIG. 2**). NOTE: *BE SURE NOT TO TOUCH ADHESIVE WITH ANYTHING BEFORE IT IS INSTALLED. ADHESIVE ON THE HOOK AND LOOP IS A ONE TIME INSTALLATION.*

5. WHILE HOLDING THE TANK MINI BRA CENTERED ON THE TANK SHROUD (**FIG. 3**), LINE UP THE BOTTOM OF THE TANK MINI BRA WITH THE BOTTOM OF THE TANK SHROUD AND PRESS THE LOWER HOOK AND LOOP ONTO THE TANK SHROUD TO SECURE.

6. WRAP THE SIDES OF THE TANK MINI BRA AROUND THE TANK SHROUD FOLLOWING THE EDGE OF THE TANK SHROUD AND ATTACH THE END PIECES OF LOOP TO THE PIECES OF HOOK THAT YOU INSTALLED ON THE BACK SIDE OF THE TANK SHROUD IN STEP 3.

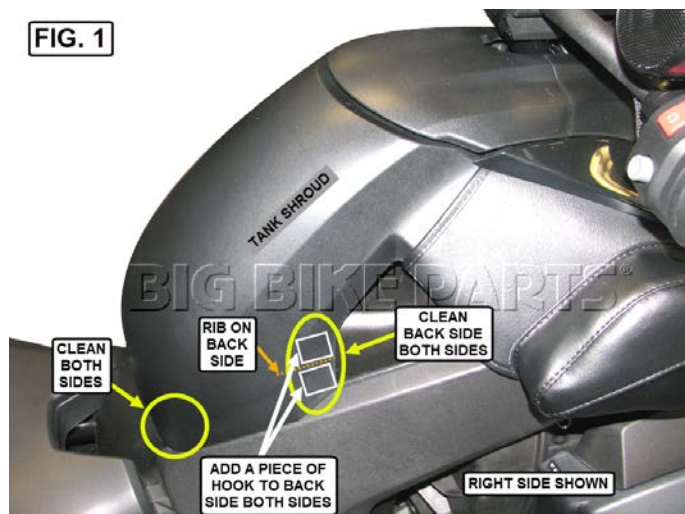7. LET ADHESIVE CURE FOR 24 HOURS BEFORE USE BEFORE RIDING.

FIG. 1
CLEAN BOTH SIDES
RIB ON BACK SIDE
CLEAN BACK SIDE BOTH SIDES
ADD A PIECE OF HOOK TO BACK SIDE BOTH SIDES
RIGHT SIDE SHOWN
TANK SHROUD

FIG. 2
HOOK AND LOOP ON END OF TANK MINI BRA (BACK SIDE)
TOP
HOOK AND LOOP ON END OF TANK MINI BRA (BACK SIDE)
TANK MINI BRA
LOWER HOOK AND LOOP ON TANK MINI BRA (BACK SIDE)

FIG. 3
PRESS HOOK AND LOOP ONTO THE TANK SHROUD TO SECURE
WRAP THE SIDES AROUND AND TO THE HOOK FROM STEP 3
LINE UP BOTTOM OF TANK MINI BRA WITH BOTTOM OF TANK SHROUD

NOTICE
IGNORING THE CONTENTS OF THESE INSTRUCTIONS MAY AFFECT THE PRODUCT PERFORMANCE AND FUNCTIONALITY. NOT FOLLOWING THESE INSTRUCTION MAY CAUSE DAMAGE TO THE PRODUCT OR THE VEHICLE TO WHICH IT IS BEING ATTACHED.

NOTICE
THIS IS AN ADHESIVE BACKED PRODUCT. CAUTION MUST BE TAKEN DURING INSTALLATION TO PROPERLY POSITION FOR ONE TIME PLACEMENT. REPEAT TRIALS WILL RESULT IN FAILURE OF THE ADHESIVE.