

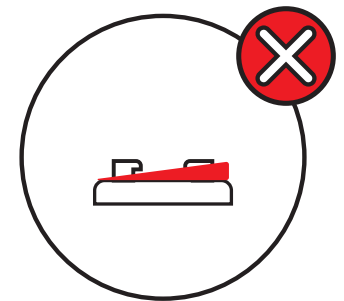


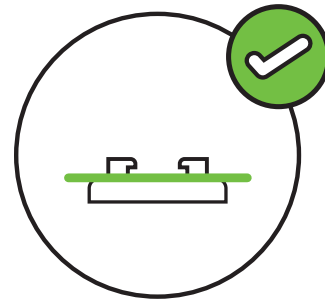


CLUTCH MOUNT PRO

Mounting instructions

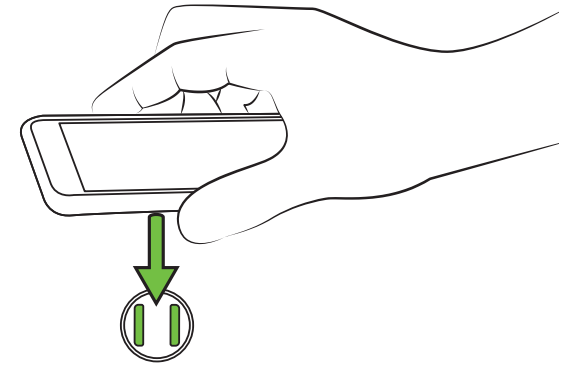


1. Choose correct screw for motorcycle type (M6 or UNC 1/4" - 20)





 Tighten screw to motorcycle manufacturer guidelines


2. Choose mounting position

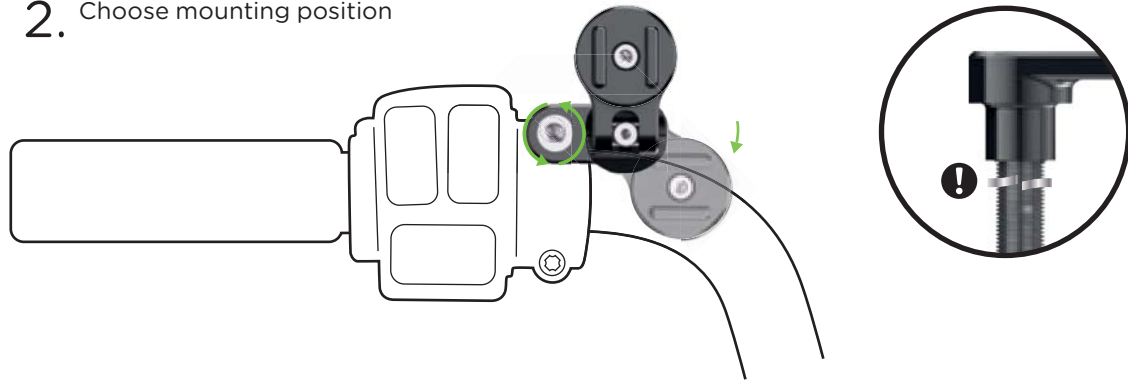


3. Adjust Micro Rail Head

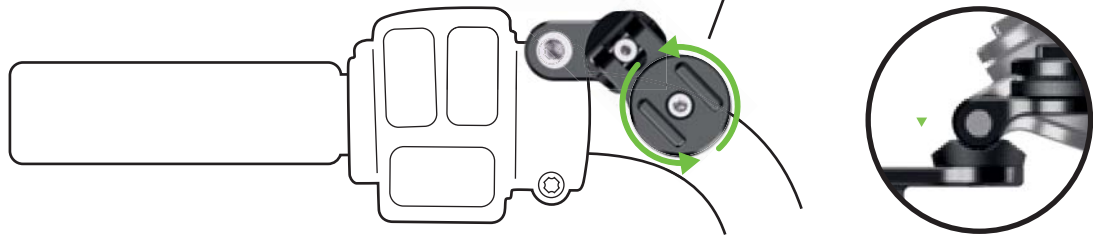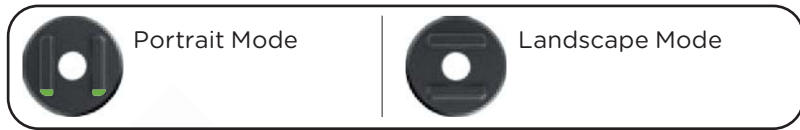


4. Place Phone

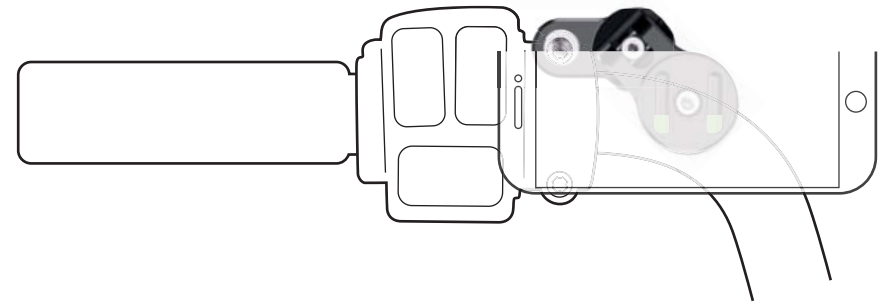

5. Turn 90° Clockwise

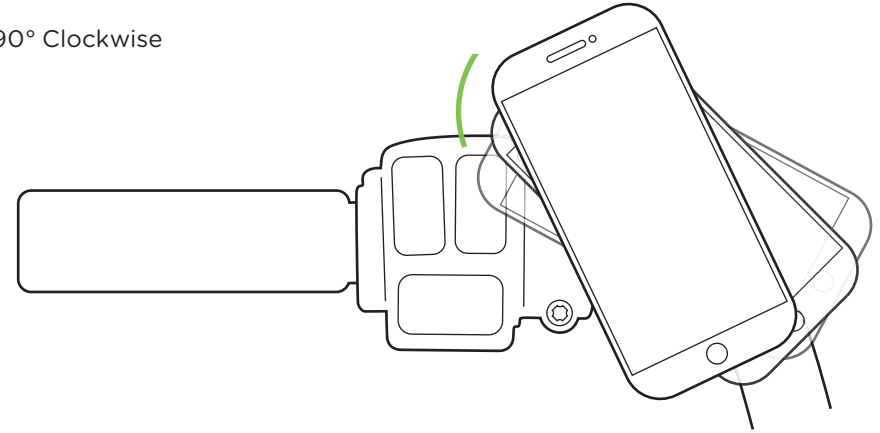

6. Locked!

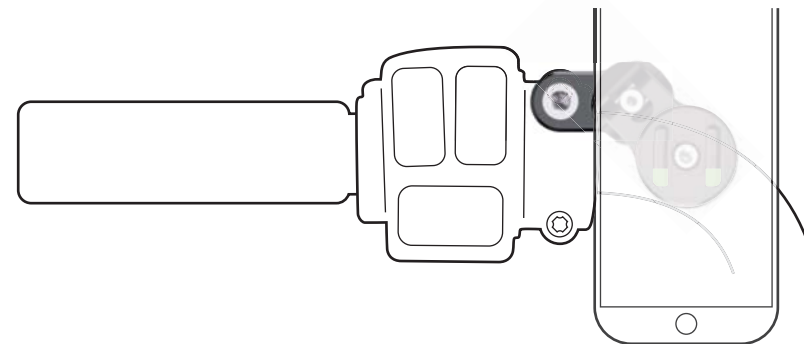

If you're looking for quality bike mounts, visit our website.