



*"Setting the World's
Performance Standards!"*


SLP Universal Pipe Banding Kit Part # 090-963 and 090-818

1. Install hose clamp around the pipe in the center of the insulation strip. SLP pipes have two tack welds on each side of the center section of the pipe to help hold this banding kit in position. Make sure the insulation stays between these two tack welds. On non SLP brand pipes it is recommended to add two tack welds on each side of the pipe where the banding kit will be positioned.

2. Tighten the hose clamp and torque to 30 in/lbs.

Note: Check tightness of clamps approximately every 100 miles for the first 300 miles then periodically after that.

Maximum hose clamp tail length should not exceed 1 1/2" in length. If longer than 1 1/2" trim excess using an abrasive cutting wheel.

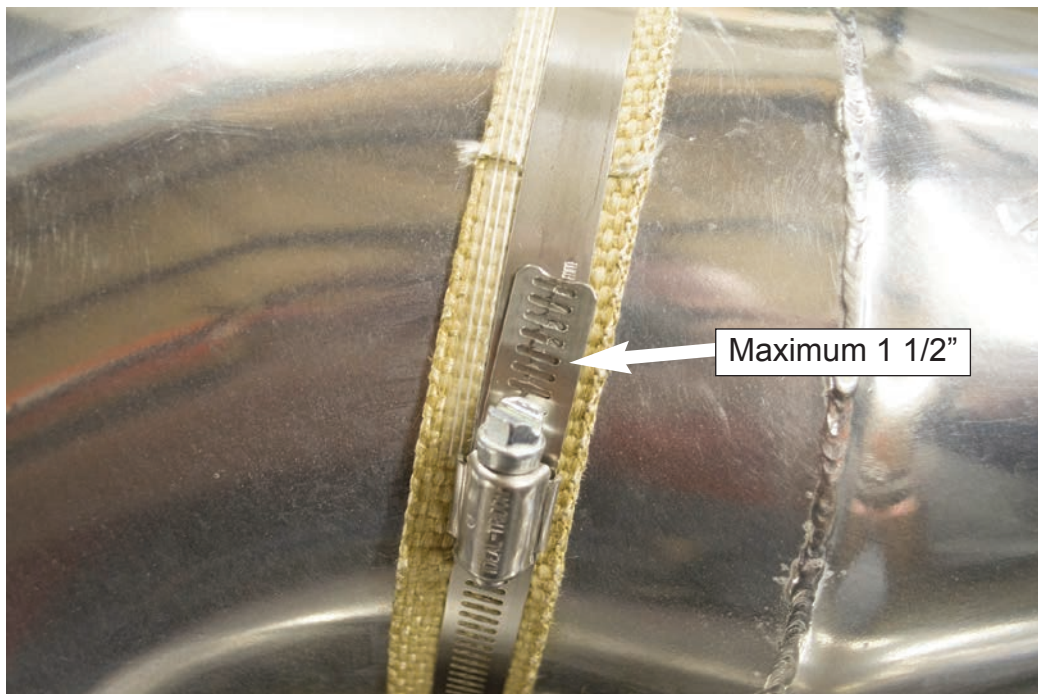

Maximum 1 1/2"

Looking for dependable exhaust?
Rely on Starting Line for quality and long-lasting products.