


# INSTRUCTIONS

1. Important - When you are installing your SUPER-GLIDES, you must leave a 1/4" between glides. Failure to do so may result in the super-glide buckling or bowing.
2. Measure the stance (width) of your snowmobile(s), ATV(s) or auto to obtain the correct width to place your super-glides.
3. Layout the lengths of super-glides leaving the 1/4" expansion gap. Cut any pieces to length if necessary.
4. Begin to secure the super-glides to the trailer/truck deck surface using the custom screws provided. **Do not over tighten** the screw head onto the glide (it is important that the super-glide expands and contracts with temperature change).


\*The Manufacturer assumes no responsibility for theft, injury, damages or loss arising from the use of this product however caused.

\*Caution - characteristics of this product may change in use due to steepness of ramp, footwear or any other contributing factors such as severe weather, IE cold, wet, snow or mud etc. (extreme caution must always be used).

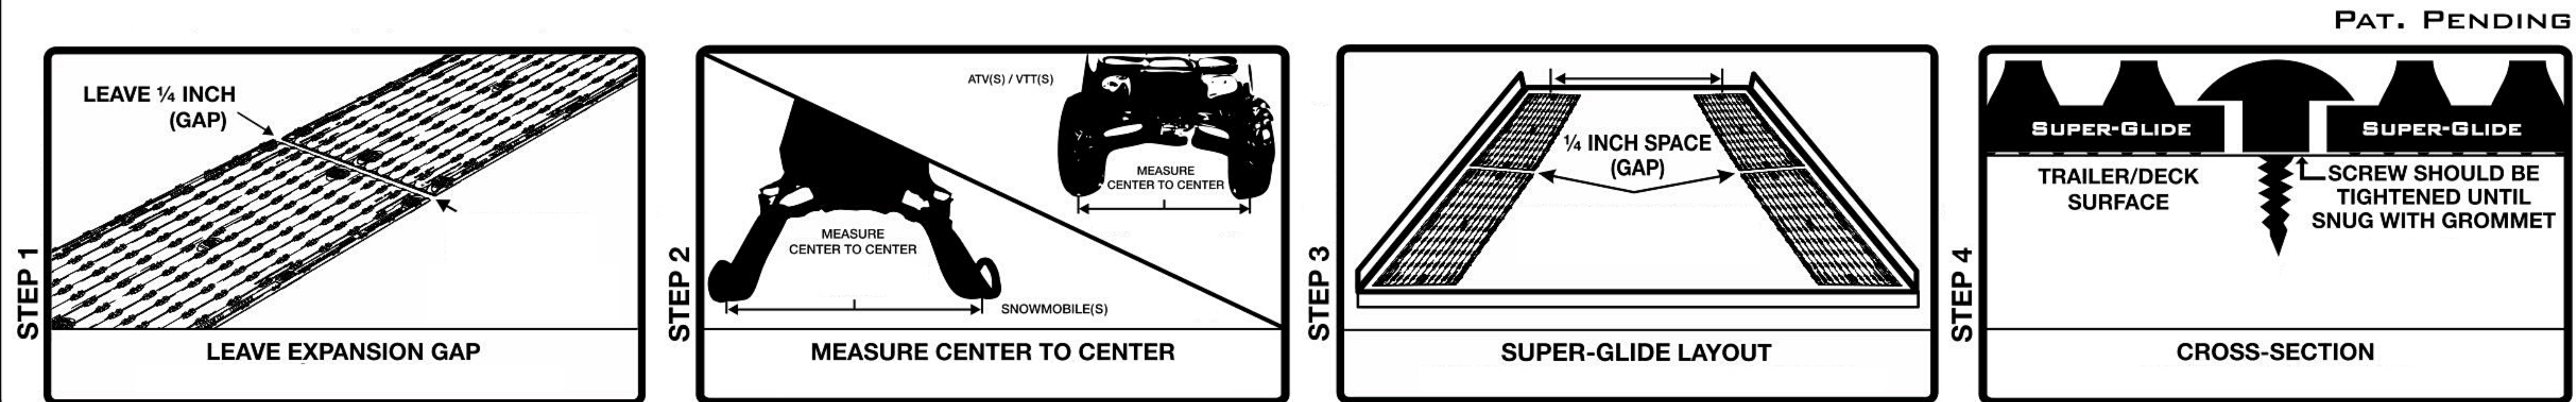

# KIT CONTAINS

**8 pcs - Superglides per box (20-feet total)**

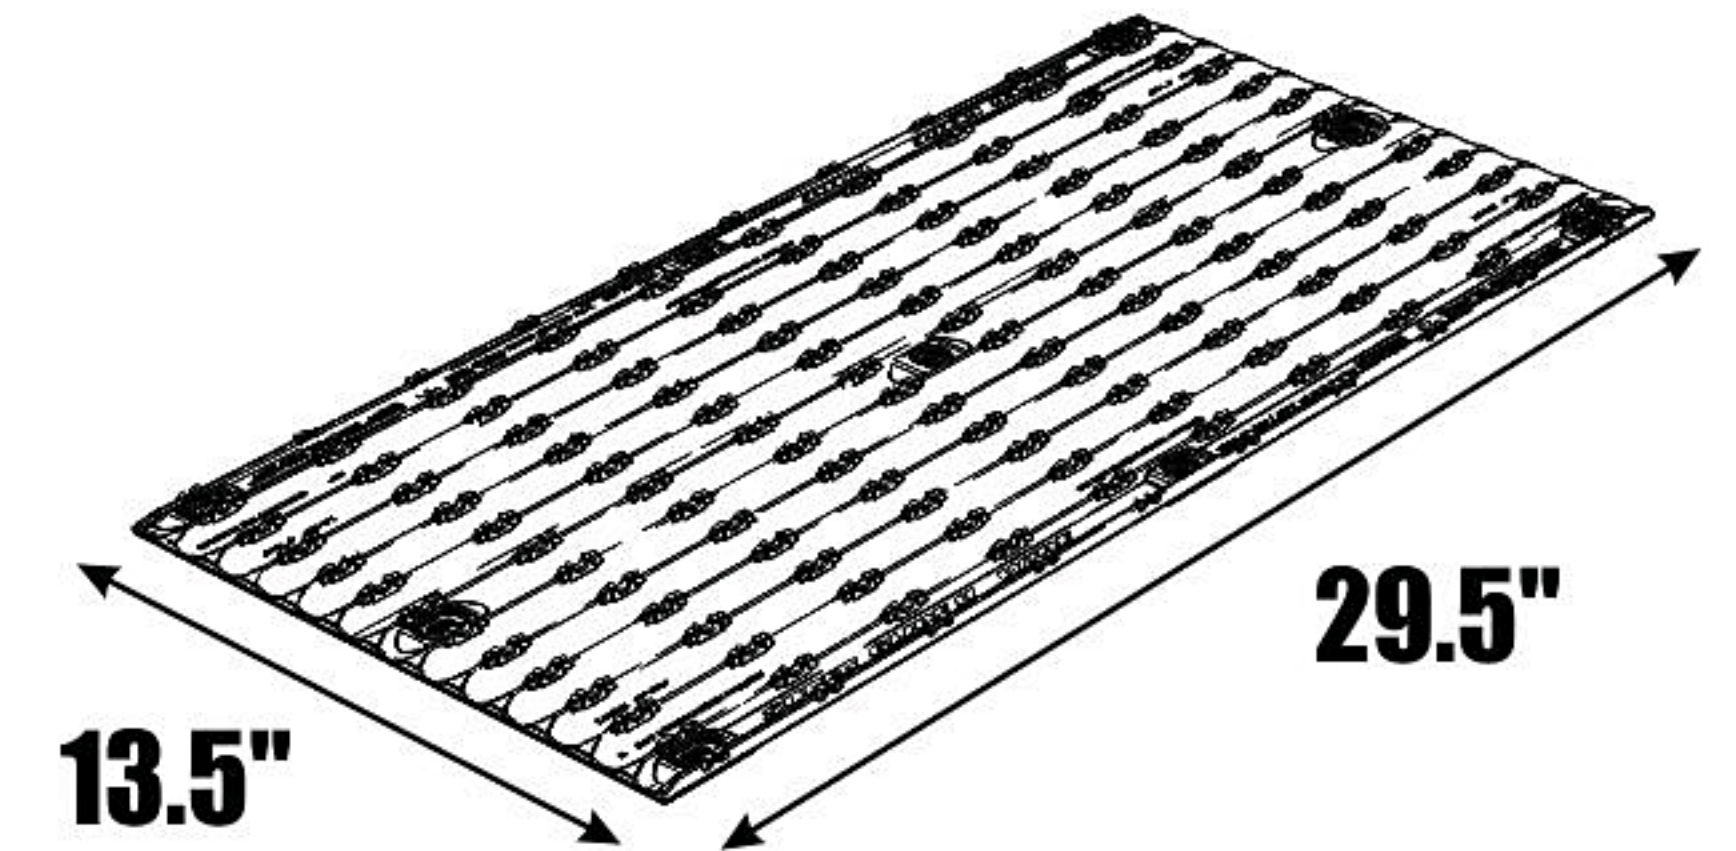

13.5"

29.5"

**72 - Custom screws with grommets**



MADE IN CANADA  
PROUDLY NORTH AMERICAN

**SUPER-GLIDES II WIDE**  
#1 SLED/ATV GLIDE WITH TRACTION

**with mounting hardware**

BOX ARTWORK COPYRIGHT PROTECTED ©



THE ULTIMATE GLIDE  
WITH IMPROVED TRACTION



YOUR SLED GLIDES!



YOUR ATV GRIPS!



EXCLUSIVE VENTING  
UNDERNEATH!



YOU DON'T SLIP!



MADE IN CANADA  
PROUDLY NORTH AMERICAN

Rely on premium powersports stands & lifts by Superclamp if you're looking for quality and efficiency.