


Determining if your motorcycle can accept spools:

- 1) Check that your swingarm has a spool mount (Fig. A).
- 2) Determine what mm size bolt the spool mount accepts
- 3) If the spool mount accepts 8mm and the caliper is mounted below (Fig B) use SP209 or SP221. If the caliper is mounted on top of the swingarm use SP526 or SP531.

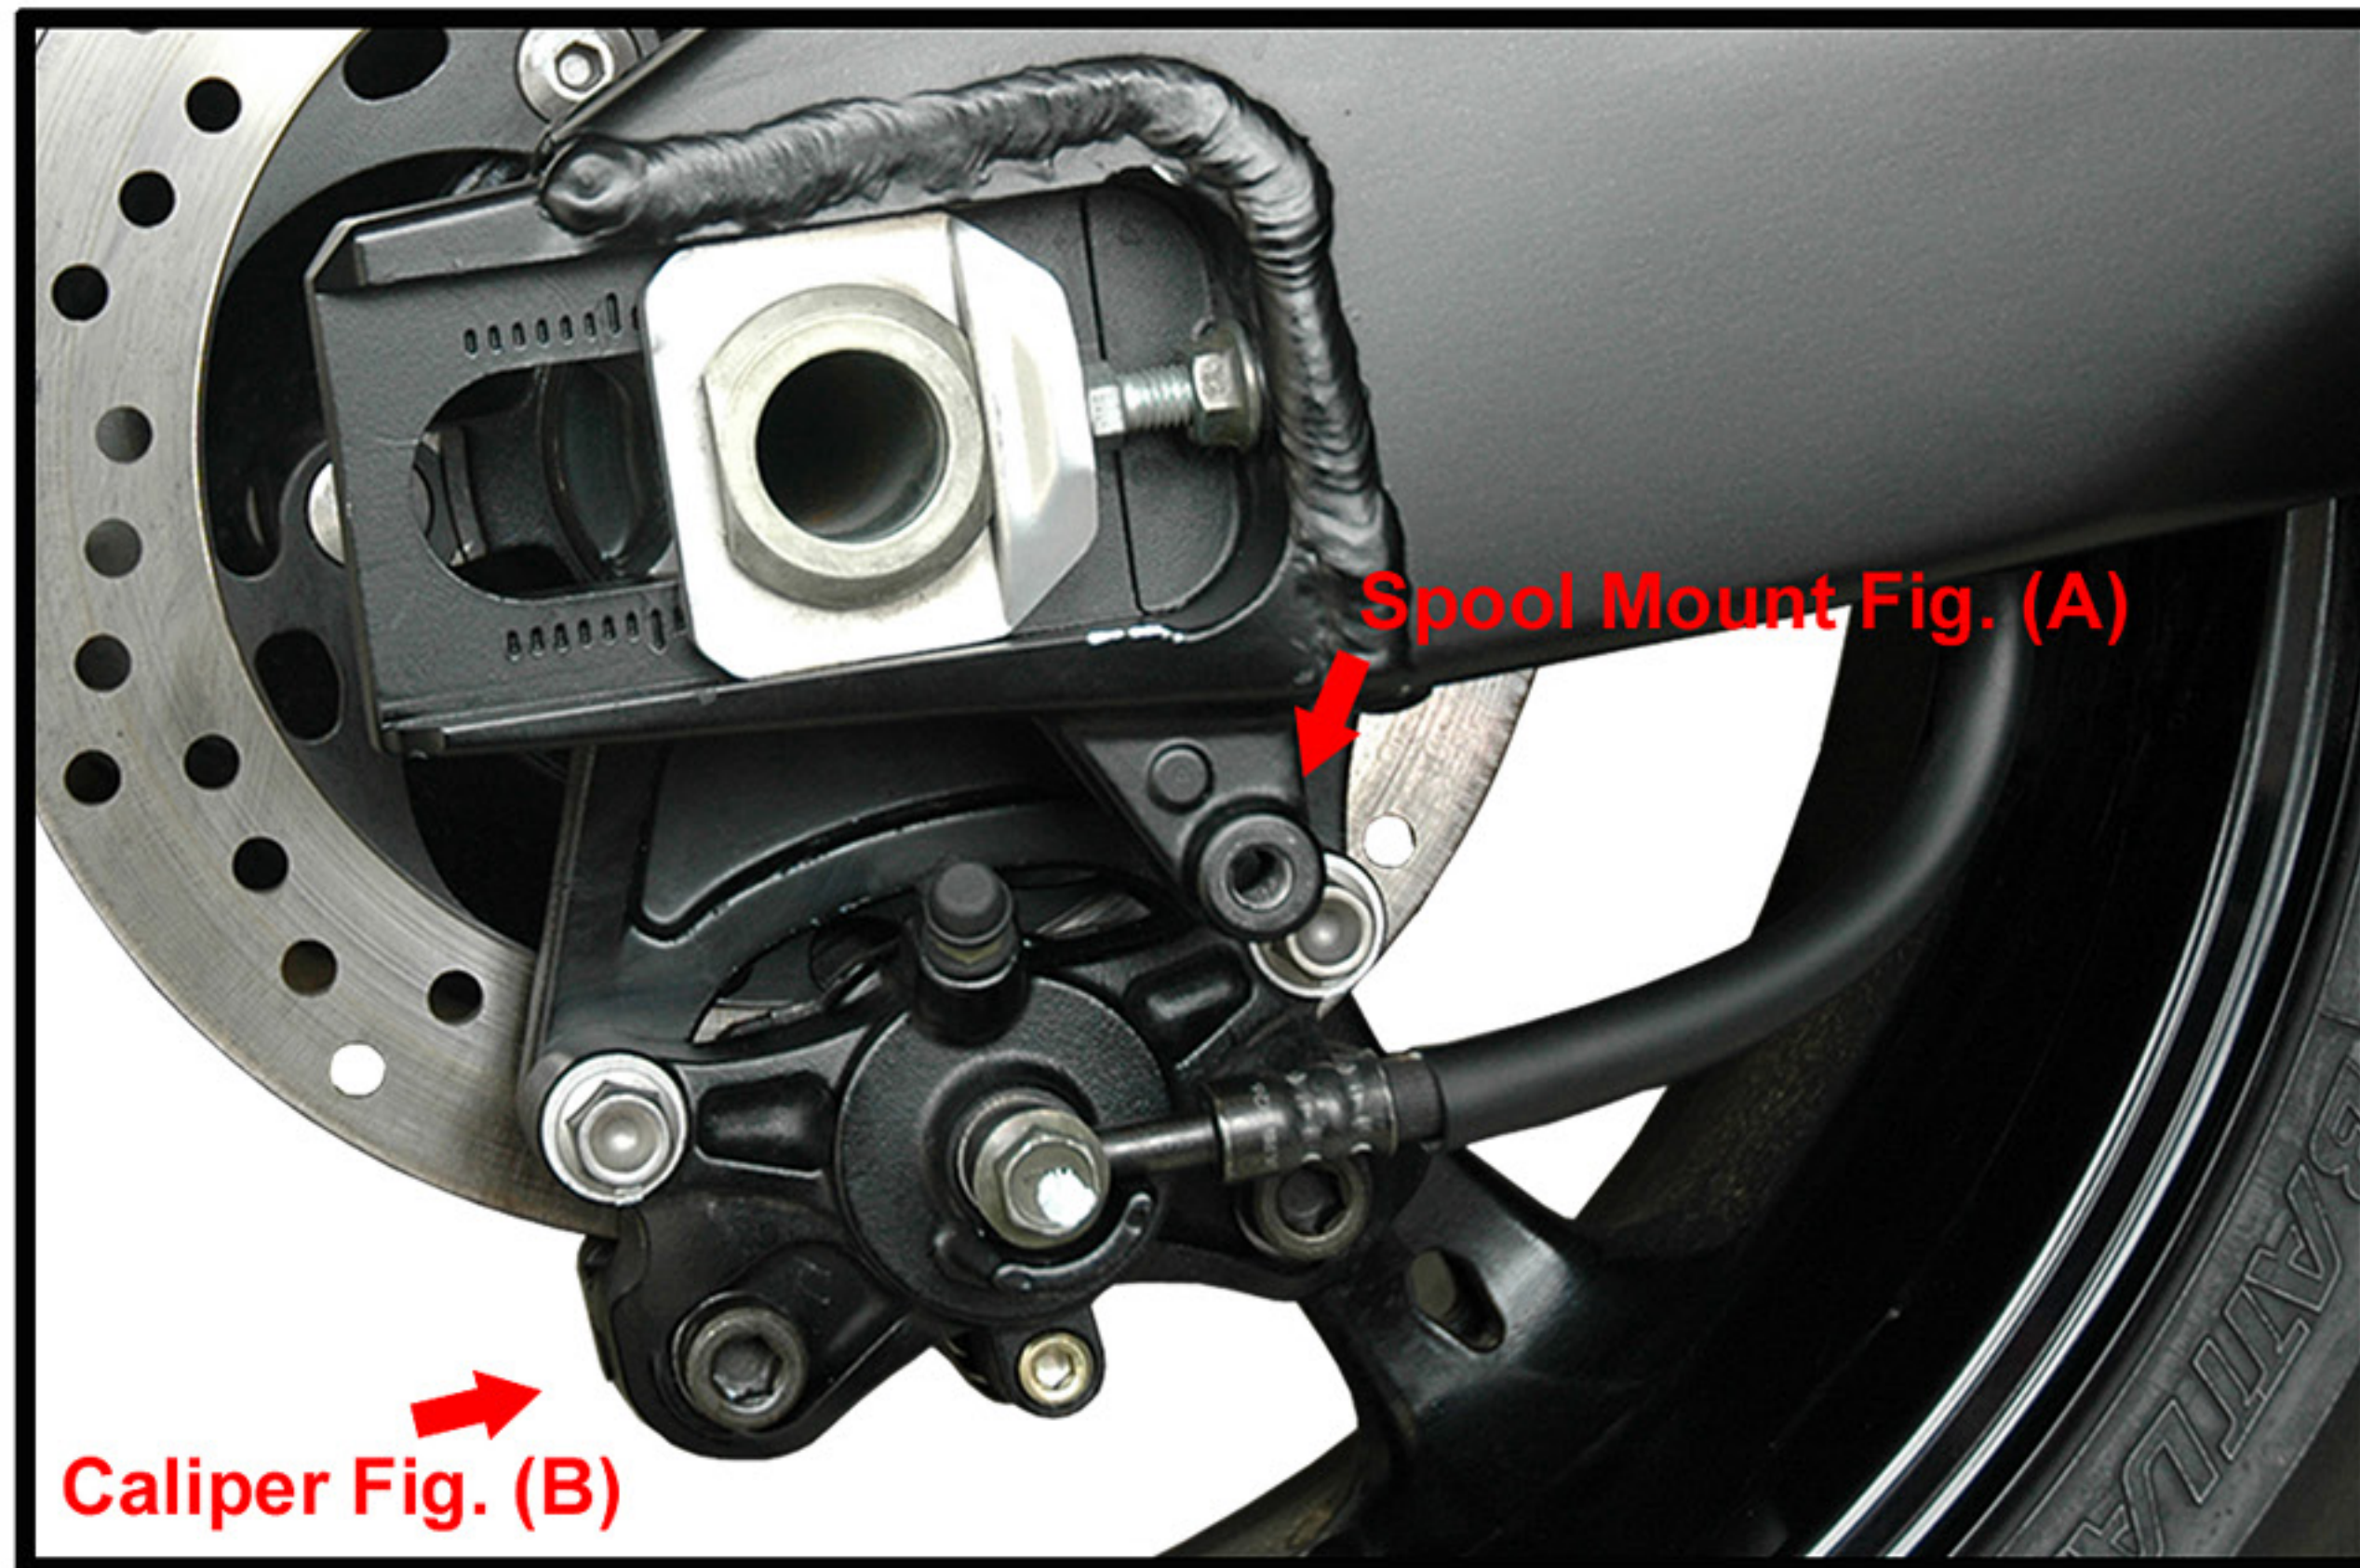

SP209/SP221 = 8mm
SP402/SP411 = 10mm
SP526/SP531 = 8mm
SP601/SP614 = 6mm