


**V3 Frame Slider Kit 2.0**

**Kawasaki ZX6R**

PART NUMBER: SR125

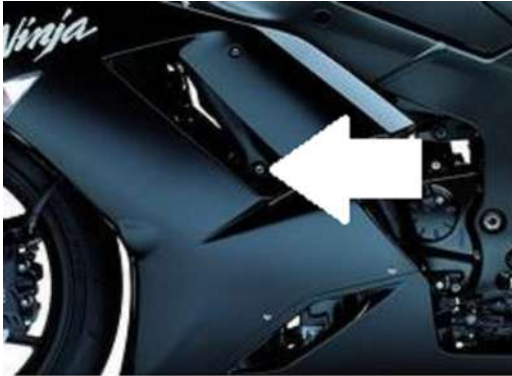

1. Remove OEM frame bolts indicated by arrows in the image above.
2. Assemble adapter brackets, bolts, and spacers as shown in the assembly to the right. Right and left side are identical.
3. Use thread lock when assembling frame sliders so engine vibrations do not loosen bolts

THIS PRODUCT IS A PROFESSIONAL ACCESSORY TO BE USED ON THE RACE TRACK. MANUFACTURER AND SELLER TAKE NO RESPONSIBILITY FOR ANY DAMAGES THAT MIGHT OCCURE WHEN USING THIS PRODUCT.

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	SRB001	M10 Adapter With Pocket	2
2	SRA80	Slider Base (80mm)	1
3	SRA60	Slider Base (60mm)	1
4	H-SR101	Slider	2
5	H-SRPW	M10 x 4mm Thick	2
6	F-170SH	M10 x 1.5 x 100mm	1
7	F-168SH	M10 x 1.5 x 80	1
8	F-155SH	M10 x 1.25 x 70mm	1
9	F-156SH	M10 x 1.25 x 80mm	1
10	SRS006	M10 x 15mm Long Spacer	1

