



Installation Guide



Gas can bracket kit USA for Polaris Touring 570 (2014+)

#116-0022


Before you start:

- 1- Fits exclusively on Polaris Sportsman Touring 570 (2014+).
- 2- Each kit includes: 1 aluminum bracket with buckle straps, 2 Quick Releases and one gas can (1 gal).

Step 1: By unbuckling the straps remove the gas can from the bracket.



Step 2: Place the bracket on the unit's rear rack by inserting both Quick Releases in the holes located behind the passenger's backrest.

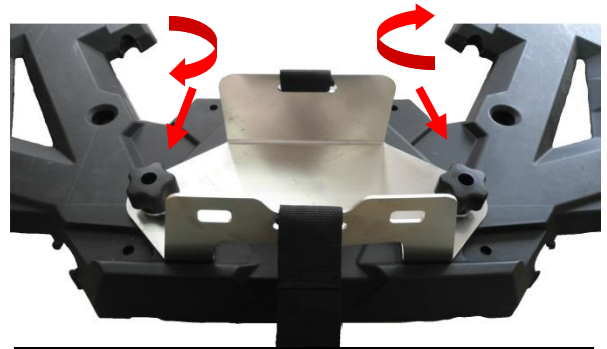

**Fasten each knob firmly once inserted
Make sure both Quick Releases are
securely fastened.**

Step 3: Place the gas can on the bracket and buckle both straps (tighten securely)



- Before each ride make sure the bracket is firmly fixed to the rear rack and the buckle straps are securely fastened to the gas can.