

INSTALLATION INSTRUCTIONS

DILLINGER LUGGAGE RACK, SILVER

6664

PIC 1

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

MARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

A CAUTION

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- L Luggage Rack
- 1 Left Mount
- 1 Right Mount
- 4 1/4-20 x 1/2" Socket Button Head Cap Screw

YOU WILL ALSO NEED:

Hex wrench set, torx wrench bit set, combination wrench set, torque wrench (FT/LBS)

PICTURES SHOWN ARE OF THE BLACK PARTS. INSTALLATION OF THE SILVER PARTS WILL BE THE SAME.


NOTICE

THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

- **STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.
- **STEP 2** Refer to PIC 2. Locate provided Luggage Rack. Set it upside down on a flat clean surface.
- **STEP 3** Refer to PIC 3. Locate provided Left Mount. Align and place the bent panel of the mount on top of the mounting holes of the luggage rack.

Note: The side with the bent panel and clear plastic film will face in towards the rack and bike. The notched out section of the mount, that fastens to the rear fender area, should be directed towards the rear of the rack.

- **STEP 4** Refer to PIC 3 and 4. Locate two (2) provided screws. Lightly fasten the mount to the luggage rack.
- **STEP 5** Refer to PIC 4. Locate provided Right Mount. Repeat Steps 3 and 4 for fastening the mount to the luggage rack.

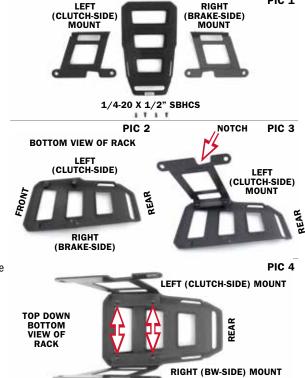

LUGGAGE RACK



INSTALLATION INSTRUCTIONS

DILLINGER LUGGAGE RACK, SILVER

6664

PIC 5

PIC 8

-CONTINUED-

STEP 6

Refer to PIC 5. Remove the existing rear fender support bolts and lock nuts, and <u>loosen</u> the rear turn signals. Set hardware aside, it will be reused.

Note: Refer to service manual for assistance with the loosening of the rear turn signals.

STEP 7

Align and test fit the luggage rack over the rear fender. Adjust the spacing between the mounts in or out as needed. Take the luggage rack assembly off and fully tighten the mounts into position.

STEP 8

Refer to PIC 6 and 7. Slide the mounts of the luggage rack between the rear fender and rear fender support. Be sure the notches on the bottom of the mounts slide over the top of the rear turn signal light's wire and hardware. Align the mounting holes of the rear fender support, mounts, and rear fender.

Note: Be sure the rear turn signal light's wire is not bent or pinched.

STEP 9

Refer to PIC 8. Locate the hardware that was removed in Step 6. Fasten the rear fender support and the mounts to the rear fender. Fully tighten all hardware.

TORQUE VALUE FOR REAR FENDER SUPPORT SCREW: 12-18 FT-LBS (16.3-24.4 NM)

STEP 10

Fully tighten the rear turn signals.

A CAUTION

NEVER EXCEED THE MANUFACTURER'S RECOMMENDED LOAD CAPACITY. EXCESS LOADING ON THE LUGGAGE RACK COULD CAUSE DAMAGE TO YOUR MOTORCYCLE, LOSS OR INJURY. KURYAKYN IS NOT RESPONSIBLE FOR ANY DAMAGE, LOSS, OR INJURY CAUSED BY EXCEEDING THE MANUFACTURER'S LOAD CAPACITY.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.



LEFT (CLUTCH) SIDE VIEW

