

INSTALLATION INSTRUCTIONS

ADJUSTABLE PASSENGER PEGS, '10-UP FIXED MOUNTS, GLOSS BLACK

7059

THANK YOU FOR CHOOSING KURYAKYN!

Protect yourself and others from possible injury and property damage or loss. Pay close attention to all instructions, warnings, cautions, and notices regarding the installation, use, and care of this product.

WARNING THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN MINOR OR MODERATE POTENTIAL INJURY.

NOTICE THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN MAY NEGATIVELY AFFECT PRODUCT PERFORMANCE AND FUNCTIONALITY OR DAMAGE THE PRODUCT ITSELF OR THE PRODUCT TO WHICH IT IS BEING ATTACHED.

ENSURE THAT THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- | | | | |
|---|---|---|--|
| 1 | Right Hand Adjustable Passenger Peg Mount | 2 | Stop Bushings for Two Wheel Applications |
| 1 | Left Hand Adjustable Passenger Peg Mount | 1 | Stop Bushing for Trike Applications-Right (Parking Brake) Side |
| 2 | Small ISO Pegs | | |

YOU WILL ALSO NEED:

Hex Wrench Set

PICTURES SHOWN ARE OF THE CHROME PARTS. INSTALLATION OF THE BLACK PARTS WILL BE THE SAME.

NOTICE THESE INSTALLATION INSTRUCTIONS CONTAIN IMPORTANT INFORMATION. ENSURE THE END USER RECEIVES THIS COPY AND IS AWARE OF ITS IMPORTANCE FOR FUTURE USE.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let motorcycle cool.

WARNING INSTALLATION MAY REQUIRE CONTACT WITH THE EXHAUST SYSTEM. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED BEFORE BEGINNING TO PREVENT INJURY.

ADDITIONAL FITMENT:


Also fits motorcycles equipped with H-D P/N's 50378-07A, 50378-07B, 50379-07A, 50379-07B, 53070-00A or 53070-00B Passenger floorboard mount kit.

WARNING THE FOLDING ARM IS INTENDED AS A FOOTREST AND IS NOT INTENDED TO BE USED FOR MOUNTING OR DISMOUNTING THE MOTORCYCLE OR TO SUPPORT THE FULL WEIGHT OF THE PASSENGER.

NOTICE AVOID DAMAGE TO THE MOTORCYCLE. PROTECT PAINTED SURFACES WITH A SOFT CLOTH OR BLANKET.

STEP 2 Refer to PIC 1. Locate the Left and Right Adjustable Passenger Peg Mounts. Remove the six screws as shown; set the screws aside, they will be reused.

NOTE: The Adjustable Passenger Peg mounts are labeled "RH" (RIGHT (BRAKE)-SIDE) and "LH" (LEFT (CLUTCH)-SIDE), respectively.

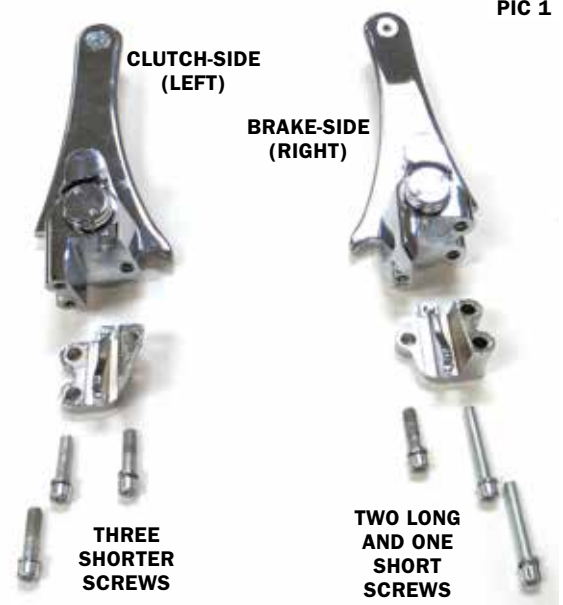

INSTALLATION INSTRUCTIONS

ADJUSTABLE PASSENGER PEGS, '10-UP FIXED MOUNTS, GLOSS BLACK

7059

-CONTINUED-


STEP 3 TYPICAL INSTALLATION: REFER TO PICS 2 AND 3.
Locate the included Stop Bushings; install them on the left and right bottom mount tabs. The tall edge of the Stop Bushing goes against the top mount/pivot arm assembly.

ON '10-'14 TRIKE APPLICATIONS: REFER TO PICS 2 THROUGH 6.
Locate the included Stop Bushing marked "TRIKES"; install it on the brake-side (right) bottom-mount; install one of the other Stop Bushings on the clutch-side (left) bottom mount; ensure the taller edge goes against the top mount/pivot arm assembly.

STEP 4 As shown in PIC 7, place the top mount/pivot arm assembly over the footboard support (with pivot arm facing outward). Check for proper clearance between the top mount/pivot arm assembly and the footboard.

STEP 5 As shown in PIC 8, secure the bottom mount to the top assembly with the screws removed in STEP 2. The three shorter screws = clutch-side (left); the two long and one short screw = brake-side (right); tighten the fasteners evenly; do not over-tighten.

STEP 6 Install the included foot pegs on the pivot arms with the supplied fasteners. Leave loose for now.

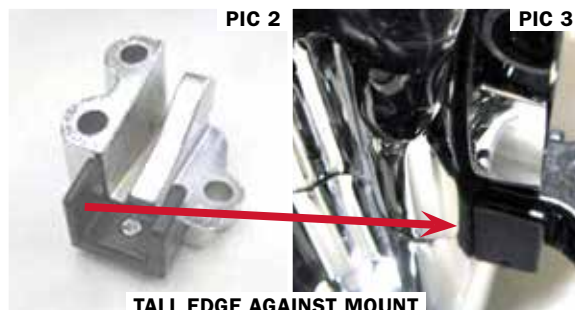

TALL EDGE AGAINST MOUNT
PIC 4



TALL EDGE AGAINST MOUNT
PIC 6



INSTALLATION INSTRUCTIONS

ADJUSTABLE PASSENGER PEGS, '10-UP FIXED MOUNTS, GLOSS BLACK

7059

-CONTINUED-

STEP 7 Adjust the peg pads to the most comfortable position with the arm in the forward position. Tighten the fastener securing the peg to the arm.

STEP 8 To adjust the position of the pivot arm, move the locking knob out of the locked position and rotate the pivot arm to the desired position. Move the knob back into the locked position.

NOTICE

IT IS THE INSTALLER'S RESPONSIBILITY TO ENSURE THAT ALL OF THE FASTENERS (INCLUDING PRE-ASSEMBLED) ARE TIGHTENED BEFORE OPERATION OF THE MOTORCYCLE. KURYAKYN WILL NOT PROVIDE WARRANTY COVERAGE ON PRODUCTS OR COMPONENTS LOST DUE TO IMPROPER INSTALLATION OR LACK OF MAINTENANCE. PERIODIC INSPECTION AND MAINTENANCE ARE REQUIRED ON ALL FASTENERS.

