



RSD GAUGE MOUNT ADAPTER KIT



PRODUCT DESCRIPTION


RSD GAUGE MOUNT ADAPTER: MOST DYNA APPLICATIONS WITH 3.5" RISER SPACING

0207-2017


- *WILL FIT MANY CUSTOM APPLICATIONS WITH 3.5" RISER SPACING.
- *DESIGNED SPECIFICALLY FOR USE WITH THE RSD SPEEDOMETER/GAUGE MOUNT 0207-2001.
- *DESIGNED SPECIFICALLY FOR USE WITH HD BOTTOM MOUNT STYLE HEADLIGHTS.
- *CAN BE USED WITH RSD BOTTOM MOUNT HEADLIGHT ADAPTER KIT 0207-2009 AND RSD HEADLIGHTS.

RSD GAUGE MOUNT ADAPTER INSTALLATION

1. Turn your motorcycle off, place securely on a lift or side stand, and disconnect the battery.
2. Remove the factory headlight. **Note:** Fuel tank removal may be necessary to access the headlight wiring and/or speedometer wiring. Consult your HD service manual for specific instructions.
3. Remove the 1/2" riser bolts using a 3/4" wrench. Install the RSD gauge mount adapter plate. **Note:** Most factory riser bolts have adequate length but make sure there is approximately 1" of thread engagement when installing the bolts. Use high strength thread locker on the bolts and torque to 55-60 ft-lbs.

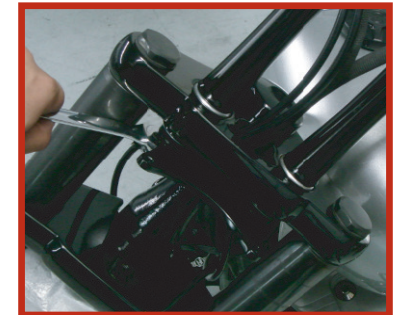

4. Install the RSD gauge/speedo mount 0207-2001 (sold separately) along with a HD Narrow Glide/ Sportster headlight unit (sold separately) using the provided spacers, 5/16" cap screws, and lock nuts. **Note:** for added security use blue threadlocker on the 5/16" bolts and torque to 13-17 ft-lbs. Install the 04-later XL Sportster or Dyna 4" speedometer (sold separately). Install the optional RSD LED indicator 0207-2003 (sold separately) if desired. **WARNING:** Due to variations in motorcycle models install the speedometer at your own risk. Consult your HD service manual for specific wiring diagrams and instructions.

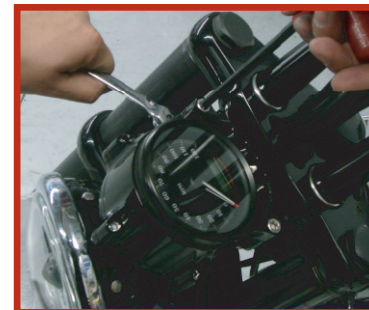

5. Once wiring is complete, connect the battery and test the function.
6. Hit the road.