

PRE-2008 4-STROKE KTM FAN KIT INSTALLATION INSTRUCTIONS



STEP 1


Make sure the gas is shut off on the bike. Remove seat, gas tank and radiator shrouds. Drain the coolant out of the bike by removing the drain plug on the water pump located on the right side of the engine. The drain plug is the bolt on the water pump that has the copper washer. **Do not lose or damage the copper washer.** Remove the right radiator from bike.

STEP 2

Install the power harness, with built in fuse, directly to the battery. (**Red to Positive and Black to Negative**). Run harness along frame to the front of the bike. Make sure to route wires where they will not be pinched or rubbed.

STEP 3


Align fan bracket on the radiator to the mounting tabs on the radiator. Use included screws to mount the bracket to the radiator. *Use a T20 Torx driver. Recommended torque is 20 in-lbs (2.5 N-m).*

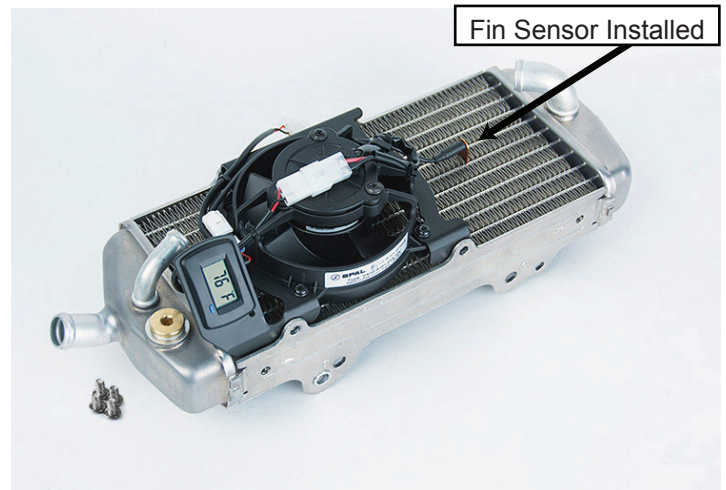

PRE-2008 4-STROKE KTM FAN KIT INSTALLATION INSTRUCTIONS

STEP 4

Once bracket and fan are mounted to the radiator install the Radiator Fin Temperature Sensor. **TIP:** To Compensate for the influence of ambient air passing across the sensor, apply thermal grease (included in kit) into the gap between the fins of the radiator where the sensor will be installed. It is important to place the grease only in the gap. Grease on the surface of the radiator will attract dirt and reduce function.

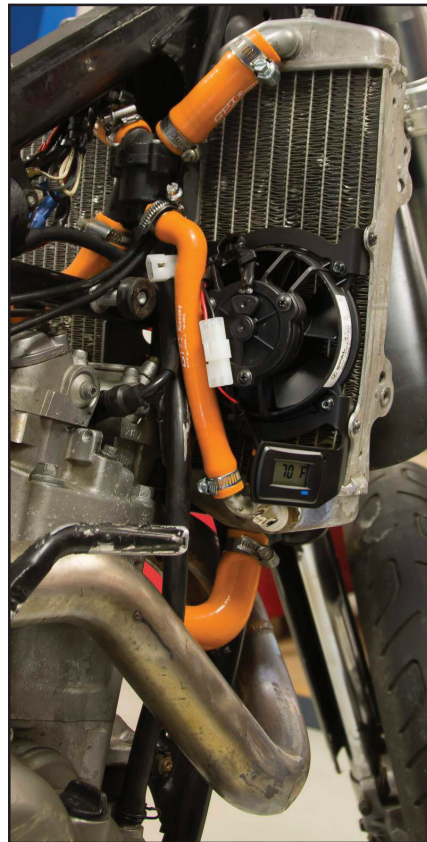

STEP 5

Install radiator back onto the bike and then plug the power lead from the Fan into the power wire harness that was installed in Step 1. Then install the Radiator Fin Temp Sensor into the radiator fins using the provided thermal paste.

STEP 6

Make sure all wiring is tied out of the way to keep from being pinched or rubbed when seat, tank, and shrouds are installed back on the bike. Reinstall the seat, gas tank, and radiator shrouds back on the bike. Lastly follow the included TTV Temperature Manual to set the TTV meter to the designed activation temperature.



PRE-2008 4-STROKE KTM FAN KIT INSTALLATION INSTRUCTIONS

CHANGING TEMPERATURE UNITS AND FAN SETTING:

CHANGING TEMPERATURE UNITS AND FAN SETTING:

SETTING MENU

To enter set up menu, press and hold blue button for 3 seconds.
Release when all LCD segments flash on.

SET TEMPERATURE UNIT

Select Fahrenheit or Celsius by pressing blue button.

TEMPERATURE SETTING

After temperature unit is selected, wait 5 seconds and the word "Hi" will display. Press and hold blue button to increment or decrement. Arrow in lower left corner indicates direction of adjustment. The direction of adjustment will change automatically in 3 seconds if button is not pressed. After 3 more seconds the meter will automatically exit setup mode and resume current temperature display.



Disclaimer: Trail Tech's Fan Kit does not guarantee your vehicle will not overheat. If steam is present or engine temperature is high, please stop and wait for engine to cool. Overheating may cause engine damage.