



## Honda CBR600RR

V.A.L.E.™ Slip-on Exhaust System with M-2 Canister  
Part # 005-36704



### Parts List

Qty.	Description	Part Number
1	CBR600RR M-2 Muffler Canister	Varies
1	CBR600RR Slip-On Tube	005-36704S
1	Barrel Clamp	005-27-63MSH
1	"L" Brackets (Set of 2)	005-367B
2	6mm Flange Nuts	005-FN6
2	8mm Flange Nuts	005-FN8
2	8x16mm Socket Head Cap Screw	005-SH816
1	C-2/M-2 Replacement Oval Clamp (Set of 2)	005-2C-6A
1	X-Ring Kit	005-7-2-3KIT
1	TBR Sticker Kit	015-10212

### IMPORTANT - PLEASE READ CAREFULLY

*Two Brothers Racing products are intended for closed course competition purposes only.*

*We recommend that this performance part be installed by a qualified motorcycle technician. If you have any doubts as to your ability to install this performance part, please consult with your local motorcycle dealer. Read all instructions first before starting installation. Make sure the motorcycle and exhaust system are completely cool before starting the installation. Also, make sure the bike is secure on a centerstand or ideally a service lift during installation. Be sure to save all stock components for possible use later.*

### Installation Instructions

1. Make sure the bike is completely cool before starting the installation. Make sure the bike is secure on the sidestand or ideally a rear service stand.
2. Remove passenger seat and main seat.



3. Remove bolts from rear cowling and slide cowling back.



4. Disconnect modular connector on the left side of the bike leading to the tail light assembly.



5. Remove the tail light assembly bolts and slip the tail light assembly back.




6. Remove the side bolt and one top bolt securing the heat shield.




7. Remove right side plastic cover from over exhaust tube heat shield.



8. Remove bolt securing lower end of exhaust tube heat shield (above driver's right footpeg mount).

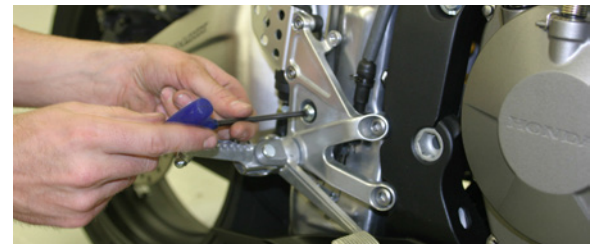

9. Remove right side passenger footpeg.

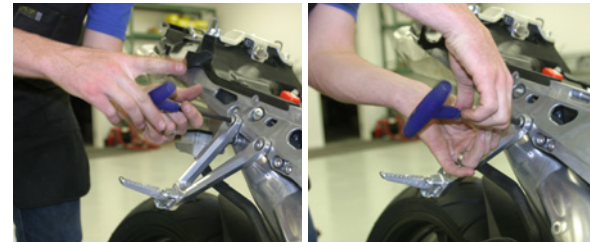

10. Remove upper bolt. This bolt will not be used with the TBR exhaust.




11. Remove right side driver's footpeg bolts and carefully remove the exhaust tube heat shield behind.



## Installation Instructions



12. Loosen the OEM barrel clamp connecting the exhaust tube and header.

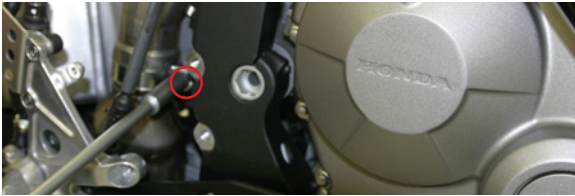

13. Carefully remove muffer and exhaust tube with heatshield.




14. Remove metal OEM exhaust gasket.



15. Assemble the V.A.L.E.™ unit by slipping the S-bend tube through the X-Lite™ ring. Use the 4 (four) 6 x 14mm bolts and split lock washers to loosely attach the X-Lite™ ring to muffer inlet.

### V.A.L.E.™ Assembly Detail

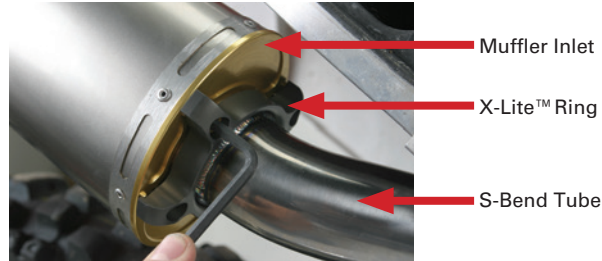

16. Attach the X-Lite™ V.A.L.E.™ assembly to the muffer canister using the 4 (four) 6mm x 14mm socket head cap screws. Leave loose for now.



17. Re-install OEM under tail heat shield.  
18. Assemble the 2 (two) halves of the muffer clamp and "L" brackets as shown below using the supplied 8mm flange nuts and 8mm socket head cap screws.



19. Attach muffer clamp assembly under the heat shield using the 2 OEM bolts and 6mm nuts.



20. Remove upper & lower half of muffer clamp assembly and carefully slide muffer assembly into place making sure that exhaust tube & barrel clamp slip over collector.



21. Slip upper & lower halves of muffer clamp onto muffer canister and attach to "L" brackets using supplied 8mm nuts and 8mm bolts.



22. Making sure that the muffer canister is aligned correctly, securely tighten the 8mm bolts connecting the muffer clamp halves to the "L" brackets.



23. Securely tighten barrel clamp.




24. Securely tighten the 6 x 14mm socket head cap screws in the X-Lite™ V.A.L.E.™ assembly. Check for clearance of exhaust tube & muffer to make sure they do not make contact with anything. Adjust if necessary.



## Installation Instructions Continued

25. Replace exhaust tube heat shield, driver's footpeg, passenger footpeg, and plastics over exhaust tube heat shield.

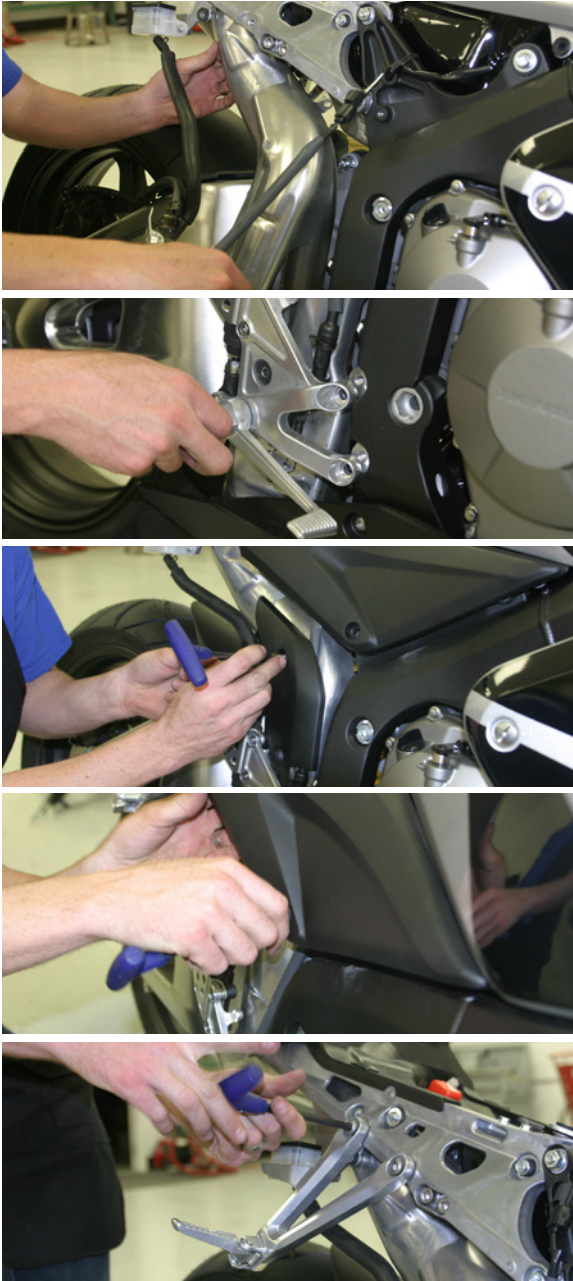

26. Replace tail light assembly, reconnect wiring and replace rear cowling, passenger & driver seats.



27. Before you run the bike, clean off all fingerprints and dirt, as any oily residue will etch the metal and become somewhat permanent when the system gets hot. Run the bike and enjoy. It is normal for some white smoke to appear the first time you start the bike. This is packing/manufacturing oil from inside the pipe burning off. Check for gaps or leaks. If you find a leak, a little high temperature silicon sealant should fix it. After 50 to 100 miles, recheck all fasteners for tightness.



Qty.	Description	Part Number
1	CBR600RR M-2 Muffer Canister	Varies
1	CBR600RR Slip-On Tube	005-36704S
1	Barrel Clamp	005-27-63MSH
1	"L" Brackets <b>(Set of 2)</b>	005-367B
2	6mm Flange Nuts	005-FN6
2	8mm Flange Nuts	005-FN8
2	8x16mm Socket Head Cap Screw	005-SH816
1	C-2/M-2 Replament Oval Clamp <b>(Set of 2)</b>	005-2C-6A
1	X-Ring Kit	005-7-2-3KIT
1	TBR Sticker Kit	015-10212

## Care & Cleaning

### Care & Cleaning

Keep system free of dirt and moisture. Store in a cool, dry place. Make sure vehicle is completely cool before maintenance.

**Stainless Header System:** Polished stainless steel pipes will turn a light golden hue after a few heat cycles, this is a normal characteristic of high quality stainless steel. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Titanium Header System:** Polished titanium pipes will experience color shift ranging from deep blue/purple through amber after a few heat cycles. This is a normal characteristic of high quality titanium. Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Polished Aluminum Canisters:** Use an aluminum or mag wheel polish to restore the bright finish to factory spec.

**Brushed Aluminum Canisters:** Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth.

**Carbon Fiber Canisters:** Clean using a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

**Titanium Mufflers:** For cleaning use a mild water based spray cleaner. Always apply cleaner or polish with a soft, clean cloth. Always make sure the fiberglass packing inside is in good condition and not burned out, as exhaust heat inside an empty canister will deteriorate the carbon fiber sleeve. TBR sells repack kits (Road - #005-10038, Offroad - #005-10038MX) that include everything you need to easily do it yourself.

Repack all road canisters every 3,000 miles. Part #005-10038  
Repack all offroad canisters after every 10 hours of use. Part #005-10038MX

**NEVER** dyno test your bike with carbon fiber or titanium canisters installed - the intense heat and lack of cooling air can quickly burn through the canister material. Two Brothers Racing does not provide a warranty for burned canisters.