# **Fi2000**®

### Items Supplied >

- 1 Fi2000R Fuel Injection Module
- 2 Zip Ties, (2): 3/32" x 6"
- 3 Velcro Strip

## Application(s) >

Kawasaki Vulcan 2000 04-10

ction Manual > 92-1964	Page 1 of 3
Read all instructions carefully and completely before installing your new Fi2000R module. It is recommended that a qualified mechanic or technician install this product. Before installing the Fi2000R it is recommended that the gas tank be low on fuel.	
Remove the right side cover, passenger and main seats. Remove the triangular chr the left side of the engine by removing one Phillips screw, then pull away.	ome cover on
Underneath the triangular cover there are three electrical connectors in a row, unple ( <i>HINT</i> : pull prong on upper part of each connector outward with thin screwdriver), a wires from the bracket, see Figure 3. Next, remove the bolt (12mm head), at the re tank and ease the fuel tank back until it releases from the rubber attachments at the	nd free the ar of the fuel
Lift the fuel tank enough from the rear so access is gained to the fuel line quick dis left side directly behind the three connectors that were previously disconnected. T disconnect has orange tabs which need to be pushed halfway through the connect line may be pulled downward and disconnected. Next, disconnect the vent line(s) a the tank and lift the fuel tank clear of the cycle. Place it safe location.	he quick or then the fuel
Temporarily position the Fi2000R on top of the battery box and route the harness for underneath the seat mount bracket, along the right side of the top frame tube and existing wire-harness securing clamps and rubber tank cushion.	
The black vacuum hose above the cylinder heads on the right side of the cycle may temporarily disconnected to gain access to the injector connectors. Locate and re- gray fuel injector connectors from the injectors by squeezing the locking tab and p <i>ATTENTION</i> to front and rear connector positions. Now, starting with the front injector matching gray female Fi2000R connector, (gray connector furthest from the module injector until it locks into place, see Figure 2. Repeat this process with the rear injector gray female Fi2000R connector. Re-connect the original front and rear gray female connectors into the corresponding black male Fi2000R connectors and position the does not interfere with other hoses	emove the two ulling. <i>PAY</i> ctor, install the e) on to the ector and other e Kawasaki
Remove the bolt (8 mm head), from the right-side frame tube directly in front of the bracket and attach the Fi2000R ground wire, see Figure 3. Velcro the Fi2000R more plastic to the rear of the shock, see Figure 2. Position the fuel tank back on cycle the three connectors previously disconnected. Prior to installing all bolts, seats, a verify your connections electronically Instructions continued to next page!	odule onto the and reconnect
	Read all instructions carefully and completely before installing your new Fi2 It is recommended that a qualified mechanic or technician install this Before installing the Fi2000R it is recommended that the gas tank be low. Remove the right side cover, passenger and main seats. Remove the triangular chr the left side of the engine by removing one Phillips screw, then pull away. Underneath the triangular cover there are three electrical connectors in a row, unpli ( <i>HINT</i> pull prong on upper part of each connector outward with thin screwdriver), a wires from the bracket, see Figure 3. Next, remove the bolt (12mm head), at the retank and ease the fuel tank back until it releases from the rubber attachments at the Lift the fuel tank enough from the rear so access is gained to the fuel line quick dis left side directly behind the three connectors that were previously disconnected. T disconnect has orange tabs which need to be pushed halfway through the connect line may be pulled downward and disconnected. Next, disconnect the vent line(s) at the tank and lift the fuel tank clear of the cycle. Place it safe location. Temporarily position the Fi2000R on top of the battery box and route the harness funderneath the seat mount bracket, along the right side of the cycle matemporarily disconnected to gain access to the injector connectors. Locate and regray fuel injector connectors from the injectors by squeezing the locking tab and p ATTENTION to front and rear connector positions. Now, starting with the front inje matching gray female Fi2000R connector. Re-connect the original front and rear gray female Fi2000R connector, (gray connector furthest from the modulinjector until it locks into place, see Figure 2. Repeat this process with the rear injegray female Fi2000R connector. Re-connect the original front and rear gray female connectors and position th does not interfere with other hoses Remove the bolt (8 mm head), from the right-side frame tube directly in front of the bracket and attach the Fi2000R gr

REV. A



#### Instruction Manual >

92-1964

Page 2 of 3

7. Remove the door from the Fi2000R module to expose the LED's. Verify the wire connections by, (1), turning the ignition on while watching the 3 LED's. They will all light up for a few seconds, and then go off. This is correct. If there are no lights visible, make sure the side stand is up, bike is in neutral, clutch is in and handlebar engine switch is set to run. If there are still no lights visible, recheck that all connectors are fully engaged and the ground wire is connected correctly. (2), after achieving a steady light from all three LED's, start the motorcycle; the green light should now be the only LED on. If all three LED's are still on after start up, verify the injector connectors are correctly attached. Reattach the access door when finished and install remaining components.

**NOTE:** Make sure the ignition is turned off before changing any connection.

#### ADVANCED TUNING

The Fi2000R has the ability to efficiently tune the EFI system on your motorcycle for slip-on or full exhaust systems. It comes pre-set from the factory for popular brand name slip-on mufflers. Both dyno testing and on-road exhaust gas analysis have been used to develop the best base settings for drivability and power. Not all slip-on mufflers flow exactly the same. Some eliminate power valves and others don't. Some are made with street baffles, other with race or competition baffles. Full exhaust systems offer even greater variation in construction, features and performance. The Fi2000R has the ability to tune the EFI system on your motorcycle to any of these exhausts by applying a logical and systematic approach to altering the base settings supplied with your Fi2000R. These suggestions should be followed step by step and help you achieve success.


#### \*\* Only attempt adjustments on a fully warmed motor \*\*

- 1. Start with the base setting, even if you have a full exhaust system. Adjust and test only *ONE* adjustment pot at a time until you are happy with the result, see Figure 4.
- 2. Start with the left hand or green light pot. This adjustment works either from idle or above idle (varies with bike) to a R.P.M. of about 5000 (also varies with bike) while the bike is driven at a steady throttle or slowly increasing throttle. This is the cruise range and is where the emissions leanness creates issues like choppy on-off throttle application, surging, and backfiring on trailing throttle.
- 3. Turn this pot back to zero, and make one position increases until you feel the best performance in this range. Do this test a few times to make sure you have it right.
- 4. The middle or yellow pot is an engine load- triggered fuel adding adjustment. A rapid increase of the throttle at any R.P.M. will add additional fuel and as long as that predetermined load is present, fuel will continue. As engine loads increase in higher gears the acceleration fuel will stay on longer and be more effective. Starting with the base setting, test ride the motorcycle in 4<sup>th</sup> or 5<sup>th</sup> gear and perform moderately fast roll-on throttle from a repeating standard R.P.M. or speed. Increase the pot one position at a time and stop as soon as you don't feel any improvement.
- 5. The right hand or red pot is for the fuel setting required when the engine is maximizing its R.P.M. and power delivery. This pot is similar to the main jet in a carburetor. It will take a combination of a minimum R.P.M. and a predetermined amount of engine load to initiate this fuel. The straightaway on a racetrack or an inertia dyno are the best places to set this pot. Full exhaust systems of high quality construction increase flow characteristics and will increase fuel demands over our base settings. Also, air filters specifically designed for higher than stock airflow can create need for higher fuel setting. Try an additional one-position pot setting at a time.
- 6. Camshaft changes can alter an engine's volumetric efficiency and create a greater demand on the engine's fuel system than the Fi2000R may have the ability to adjust for.

#### TROUBLE SHOOTING

If you have any problems refer to: Step 7, in the installation body of these instructions.



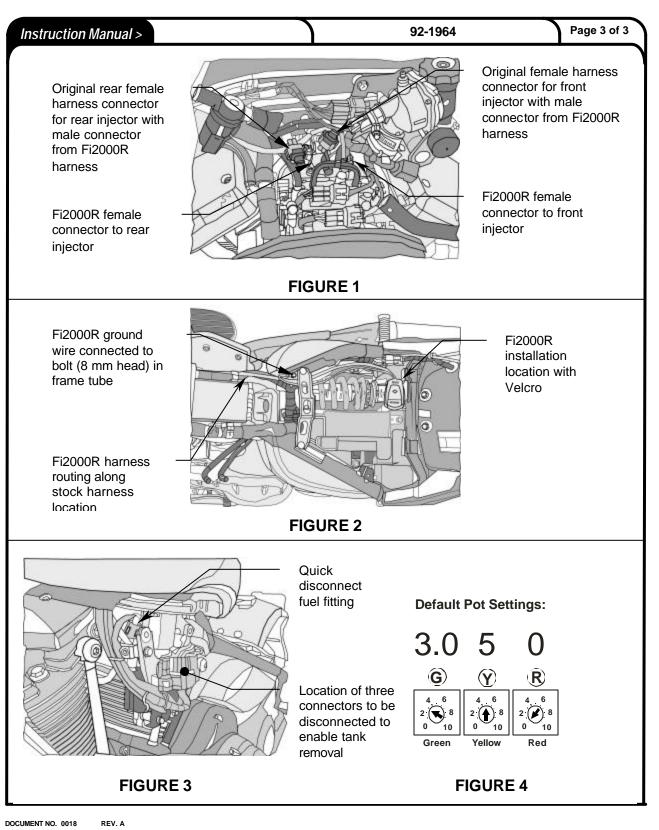

3

11/08