S&S° Cycle, Inc.



Installation Instructions: S&S® Die-Cast Rocker Covers for 1984–'99 and 1999–'15 Harley-Davidson® Big Twin Engines and S&S V-Series and T-Series engines

DISCLAIMER:

S&S parts are designed for high performance, closed course, racing applications and are intended for the very experienced rider only. The installation of S&S parts may void or adversely affect your factory warranty. In addition such installation and use may violate certain federal, state, and local laws, rules and ordinances as well as other laws when used on motor vehicles used on public highways, especially in states where pollution laws may apply. Always check federal, state, and local laws before modifying your motorcycle. It is the sole and exclusive responsibility of the user to determine the suitability of the product for his or her use, and the user shall assume all legal, personal injury risk and liability and all other obligations, duties, and risks associated therewith.

The words Harley®, Harley-Davidson®, H-D®, Sportster®, Evolution®, and all H-D part numbers and model designations are used in reference only. S&S Cycle is not associated with Harley-Davidson, Inc.

SAFE INSTALLATION AND OPERATION RULES:

Before installing your new S&S part it is your responsibility to read and follow the installation and maintenance procedures in these instructions and follow the basic rules below for your personal safety.

- Gasoline is extremely flammable and explosive under certain conditions and toxic when breathed. Do not smoke. Perform installation in a well ventilated area away from open flames or sparks.
- If motorcycle has been running, wait until engine and exhaust pipes have cooled down to avoid getting burned before performing any installation steps.
- Before performing any installation steps disconnect battery to eliminate potential sparks and inadvertent engagement of starter while working on electrical components.
- Read instructions thoroughly and carefully so all procedures are completely understood before performing any installation steps.
 Contact S&S with any questions you may have if any steps are unclear or any abnormalities occur during installation or operation of motorcycle with a S&S part on it.
- Consult an appropriate service manual for your motorcycle for correct disassembly and reassembly procedures for any parts that need to be removed to facilitate installation.
- Use good judgment when performing installation and operating motorcycle. Good judgment begins with a clear head. Don't let alcohol, drugs or fatigue impair your judgment. Start installation when you are fresh.
- Be sure all federal, state and local laws are obeyed with the installation.
- For optimum performance and safety and to minimize potential damage to carb or other components, use all mounting hardware that is provided and follow all installation instructions.
- Motorcycle exhaust fumes are toxic and poisonous and must not be breathed. Run motorcycle in a well ventilated area where fumes can dissipate.

IMPORTANT NOTICE:

Statements in this instruction sheet preceded by the following words are of special significance.



WARNING

Means there is the possibility of injury to yourself or others.



CAUTION

Means there is the possibility of damage to the part or motorcycle.

NOTE

Other information of particular importance has been placed in italic type.

S&S recommends you take special notice of these items.

Introduction


S&S® die-cast rocker cover kits for Harley-Davidson® Evolution® engines (1984-'99) and Twin Cam 88®, 96^{TM} and 103^{TM} engines (1999-later) are similar, but not identical. Mounting holes are larger in the bases for 1999-later engines and in slightly different locations. Because of the different vent systems and mounting-bolt patterns, different rocker housing bases and rocker housing base gaskets are required for the two engines.

All S&S V-Series engines for 1984-'99 models, except 4½" bore engines, require 1984-'99 style rocker cover kit. S&S 4½" bore V-Series engines require 1999-later style rocker covers. Make sure you have the correct rocker cover kit, and follow the appropriate installation procedure.

S&S rocker covers accept valve springs up to 1.660" O.D, and will generally accept valve lifts to .710" without modification. It remains the installer's responsibility to confirm all clearances.

NOTES

- Threads should be cleaned with Loctite® primer or an equivalent before applying Loctite®. S&S has used lacquer thinner with excellent results.
- The installer must check clearances between the valve spring/top collar and rocker cover housing as well as between the rocker arm and top cover.

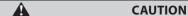

LAUTION

Failure to establish correct clearances can result in extensive engine damage not covered under warranty.

It is the installer's responsibility to use Loctite according to directions printed on the container, and to tighten fasteners to correct torque values. Failure to install fasteners correctly may result in the fastener vibrating loose and causing extensive engine damage not covered under warranty.



Gasoline, lacquer thinner, and many solvents are extremely flammable. Fumes may be explosive and toxic if inhaled. Read and follow the manufacturers' instructions if applicable, and use these materials only in a well ventilated area away from sparks and open flame.

Installation

1. Prepare for rocker cover installation by washing motorcycle, taking special care to remove dirt from engine and surrounding area. Disconnect battery, ground cable. Remove gas tanks and clean engine and surrounding area with compressed air.




Dirt and other contaminants can cause extensive damage if allowed to fall into engine.

▲ WARNING

Sparks from motorcycle electrical system can ignite gasoline fumes, resulting in an explosion. Removing battery eliminates the possibilities of explosion and injury arising from inadvertent activation of the electric starter.

High-pressure air is potentially hazardous. Wear eye protection during use and direct air stream away from face and others nearby.

- **2.** Remove original top rocker cover. Remove pushrod cover retainers from front cylinder pushrods and collapse pushrod covers.
- 3. Lift the rear wheel of the motorcycle with a jack, remove spark plugs, shift transmission into high gear, and turn wheel to rotate engine so that intake and exhaust pushrods/lifters for front cylinder at their lowest point of travel. Front piston will be at TDC on compression stroke with pushrods/lifters at lowest point. Confirm that both pushrods can be rotated with light finger pressure. See Picture 1.

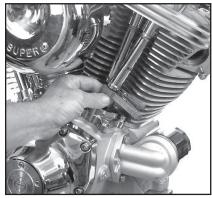

Picture 1

A CAUTION

Failure to confirm correct pushrod position can result in damage to rocker arm support plates and other parts.

- **4.** Remove existing components according to procedures in the service manual for the model you are working on. Take care to keep parts in same order as removed, remove rocker shafts and arms from support (1999-up engines) or lower rocker housing (1984-'99 engines). Mark components according to location: "front intake," etc., so they can be returned to their original locations.
- Remove any remaining gasket material from cylinder head gasket surface, and clean with lacquer thinner.

CAUTION

Lacquer thinner is extremely flammable, potentially explosive, and the fumes toxic when inhaled. Read manufacturer's cautions on container and use only in a well-ventilated area away from sparks and open flame. Place dowels in the holes in the rocker box surface of the cylinder head. Place the gasket on the head over the dowels as shown in Pictures 2 and 3.

7. Place lower rocker housing on cylinder head, aligned by dowel pins

Picture 2 1984-'99 Engines



Picture 3 1999-later Harley-Davdison® Big Twins and S&S 41/8" Bore V-Series Engines

- **8.** Measure clearance between rocker housing and valve spring. See **Picture 4.** Minimum is .025". If clearance is sufficient, call the S&S tech department for assistance.
- 9. Place new o-ring in center of rocker housing.
- **10.** Inspect rocker shafts for burrs and excessive wear; deburr or replace as necessary. Lubricate rocker shafts with assembly lube, place rocker arms in support, and slide shafts through supports and rocker arms. Notches in shafts must face away from center of engine and align with right (camside) bolt holes. **See Picture 5.**
- 11. Check rocker arm endplay by sliding rocker arm as far to one side as possible and measuring gap between rocker arm and support on opposite end. Acceptable endplay is .001" to .012". If endplay is insufficient, carefully remove material from end of rocker arm to achieve correct endplay. Smooth out the area where material was removed. Clean the rocker arm thoroughly to remove any residual abrasive or metal particles before installing in engine.
- 12. Prepare rocker support bolts according to instructions on Loctite® container and apply thin film of Loctite® to threads.
- **13.** Place rocker arm support assembly with rockers in rocker housing. Align pushrod ends with sockets in rockers. Install and tighten four support screws to 15-18 ft-lbs. according to sequence shown in **Figures 1 or 2**. Refer to line drawing on page 3 for correct placement of screws.

14. Install the remaining rocker box screws and tighten according to specifications in **Figures 1 or 2**. Note that screw diameter and torque requirements are different for 1984-99 and 1999-later engines.

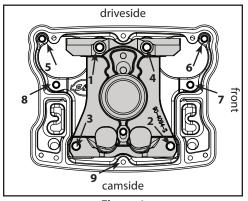


Figure 1

Tightening Sequence and Torque Specifications For 1984-99 Engines					
Screw Position	Diameter	Torque Specification			
1-4	5/16"	18 ft-lb			
5-8	1/4"	120 in-lb			
9	1/4"	100 in-lb			

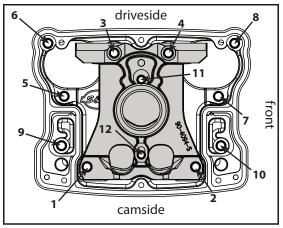


Figure 2

Tightening Sequence and Torque Specifications For 1999-Later Engines					
Screw Position	Diameter	Torque Specification			
1-10	5/16"	18 ft-lb			
11-12	1/4"	100 in-lb			

- **15.** 15 Wait 5-10 minutes and check pushrods. They should spin freely with light finger pressure. Do not turn the engine over before this has been confirmed.
- **16.** Install one flat and one silicone coated washer on each of six ¼-20 x $\frac{3}{4}$ rocker cover screws.

NOTE: Install flat washer on screw first. silicone coated washer goes between flat washer and rocker cover.

2




Picture 4

- **17.** Install rocker cover and tighten screws to 90-100 in-lbs. in sequence shown. **See Figure 3.**
- **18.** Extend pushrod covers and replace retainer clips.
- **19.** Remove retainers and collapse covers of rear cylinder pushrods. Rotate engine to place pushrods at lowest point on cam with rear piston at TDC on compression stroke. Repeat rocker cover removal and installation procedure for rear cylinder.
- **20.** Replace any parts removed for rocker cover installation, start motorcycle and inspect for leaks.




Picture 5

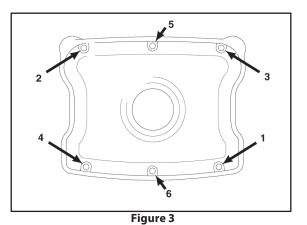

REPLACEMENT PARTS FOR S&S® DIE-CAST ROCKER COVERS FOR 1999-UP HARLEY-DAVIDSON® BIG TWIN ENGINES, S&S T-SERIES, AND S&S 41/8" BORE V-SERIES ENGINES

5

AIN	D 3&3 41/8 BURE V-SERIES ENGINE	E 3
1.	Serenj Societi Lad 11 La 11 (11 B 100)11) (cuch) 111111	
2.	Washer, flat 1/4" (each)	50-7017
	12 pack	50-7013
3.	Washer, silicone coated ¼" (each)	50-7015
	8 pack	50-7015-8
	12 pack	. 50-7015-12
4.	Seal, o-ring	
	(Included in gasket kit see #16 below.)	
5.	Screw, socket head, ¼"-20 x 1"	
	each	
	4 pack	
	10 pack	
6.	Screw, socket head, ¼"-20 x 2" (<i>H-D</i> °25794-36)	
7.	Screw, hex flange head, 5/16"-18 x 2½" (<i>H-D</i> ®3501)	
8.	Support, rocker arm	90-4140
9.	Gasket, rocker cover, Graphite	
	For S&S rocker covers on S&S or stock heads	
	each	
	2 pack	
	10 pack	
	Housing, rocker, Chrome	
	Screw, socket head, 5/16"-18 x 1"	50-0125-S
12.	Seal, rocker cover	
	(Included in gasket kit see #16 below.)	
13.	Washer, flat 5/16" (each)	
	10 pack	50-7082
14.	Screw, socket head 5/4" – 18 x 21/4" (<i>H-D</i> *853A)	
	each	
	10 pack	
	Cover, rocker, chrome	
	Gasket set – rocker cover, cast (Not Shown)	90-4111
17.	Washer, 261" x .474" x .050", Annealed, Stainless Steel	
	each	
4.0	12 pack	
18.	Pin, Dowel, Hollow, .374" x .575", Steel	NA

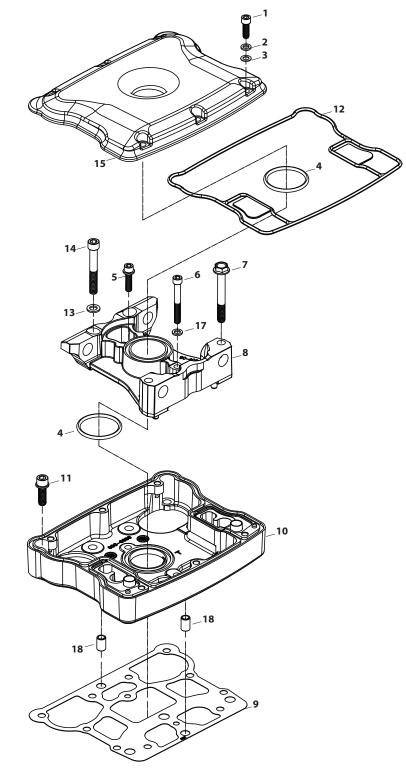

REPLACEMENT PARTS FOR S&S® DIE-CAST ROCKER COVERS FOR 1984-'99 HARLEY-DAVIDSON® BIG TWIN ENGINES AND S&S V-SERIES ENGINES (EXCEPT 41/8" BORE)

V-:	SERIES ENGINES (EXCEPT 41/8" BURE)	
1.	Screw, socket head 1/4"-20 x 3/4" (<i>H-D</i> *4069A) (each)	50-0067
	12 pack	50-0144
2.	Washer, flat 1/4" (each)	50-7017
	12 pack	50-7013
3.	Washer, rubber coated ¼" (each)	50-7015
	8 pack	50-7015-8
	12 pack	
4.	Seal, o-ring (Included in gasket set see #16 below.)	50-8044
5.	Screw, SH 1/4"-20 x 2" (<i>H-D</i> *25794-36)	50-0013
6.	Screw, hex flange head 5/4"-18 x 21/4" (H-D°3501)	50-0123
7.	Support, rocker arm	90-4140
8.	Bottom gasket, rocker housing, 1984-'99 bt (except S&S 41/8	" bore V-Series)
	each	.900-0538
	2 pack	.900-0592
9.	Housing, rocker, chrome (except S&S 41%" bore V-Series)	
	1984-'99 bt	
10	• Screw, SHCS 1/4"-20 x 1" 1984-'99 bt (except S&S 41/8" bore	
	(each)	
	4 pack	
	10 pack	
	S&S 4 1/8" Bore, SHCS 5/16"-18 x 1"	
	• Seal, rocker cover (Included in gasket set see #16 below.)	
12	• Washer, flat 1/46" (<i>each</i>)	
	10 pack	
13	• Screw, SH 1/4" - 18 x 21/4" (<i>H-D</i> 853A) (each)	
	10 pack	
	• Cover, rocker, chrome	.900-0706
15	Gasket Set (N/S)	
	1984-'99 bt	90-4091
16	• Washer, flat, .261"x.474"x.050" Annealed, Stainless Steel	
	each	
4-	10 pack	
17	• Pin, Dowel, Hollow, .374" x .575", Steel	NA

(N/S) = Not Shown

