




# SPH10

Bluetooth® Stereo Headset  
& Intercom



**SENA**

**User's Manual**

© 1998-2016 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc. reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. PRISM™, 20S™, 3S™, SMH10™, SMH10R™, SMH5™, SMH5-FM™, SPH10™, SPH10H™, EXPAND™, SPH10H-FM™, SPH10S™, SR10™, SR10i™, SM10™, Bluetooth Pack for GoPro® are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone, iPod touch are the registered trademark of Apple Inc. Zumo™ is a trademark of Garmin Ltd. or its subsidiaries. TomTom™ is the trademark or registered trademark owned by TomTom International B.V. Other trademarks and tradenames are those of their respective owners.

**CONTENTS**

1. INTRODUCTION.....	5	9. SPH10 CONFIGURATION SETTING .....	18
2. PACKAGE CONTENTS .....	6	9.1 Assigning Speed Dial .....	18
3. WEARING THE SPH10.....	7	9.2 Enabling/Disabling Voice Activated Phone Answering .....	19
3.1 Microphone Installation.....	7	9.3 Enabling/Disabling Voice Activated Intercom .....	19
3.2 Placing the Headset on Your Ear .....	8	9.4 Enabling/Disabling Voice Prompts .....	20
4. POWERING ON/OFF AND CHARGING.....	8	9.5 Enabling/Disabling Sidetone.....	20
4.1 Powering On.....	8	9.6 Enabling/Disabling Advanced Noise Control™ .....	21
4.2 Powering Off.....	8	9.7 Delete all Bluetooth Pairing Information .....	21
4.3 Charging .....	8	9.8 Exit Voice Configuration Menu .....	21
4.4 Low Battery Warning.....	9	10. FUNCTION PRIORITY.....	22
4.5 Checking the Battery Level.....	9	11. STEREO MUSIC .....	23
5. VOLUME ADJUSTMENT .....	9	11.1 By Stereo Audio Cable.....	23
6. PAIRING THE SPH10 WITH BLUETOOTH DEVICES.....	10	11.2 By Bluetooth Wireless Stereo .....	23
6.1 Mobile Phone Pairing .....	10	12. MOBILE PHONE CALL MAKING AND ANSWERING .....	24
6.2 Multipoint Pairing.....	10	12.1 Mobile Phone Call Making and Answering .....	24
6.3 Bluetooth Stereo Device Pairing.....	11	12.2 Speed Dialing.....	25
6.4 Bluetooth GPS Navigation Pairing.....	11	13. TWO-WAY INTERCOM .....	26
6.5 Pairing with the Sena SR10, Bluetooth Two-way Radio Adapter .....	14	13.1 Start and End Two-way Intercom .....	26
7. PAIRING WITH SELECTIVE PROFILE: A2DP STEREO OR HANDSFREE .....	15	13.2 Intercom and Mobile Phone Call.....	27
7.1 A2DP Stereo Music Only.....	15	13.3 Intercom and GPS .....	28
7.2 HFP for Phone Call Only.....	16	13.4 Intercom and Two-way Radio.....	28
8. INTERCOM PAIRING .....	16	14. THREE-WAY CONFERENCE INTERCOM .....	29
8.1 Pairing with Other SPH10 Headsets for Intercom Conversation .....	16	14.1 Start Three-way Intercom.....	29
8.2 Pairing with Other Sena Headset Models for Intercom Conversation .....	17	14.2 End Three-way Intercom .....	31
		15. FOUR-WAY CONFERENCE INTERCOM .....	31
		15.1 Start Four-way Intercom .....	31
		15.2 End Four-way Intercom .....	32

16. UNIVERSAL INTERCOM.....	32
16.1 Universal Intercom Pairing .....	32
16.2 Two-way Universal Intercom .....	33
16.3 Three-way Universal Intercom.....	33
16.4 Four-way Universal Intercom.....	35
17. MUSIC SHARING .....	37
18. THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT .....	37
19. INTERCOM FAILURE .....	38
20. INTERCOM RECONNECTION .....	39
21. RESET TO FACTORY DEFAULT SETTINGS.....	39
22. FAULT RESET .....	40
23. FIRMWARE UPGRADE .....	40
24. SENA BLUETOOTH CONNECTION CASE STUDIES.....	41
25. OPERATION QUICK REFERENCE.....	48
CERTIFICATION AND SAFETY APPROVALS.....	49
• FCC Compliance Statement .....	49
• FCC RF Exposure Statement .....	49
• FCC Caution .....	49
• CE Declaration of Conformity .....	49
• Industry Canada Statement .....	50
• Bluetooth License .....	50
• WEEE (Waste Electrical and Electronic Equipment ).....	50
SAFETY INFORMATION .....	51
• Product Storage and Management .....	51
• Product Use .....	51
• Battery .....	52

## 1. INTRODUCTION

Thank you for choosing the Sena SPH10, Bluetooth Stereo Headset and Intercom for outdoor sports and activities. With the SPH10, you can call handsfree on your Bluetooth mobile phone, listen to stereo music or voice instructions of GPS navigations by Bluetooth wirelessly, and have intercom conversations in full duplex with other SPH10 users.

The SPH10 is compliant with the Bluetooth 3.0 supporting the following profiles: Headset Profile, Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), and Audio Video Remote Control Profile (AVRCP). Please check with the manufacturers of other devices to determine their compatibility with this headset.

Please read this user's guide carefully before using the headset.

The SPH10 features:

- Bluetooth handsfree for Bluetooth mobile phones
- Bluetooth stereo headset for Bluetooth audio devices such as MP3 players
- Bluetooth stereo headset for Bluetooth GPS navigations
- Bluetooth intercom up to 900 meters (980 yards)\*
- Four-way conference intercom
- Three-way conference phone call with intercom participant
- Multipoint Bluetooth pairing with GPS navigation or Sena SR10 Two-way Radio Adapter
- Multipoint Bluetooth for dual mobile phone
- Universal Intercom™
- Speed Dialing
- Sidetone
- Advanced Noise Control™
- Stereo music by 2.5mm audio cable
- Firmware upgradeable

Key Specifications:

- Bluetooth 3.0
- Supporting profiles: Headset Profile, Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), Audio Video Remote Control Profile (AVRCP)

-----  
\* in open terrain

## 2. PACKAGE CONTENTS

### • SPH10 Headset

#### Jog Dial

- Answer and end a mobile phone call
- Reject an incoming mobile phone call
- Start and end intercom conversation
- Volume adjustment by rotating
- Play and pause Bluetooth stereo device
- Track-forward and track-back by rotating while pressing the button
- Enter into intercom pairing mode
- Enter into voice configuration setting
- Navigate through configuration menu

#### Microphone

#### Status LED



#### Phone Button

- Answer and end a mobile phone call
- Speed dial
- Call transfer between mobile phone and headset
- Enter into mobile phone pairing mode
- Enter into Bluetooth stereo device pairing mode
- Enter into factory reset mode



#### DC Power Charging & Firmware Upgrade Port

<Right side>

- **Boom Microphone**



- **Mini Microphone**



- **USB Power & Data Cable**



- **Stereo Audio Cable**



- **Boom Microphone Sponges**



- **Mini Microphone Sponges**



- **Rubber Earpads**





## 3. WEARING THE SPH10

### 3.1 Microphone Installation

Two microphones are included in the package: a long-boom microphone for high noise environment and a short microphone for indoor use.


Plug the microphone into the microphone port to fit triangle marks as described in the below picture. Adjust the direction of the long-boom microphone so that the "II" mark on the microphone is pointing towards your mouth.

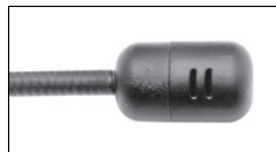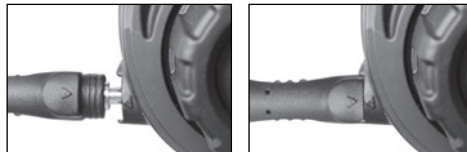

Since SPH10 is mostly exposed on external environment where noise prevails, microphone can be selected according to the noise level. For the highly noisy environment, boom-microphone is recommended allowing microphone to stay near user's mouth. For the less-noisy environment, mini microphone is recommended allowing users to move freely.

### 3.2 Placing the Headset on Your Ear

The speaker with microphone should be placed on the left ear. Then you can place earhooks over ears as shown:

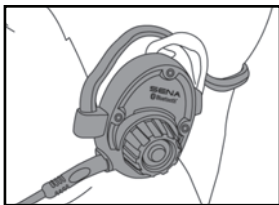

## 4. POWERING ON/OFF AND CHARGING

To power on and off the headset, you don't need to press and hold any button for several seconds. Just short press the Jog Dial and the Phone Button simultaneously, and you will get quick on-and-off convenience.

### 4.1 Powering On

Press the Jog Dial and the Phone Button at the same time for about 1 second to power on. The blue LED turns on and you will hear ascending beeps.

### 4.2 Powering Off

Just short press the Jog Dial and the Phone Button simultaneously, you don't need to press and hold for a few seconds. The red LED turns on for a while until it turns off completely and you will hear descending beeps.

### 4.3 Charging

The LED turns on red while charging, and turns to blue when the headset is fully charged. It takes about 2.5 hours to be completely charged.



#### 4.4 Low Battery Warning

When the battery is low, the blinking blue LED in stand-by mode turns to red and you will hear mid-tone triple beeps and a voice prompt saying “**Low battery**”.

#### 4.5 Checking the Battery Level

You can check the battery level in two different ways when the headset is powering on.

##### 4.5.1 LED Indicator

When the headset is powering on, the red LED flashes rapidly indicating the battery level.

4 flashes = High, 70~100%

3 flashes = Medium, 30~70%

2 flashes = Low, 0~30%

##### 4.5.2 Voice Prompt Indicator

When you power on the headset, keep pressing the Jog Dial and Phone Button simultaneously for about 3 seconds until you hear high tone triple beeps. Then you will hear voice prompt indicating the battery level. However, if you release the buttons as soon as the headset turns on, you will not hear the voice prompt of battery level indication.

## 5. VOLUME ADJUSTMENT

You can easily adjust the volume by rotating the Jog Dial. You will hear a beep when the volume reaches maximum or minimum level. The volume is set and maintained independently at different levels for each audio source even when you turn off and on the headset. For example, once you set the volume for mobile phone handsfree, it will not change even if you adjust the volume when you hear Bluetooth MP3 music. So you can always maintain the preferred optimum volume level for each audio source.

## 6. PAIRING THE SPH10 WITH BLUETOOTH DEVICES

Before using the SPH10 Bluetooth headset with any of Bluetooth devices for the first time, you need to do the pairing operation. It can be paired with Bluetooth mobile phones, Bluetooth stereo devices such as MP3, or motorcycle specific Bluetooth GPS, and with other Sena Bluetooth headsets. This pairing operation is only required once for each Bluetooth device. The headset will remain paired with the devices and automatically connects to the paired devices again when they are within range. You will hear a high tone single beep and a voice prompt when the headset connects to the paired device automatically: **“Phone connected”** to a mobile phone, **“Media connected”** to a Bluetooth stereo device.

### 6.1 Mobile Phone Pairing

1. Turn on the SPH10 and press the Phone Button for 5 seconds until the LED flashes red and blue alternately and you hear multiple beeps. You will hear a voice prompt saying **“Phone pairing”**.

2. Search for Bluetooth devices on your mobile phone. Select the Sena SPH10 in the list of the devices detected on the mobile phone.
3. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.
4. The mobile phone confirms that pairing has completed and the SPH10 is ready to use. You will hear a voice prompt from the SPH10 saying **“Your headset is paired”**.
5. If the pairing process is not completed within three minutes, the SPH10 will return to stand-by mode.

### 6.2 Multipoint Pairing

Typical Bluetooth headsets can connect with only one HFP (Hands-Free Profile) device, but multipoint pairing allows the headset to connect with two HFP devices at the same time. So, when you already have a mobile phone connected with the SPH10, you can also pair and connect a second mobile phone or other HFP devices such as GPS or Sena SR10, Bluetooth adapter.

1. To pair the second mobile phone, press the Jog Dial for 5 seconds again until the red LED is rapidly flashing and you hear multiple beeps.

2. Within 2 seconds, tap the Phone Button again, then the LED turns to blue flashing and the beeps turn to high tone double beeps. You will hear a voice prompt saying **“Multipoint pairing”**.
3. Search for Bluetooth devices on your mobile phone. Select the Sena SPH10 in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.
5. The mobile phone confirms that pairing has completed and the SPH10 is ready to use. You will hear a voice prompt from the SPH10 saying **“Your headset is paired”**.
6. If you want to pair a GPS by multipoint pairing, search for the Bluetooth device on the GPS screen, and select the Sena SPH10 at step 3. Please refer to the section “6.4.1 Multipoint GPS Pairing” for more details.
7. If you want to pair the Sena SR10, Bluetooth adapter, please refer to the section “6.5 Pairing with the Sena SR10, Bluetooth Two-way Radio Adapter”.

## 6.3 Bluetooth Stereo Device Pairing

1. If the Bluetooth stereo device is integrated with the mobile phone such as smartphones, you don't need to pair the SPH10 with it separately. When the SPH10 is paired with the mobile phone, it is also paired as a stereo music device.
2. If you have a stand alone Bluetooth stereo device, follow the pairing procedure separately. The procedure is the same as the procedure in “6.1 Mobile Phone Pairing”.

### *Note:*

1. *If Bluetooth connection between the headset and a mobile phone is disconnected, tap the Phone Button to recover the Bluetooth connection immediately.*
2. *If Bluetooth connection between the headset and a media player is disconnected, press the Jog Dial for 1 second to recover the Bluetooth connection and play.*

## 6.4 Bluetooth GPS Navigation Pairing

You can listen to voice instruction from Bluetooth GPS navigation. Some GPS systems use mobile phone profile (HFP, Hands-Free Profile) and others use stereo music profile (A2DP, Advanced Audio Distribution Profile). Most motorcycle specific GPS

systems use mobile phone profile for turn-by-turn voice instruction. You can simultaneously use a mobile phone and a GPS which uses mobile phone profile by one of the following procedures.


#### 6.4.1 Multipoint GPS Pairing

If you use GPS only for turn-by-turn voice instructions, not for Bluetooth stereo music streaming, multipoint pairing is recommended for the GPS connection. Multipoint Bluetooth pairing allows the SPH10 to connect two HFP devices at the same time: mobile phone and GPS navigation. Follow the steps below to pair the GPS using the multipoint pairing.

1. Turn on the headset and press the Jog Dial for 5 seconds until the red LED is rapidly flashing and you hear multiple beeps.
2. Within 2 seconds, tap the Phone Button again, then the LED turns to blue flashing and the beeps turn to high tone double beeps. You will hear a voice prompt saying **“Multipoint pairing”**.
3. Search for Bluetooth devices on the GPS navigation screen. Select the Sena SPH10 in the list of the devices detected on the GPS.
4. Enter 0000 for the PIN.


5. The GPS confirms that pairing has completed and the SPH10 is ready to use. You will hear a voice prompt from the SPH10 saying **“Your headset is paired”**.
6. If the pairing process is not completed within three minutes, the SPH10 will return to stand-by mode.

The pairing diagram for multipoint GPS pairing is shown in the figure below.

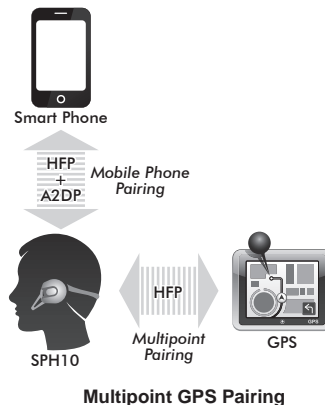

### 6.4.2 GPS Pairing as Mobile Phone

If GPS is not only used for turn-by-turn voice instructions but also is your preferred Bluetooth stereo music source, you can pair the GPS to the SPH10 by following the simple procedures in “6.1 Mobile Phone Pairing”. When you do this, the SPH10 thinks the GPS is a mobile phone so you can no longer pair your mobile phone to the SPH10 directly. However, since some GPS systems support mobile phone bridging over Bluetooth, you can pair the mobile phone to the GPS to use your mobile phone. Please refer to the user’s guide of your GPS for details.

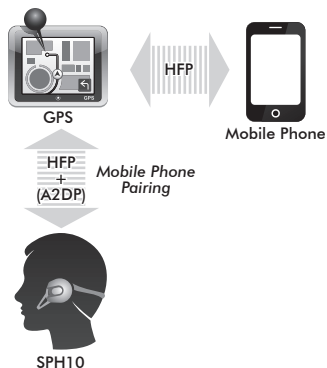

#### GPS Pairing as Mobile Phone

*Note:*


*You have to use a motorcycle specific GPS which transmits turn-by-turn voice instruction to the headset by Bluetooth. Most automotive GPS systems don't have this feature.*

## 6.5 Pairing with the Sena SR10, Bluetooth Two-way Radio Adapter

The Sena SR10 is a Bluetooth two-way radio adapter for group communication, and uses HFP as do most motorcycle specific GPS navigation systems. If you pair the SPH10 with a SR10 by multipoint pairing, the SPH10 is able to have two HFP devices at the same time: mobile phone and Sena SR10.

1. Turn on the headset and press the Jog Dial for 5 seconds until the red LED is rapidly flashing and you hear multiple beeps.
2. Within 2 seconds, tap the Phone Button again, then the LED turns to blue flashing and the beeps turn to high tone double beeps. You will hear a voice prompt saying **“Multipoint pairing”**.
3. Turn on the SR10 and follow the SR10’s “Bluetooth Headset Pairing” procedure to complete the process. Please refer to the SR10 user’s guide for details.
4. When the pairing is completed, you will hear a voice prompt saying **“Your headset is paired”**.
5. If the pairing process is not completed within three minutes, the SPH10 will return to stand-by mode.

The incoming audio from the two-way radio via SR10 is heard in the background while having an intercom conversation or a mobile phone call. You can listen to music, answer a mobile call, have an intercom conversation and use a two-way radio via SR10 for group communication as shown in the figure below. A GPS navigation or a radar detector could be connected to the SR10 by wire. The GPS voice instruction or the radar detector alarm is also heard in the background via SR10 while having an intercom conversation or a phone call. Please refer to the SR10 user’s guide for details.

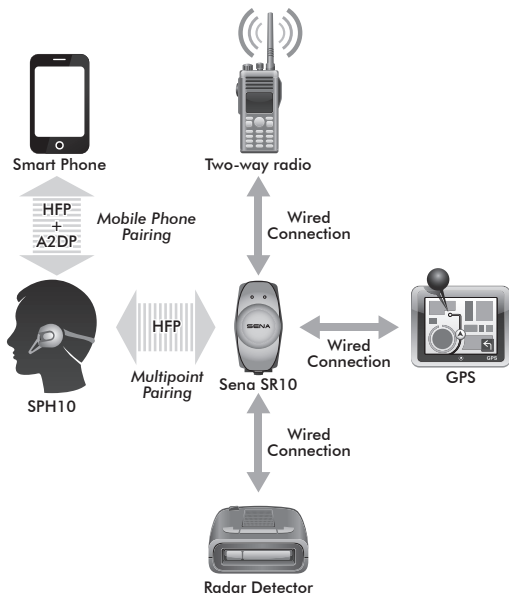

**Parallel Connection of SR10 and Mobile Phone by Bluetooth Multipoint Pairing**

## 7. PAIRING WITH SELECTIVE PROFILE: A2DP STEREO OR HANDSFREE

If you have a MP3 stereo music phone such as a smartphone, sometimes you may need to selectively use the SPH10 for A2DP stereo music only or for mobile phone handsfree only. This instruction is for advanced users who want to pair the SPH10 to their smartphones only with one selective profile: A2DP stereo for music or HFP for phone call.

If you have previously paired a mobile phone to the SPH10, you must clear the previous pairing list on both devices; the mobile phone and SPH10. To clear the pairing list on SPH10, please do a factory reset or follow the pairing list clearing procedure described in this manual. To clear the pairing list on the mobile phone, please refer to the mobile phone manual. For most smartphones, delete the Sena SPH10 from the list of Bluetooth devices in setting menu.

### 7.1 A2DP Stereo Music Only

1. Turn on the headset and press the Phone Button for 5 seconds until the LED flashes red and blue alternately and you hear multiple beeps.

2. Within 2 seconds, tap the Jog Dial again, then the LED turns to red flashing and the beeps turn to double mid-tone beeps. You will hear a voice prompt saying **“Media selective pairing”**.
3. Search for Bluetooth devices on your smartphone. Select the Sena SPH10 in the list of devices detected on your phone.
4. Enter 0000 for the PIN. Some smartphones may not ask for PIN.

### 7.2 HFP for Phone Call Only

1. Turn on the headset and press the Phone Button for 5 seconds until the LED flashes red and blue alternately and you hear multiple beeps.
2. Within 2 seconds, tap the Phone Button again, then the LED turns to blue flashing and the beeps turn to multiple mid-tone beeps. You will hear a voice prompt saying **“Phone selective pairing”**.
3. Search for Bluetooth devices on your smartphone. Select the Sena SPH10 in the list of devices detected on your phone.
4. Enter 0000 for the PIN. Some smart phones may not ask for PIN.


## 8. INTERCOM PAIRING

### 8.1 Pairing with Other SPH10 Headsets for Intercom Conversation

The SPH10 can be paired with up to three other headsets for Bluetooth intercom conversation.


1. Turn on the two SPH10 headsets (A and B) that you would like to pair with each other.
2. Press and hold the Jog Dial of the headset A and B for 5 seconds until red LEDs of the both units start to flash rapidly. You will hear a voice prompt saying **“Intercom pairing”**.
3. Simply tap the Jog Dial of any one of the two headsets A or B (It doesn't matter that you choose A or B.) and wait until the LEDs of both headsets turn to blue and intercom connection is automatically established. The two SPH10 headsets A and B are paired with each other for intercom conversation. If the pairing process is not completed within one minute, the SPH10 will return to stand-by mode.



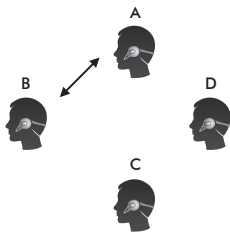


Pairing A &amp; B

4. You can make other pairings between the headset A and C, and between the headset A and D by following the same procedure as above.

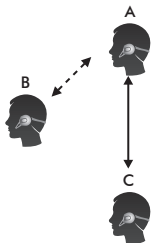

Pairing A &amp; C

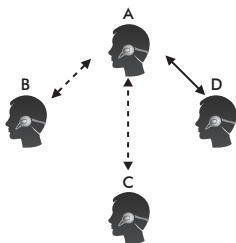

Pairing A &amp; D

5. The intercom pairing queue is '**Last-Come, First-Served**'. If a headset has multiple paired headsets for intercom conversations, the last paired headset is set as **first intercom friend**. The previous intercom friend becomes **second intercom friend, and third intercom friend**.

*Note:*

*For example, after the pairing procedures listed above, headset D is the **first intercom friend** of headset A. Headset C is the **second intercom friend** of headset A, and headset B is the **third intercom friend** of headset A.*

## 8.2 Pairing with Other Sena Headset Models for Intercom Conversation

The SPH10 can be paired with all other Sena headset models such as the SMH5 and the SPH10 for intercom conversation. Please follow the same procedure as above to pair with these headset models.

*Note:*

*The SMH5 cannot participate in three-way or four-way conference intercom with the SPH10 or the SMH10. The SMH5 has a limited capability of having two-way intercom with each other or with other Sena headsets such as the SPH10 and the SMH10.*


## 9. SPH10 CONFIGURATION SETTING

You can set the configuration of the SPH10 by the voice menu instruction as below.

- To enter into voice configuration menu, press and hold the Jog Dial for 12 seconds until the LED shows solid blue and you hear high tone double beeps. You will also hear a voice prompt saying **“Configuration menu”**.
- Rotate the Jog Dial clockwise or counter-clockwise to navigate between the menus. You will hear voice prompts for each menu items as below.
- You can enable the feature or execute the command by tapping the Phone Button, or disable the feature by tapping the Jog Dial.
- If any button is not pressed within 10 seconds, the SPH10 will exit the configuration and goes back to stand-by.
- If you want to exit the configuration immediately, rotate the Jog Dial until you hear a voice prompt saying **“Exit configuration”**, and tap the Phone Button.

The voice prompt for each menu item is as below:

- |                         |                                |
|-------------------------|--------------------------------|
| <b>(1) Speed Dial</b>   | <b>(5) Sidetone</b>            |
| <b>(2) VOX phone</b>    | <b>(6) Noise control</b>       |
| <b>(3) VOX intercom</b> | <b>(7) Delete all pairings</b> |
| <b>(4) Voice prompt</b> | <b>(8) Exit configuration</b>  |

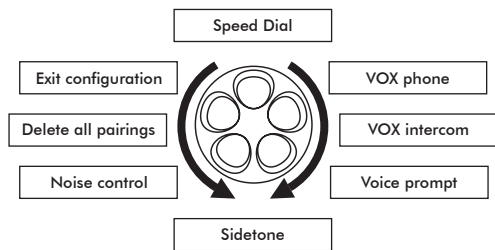

### 9.1 Assigning Speed Dial

Voice Prompt	<b>“Speed dial”</b>
Factory Default	N/A
Execute	Tap the Phone Button

- To assign a phone number as a speed dial, rotate the Jog Dial until you hear a voice prompt saying **“Speed dial”**.

2. Tap the Phone Button, and you will hear a voice prompt saying **“Speed dial one”** and **“Phone connected”**.
3. Rotate the Jog Dial to select one of three speed dial numbers and you hear a voice prompt saying **“Speed dial (#)”**.
4. Call a phone number you want to assign and you will hear a voice prompt saying **“Save speed dial (#)”**. The phone number is automatically assigned to the selected speed dial number. Then the phone call will hang up before being connected.
5. To exit the menu, rotate the Jog Dial clockwise or counter clockwise until you hear a voice prompt saying **“Cancel”**, and tap the Phone Button to confirm. You will then hear a voice prompt saying **“Cancel”**. If any button is not pressed within 1 minute, the SPH10 will exit the configuration menu and go back to stand-by mode.

*Note:*

1. After assigning a phone number to one of three speed dials, you can continually assign another phone number to the rest of two speed dials.
2. You can assign phone numbers to speed dials in your PC.

## 9.2 Enabling/Disabling Voice Activated Phone Answering

Voice Prompt	<b>“VOX phone”</b>
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

If this feature is enabled, you can answer incoming calls by simply saying a word loudly enough. For example, when you hear a series of beeps for an incoming call, you can answer the phone by saying **“Hello”** or any other word loudly. This is enabled from the factory but you can disable this. If this mode is disabled, you have to tap the Jog Dial or the Phone Button to answer an incoming call.

## 9.3 Enabling/Disabling Voice Activated Intercom

Voice Prompt	<b>“VOX intercom”</b>
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

If this feature is enabled, you can initiate an intercom conversation with the last connected intercom

friend by speaking any word loudly enough. The most effortless way to trigger intercom VOX is to blow into the microphone as if blowing dust off the microphone. If you start an intercom conversation by VOX, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the Jog Dial, you have to terminate the intercom conversation manually.

However, even when this feature is enabled, if you terminate intercom conversation manually with the Jog Dial, you are not able to start intercom by voice temporarily. In this case, you have to tap the Jog Dial to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. If you tap the Jog Dial to start an intercom conversation, it is not terminated by 20 seconds of silence. After turning SPH10 off and on, you can start intercom by voice again.

#### 9.4 Enabling/Disabling Voice Prompts

Voice Prompt	<b>"Voice prompt"</b>
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

You can disable voice prompts by configuration setting, but the following voice prompts are always on.

- Voice prompts for configuration setting menu
- Voice prompts for battery level indicator
- Voice prompts for factory reset

#### 9.5 Enabling/Disabling Sidetone

Voice Prompt	<b>"Sidetone"</b>
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

Sidetone is the sound of your own voice as picked up by your headset's microphone and reproduced in your own ear, by your own speaker. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

## 9.6 Enabling/Disabling Advanced Noise Control™

Voice Prompt	<b>"Noise control"</b>
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

When Advanced Noise Control is enabled, the background noise is reduced during an intercom conversation. When it is disabled, the background noise is mixed with your voice during intercom.

### Note:

*If you use your SPH10 with the Bluetooth Audio Pack for GoPro or Prism, you can enable or disable this feature only during Normal Audio Recording Mode. This feature is automatically disabled while in Ultra HD (UHD) Audio Mode.*

## 9.7 Delete all Bluetooth Pairing Information

Voice Prompt	<b>"Delete all pairings"</b>
Factory Default	N/A
Execute	Tap the Phone Button

To delete all Bluetooth pairing information of the SPH10, rotate the Jog Dial until you hear a voice prompt saying **"Delete all pairings"**, and tap the Phone Button to confirm. Tapping the Jog Dial is not available for this setting.

## 9.8 Exit Voice Configuration Menu

Voice Prompt	<b>"Exit configuration"</b>
Factory Default	N/A
Execute	Tap the Phone Button

To exit voice configuration menu and get back to stand-by mode, rotate the Jog Dial until you hear a voice prompt saying **"Exit configuration"**, and tap the Phone Button to confirm. Tapping the Jog Dial is not available for this setting.

Rotate Jog Dial	Tap Phone Button	Tap Jog Dial
Speed Dial	Execute	N/A
VOX Phone	Enable	Disable
VOX Intercom	Enable	Disable
Voice Prompt	Enable	Disable
Sidetone	Enable	Disable
Advanced Noise Control	Enable	Disable
Delete All Pairings	Execute	N/A
Exit Configuration	Execute	N/A

**Voice Configuration Menu & Button Operations**

## 10. FUNCTION PRIORITY

The SPH10 operates in the following order of priority:

- (highest)** Mobile phone,  
Intercom,  
Stereo music by audio cable  
Music sharing by Bluetooth stereo music,
- (lowest)** Bluetooth stereo music


A lower priority function is always interrupted by a higher priority function. For example, stereo music is interrupted by intercom call, and intercom conversation is interrupted by incoming mobile phone call.

## 11. STEREO MUSIC

You can listen to stereo music in two ways: with the enclosed stereo audio cable or by Bluetooth wireless stereo.

### 11.1 By Stereo Audio Cable

Plug your stereo MP3 player directly to the SPH10 by using the enclosed stereo audio jack cable. To adjust the volume, rotate the Jog Dial on the headset. You may adjust the volume on the MP3 player also.

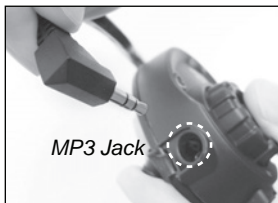

### 11.2 By Bluetooth Wireless Stereo

The Bluetooth audio device must be paired with the SPH10 by following the "Bluetooth Stereo Device Pairing" procedures described in the 6.2 chapter. The SPH10 supports the Audio/Video Remote Control


Profile (AVRCP), so if your Bluetooth audio device also supports the AVRCP, you can use the SPH10 to remotely control music playback.

You not only can adjust the volume but also use the functions such as play, pause, next track and previous track.

1. To adjust the volume, rotate the Jog Dial.



2. To play or pause music, press and hold the Jog Dial for 1 second until you hear a double beep.

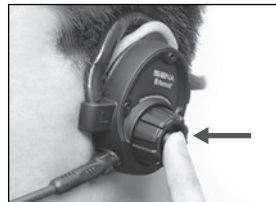

3. To track forward or track back, rotate while pressing the Jog Dial clockwise or counter clockwise.



*Note:*

*Bluetooth music is available only when the MP3 jack port remains open. Please make sure the audio cable is unplugged from the clamp unit to play music by Bluetooth.*

## 12. MOBILE PHONE CALL MAKING AND ANSWERING

### 12.1 Mobile Phone Call Making and Answering

1. When you have an incoming call, simply tap the Phone Button or the Jog Dial to answer the call.
2. You can also answer the incoming call by loudly speaking any word of your choice if Voice Activated Phone Answering is enabled.
3. To end a call, tap the Phone Button or press the Jog Dial for 2 seconds until you hear a beep, or wait for the called person to end the call.
4. To reject a call, press the Jog Dial for 2 seconds until you hear a beep while the phone is ringing.
5. To transfer a call between the mobile phone and the headset during the phone conversation, press the Phone Button for 2 seconds until you hear a beep.
6. There are several ways to make a phone call:
  - Enter numbers on your mobile phone keypad and make a call. Then the call is automatically transferred to the headset.



- For some older mobile phones which do not automatically transfer calls to the headset, press the Phone Button after entering phone numbers on the mobile phone keypad.
- Tap the Phone Button in stand-by mode to activate the voice dialing of your mobile phone. For this, the voice dialing feature must be available on the mobile phone. Refer to your mobile phone manual for further instruction.

*Note:*

1. *If you are using multipoint mobile phone connection and you have an incoming call from the second phone during the call of the first phone, then you may still receive the call from second phone. In this case, the call from the first phone is on waiting mode. If you end a call, then it will automatically guide you to the first phone call.*
2. *If you are using multipoint connection of mobile phone and GPS, you may not be able to listen to the GPS voice instruction during the phone call.*

## 12.2 Speed Dialing

You can quickly make a phone call by using the voice speed dial menu.

1. To enter into the voice speed dial menu, double tap the Phone Button and you will hear a mid-tone single beep and a voice prompt saying “**Speed dial**”.
2. Rotate the Jog Dial clockwise or counter-clockwise to navigate between the menus. You will hear voice prompts for each menu item.
3. Tap the Phone Button or the Jog Dial to select a voice menu among the followings:

**(1) Last number redial**

**(4) Speed dial 3**

**(2) Speed dial 1**

**(5) Cancel**

**(3) Speed dial 2**

4. After selecting the last number redial menu, you will hear a voice prompt saying “**Last number redial**”. Then, to redial the last phone call number, tap the Phone Button or the Jog Dial.
5. To call one of the speed dials, rotate the Jog Dial clockwise or counter-clockwise to navigate between the menus until you hear a voice prompt saying “**Speed dial (#)**”. Then, tap the Phone Button or the Jog Dial.

6. If you want to exit the speed dial immediately, rotate the Jog Dial until you hear a voice prompt saying **“Cancel”**, and tap the Phone Button or the Jog Dial. If any button is not pressed within 15 seconds, the SPH10 will exit the voice speed dial menu and goes back to stand-by mode.

*Note:*

*Make sure that you connect the mobile phone and the headset in order to use the speed dial function.*


Answer	Tap Phone Button or Tap Jog Dial or Say <b>“Hello”</b>
End	Tap Phone Button or Press Jog Dial for 2”
Reject	Press Jog Dial for 2”
Transfer	Press Phone Button for 2”
Call	Use phone keypad
Speed Dial	Double tap Phone Button
Voice Command	Tap Phone Button

**Mobile Phone Call Button Operations**

## 13. TWO-WAY INTERCOM

### 13.1 Start and End Two-way Intercom

1. You can start an intercom conversation with one of any intercom friends by tapping the Jog Dial: single tapping to intercom with the first intercom friend, double tapping with the second intercom friend, and triple tapping with the third intercom friend.

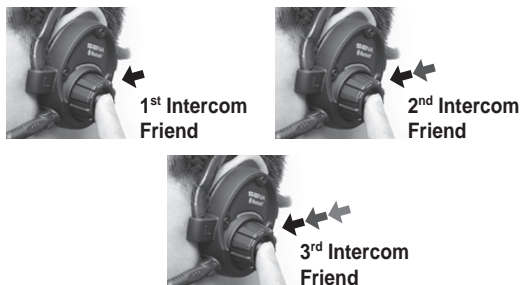

**Start Two-way Intercom Conversation**

2. To terminate an intercom conversation, single tap the Jog Dial. Any intercom connection with

any intercom friend will be terminated by a single tapping. A double or triple tapping will do nothing in this case.



### End Two-way Intercom Conversation

	1st intercom friend	2nd intercom friend	3rd intercom friend
Start intercom	Single tap	Double tap	Triple tap
End intercom	Single tap		

#### Note:

To avoid unintended disconnections by accidentally tapping the Jog Dial, you can lock the current intercom conversation. Rotate while pressing the Jog Dial during intercom to lock or unlock it. When locked, the intercom conversation will not be terminated even if you tap the Jog Dial. If the intercom becomes terminated by the other person, it will be unlocked automatically.

## 13.2 Intercom and Mobile Phone Call


1. When you have an incoming mobile phone call during an intercom conversation, you will hear a ring tone. You can choose whether to 1) answer the mobile phone call and stop the intercom conversation, or 2) reject the phone call and stay on the intercom conversation.
  - a. To answer the phone call and stop the intercom conversation, tap the Jog Dial or the Phone Button. When you hang up the phone call, the intercom will automatically be recovered.
  - b. To reject the phone call and stay on the intercom conversation, press the Jog Dial for 2 seconds until you hear a beep.

Unlike other motorcycle Bluetooth headsets, this prevents a user from being dropped out of an intercom conversation by an incoming mobile call.

2. When you have an incoming intercom call during a mobile phone call, you will hear 4 high tone beeps, alerting you that there is an incoming intercom call. You will also hear a voice prompt saying “**Intercom requested**”. In this case, the intercom call does not override the mobile phone call because intercom has lower priority than mobile call. You have to hang up the mobile phone call to make or receive an intercom call.

### 13.3 Intercom and GPS


If you pair a Bluetooth GPS to the SPH10 as described in 6.3 of this user's guide, you can hear the turn-by-turn voice instruction of the GPS while having an intercom conversation. The GPS voice instruction interrupts intercom conversation, but it is automatically reestablished after the GPS voice instruction ends.

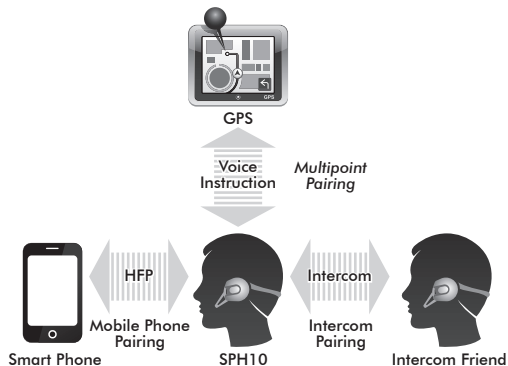

**Intercom and GPS voice instruction**

### 13.4 Intercom and Two-way Radio

As described in 6.4 of this user's guide, you can use a two-way radio and SPH10 Bluetooth intercom simultaneously by using the Sena SR10, a Bluetooth Two-way Radio Adapter, along with the SPH10. Incoming audio from the two-way radio is not interrupting an intercom conversation but is heard in background. This is useful when you have an intercom conversation with a passenger on the back seat and use a two-way radio for group communication with other motorcycle riders.

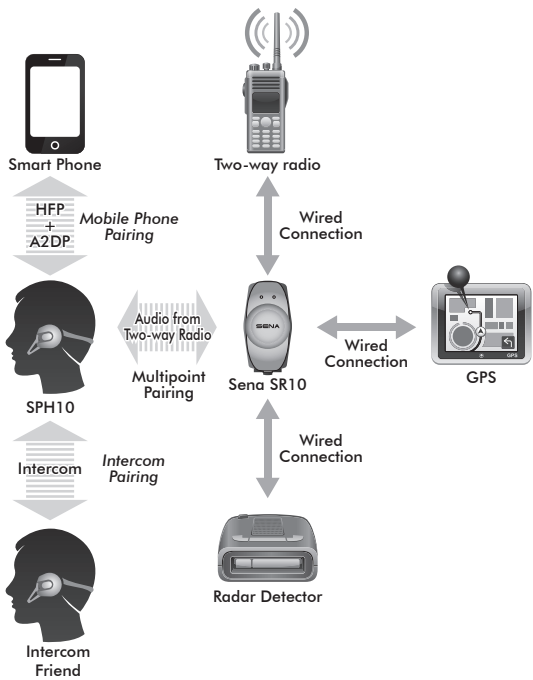


**Intercom and Two-way Radio**

## 14. THREE-WAY CONFERENCE INTERCOM


### 14.1 Start Three-way Intercom

You (A) can have a three-way conference intercom with two other SPH10 friends (B & C) by establishing two intercom connections at the same time. While a three-way conference intercom is in progress, mobile phone connection of all three participants would be temporarily disconnected, but as soon as the conference intercom terminates or one of the participants leaves the intercom, all mobile phones would be automatically reconnected. During the conference intercom, if you have an incoming mobile phone call, terminate the conference intercom to automatically reconnect the mobile phone and receive the call.


1. You (A) need to be paired with two other friends (B & C) for three-way conference intercom.

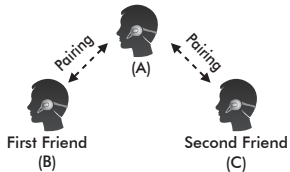


2. Start an intercom conversation with one of the two friends in your intercom group. For example, you (A) may start an intercom conversation with the intercom friend (B). Or intercom friend (B) may start an intercom call with you (A).

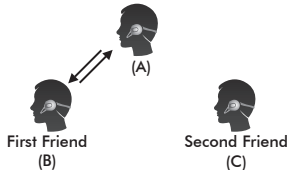

3. The second intercom friend (C) may join the intercom by making an intercom call to you (A).

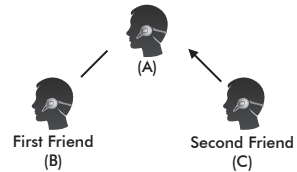

4. Now you (A) and two SPH10 intercom friends (B & C) are having a three-way conference intercom.

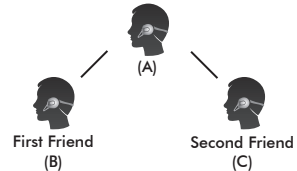

## 14.2 End Three-way Intercom

When you are a member of an active three-way conference intercom, you can completely terminate the conference intercom or just disconnect an intercom connection with one of your active intercom friends.

1. Press the Jog Dial for 1 second until you hear a beep to terminate three-way conference intercom completely. It terminates both intercom connections with (B) and (C).
2. Tap or double tap the Jog Dial to disconnect intercom connection with one of the two intercom friends accordingly. For example, by single tapping the Jog Dial, you can just terminate the intercom connection with the first intercom friend (B). However, you still have the intercom connection with your second intercom friend (C).


Jog Dial Operation	Result
Press for 1"	Disconnect (B) & (C)
Single tap	Disconnect (B)
Double tap	Disconnect (C)

### End Three-way Intercom

## 15. FOUR-WAY CONFERENCE INTERCOM

### 15.1 Start Four-way Intercom

You can have four-way conference intercom with three other SPH10 users by adding one more intercom participant to the three-way intercom. While you are having three-way intercom as above in section 14.1, a new participant (D), who is an intercom friend of your intercom friend (C), may join the conference intercom by making an intercom call to your intercom friend (C). Please note that in this case, the new participant (D) is an intercom friend of (C), not of you (A).

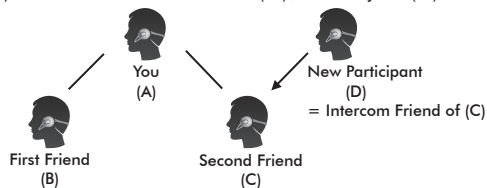

## 15.2 End Four-way Intercom

As same in the case of three-way intercom, you can completely get out of the four-way conference intercom or just disconnect a single intercom connection.

1. Press the Jog Dial for 1 second until you hear a beep to terminate four-way conference intercom. It terminates the intercom connections between you (A), and your intercom friends (B), (C) and (D).
2. Tap or double tap the Jog Dial to disconnect the intercom connection with one of the two intercom friends accordingly. However, when you disconnect the second friend (C) by double tapping the Jog Dial, you will be disconnected with the third participant (D) as well. This is because the third participant (D) is connected with you via the second friend (C).

Jog Dial Operation	Result
Press for 1"	Disconnect (B), (C) & (D)
Single tap	Disconnect (B)
Double tap	Disconnect (C) & (D)

### End Four-way Intercom

## 16. UNIVERSAL INTERCOM

You can have an intercom conversation with non-Sena Bluetooth headsets using the Universal Intercom function. Non-Sena Bluetooth headsets can be connected to the Sena Bluetooth headset if they support the Bluetooth Hands-Free Profile (HFP). The working distance may differ depending on the performance of Bluetooth headset that it is connected to. In general, it is shorter than normal intercom distance since it uses the Bluetooth Hands-Free Profile.

### 16.1 Universal Intercom Pairing

The SPH10 can be paired with non-Sena Bluetooth headsets for Bluetooth intercom conversation. You can pair the SPH10 with only one non-Sena Bluetooth headset; if you pair with a different non-Sena Bluetooth headset, the previous pairing list will be removed.

1. Turn on the SPH10 and a non-Sena Bluetooth headset which you want to pair with.
2. Press and hold the Jog Dial on the SPH10 for 8 seconds until the blue LED flashes rapidly. You will hear a voice prompt saying **“Universal intercom pairing”**.



3. Perform the operation required for handsfree pairing on the non-Sena Bluetooth headset (refer to the users' manual of the headsets you want to use). The SPH10 will automatically perform pairing with non-Sena Bluetooth headsets in pairing mode.

## 16.2 Two-way Universal Intercom


You can initiate the Universal Intercom connection with non-Sena Bluetooth headsets using the same intercom connection method as you would between other Sena headsets. You may single tap the Jog Dial to begin an intercom conversation with the first intercom friend, double tap with the second intercom friend, and triple tap with the third intercom friend.

Non-Sena Bluetooth headsets may initiate the Universal Intercom connection, activating the voice dialing or using the redialing operation. You may also disconnect the existing connection by ending a call operation function (refer to the users' manual of the headsets for voice dialing, redialing, and ending a call).


## 16.3 Three-way Universal Intercom

You may make a three-way Universal Intercom connection with two SPH10s and one non-Sena Bluetooth headset. If the intercom connection is made, all headsets connected cannot use the mobile phone call function since the connection between the headset and the phone is disconnected temporarily. If you disconnect the intercom call, the mobile phone connection is made again automatically so that you can use a mobile phone call function. During the intercom call, you cannot pick up the incoming phone call since it is disconnected, however, you can pick it up if you disconnect the intercom call.


1. You (A) need to be paired with non-Sena Bluetooth headset (B) and another SPH10 headset (C) for the three-way conference intercom.

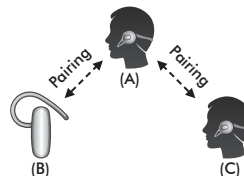


2. Start an intercom conversation with non-Sena Bluetooth headset (B) in your intercom group. For example, you (A) may start an intercom conversation with non-Sena Bluetooth headset (B). The non-Sena Bluetooth headset (B) may also start an intercom call with you (A).

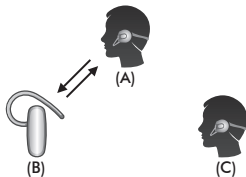

3. The Other SPH10 (C) may join the intercom by making an intercom call to you (A).

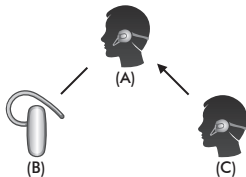

4. Now you (A), non-Sena Bluetooth headset (B), and the other SPH10 (C) are having a three-way conference intercom.

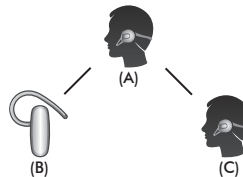

5. You may disconnect the three-way Universal Intercom using the same way as you do in normal three-way intercom. Please refer to section, 14.2 “End Three-way Intercom”.

## 16.4 Four-way Universal Intercom


You may make a four-way Universal Intercom connection with a couple of different configurations, 1) three SPH10s and one non-Sena Bluetooth headset or 2) two SPH10s and two non-Sena Bluetooth headsets.

You may have a couple of other four-way Universal Intercom configurations, 1) your headset (A), a non-Sena Bluetooth headset (B), another SPH10 (C), and a non-Sena Bluetooth headset (D), 2) your headset (A), a non-Sena Bluetooth headset (B), and two other SPH10 headsets (C and D). You may make the four-way Universal Intercom call the same way as a normal four-way intercom call.


### 16.4.1 Four-way Universal Intercom Case 1

Two SPH10 headsets (A and C) and two non-Sena Bluetooth headsets (B and D).


1. You (A) may start an intercom conversation with the non-Sena Bluetooth headset (B).

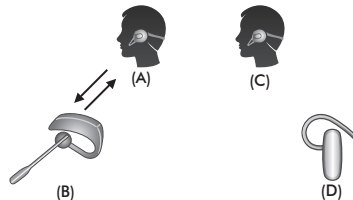


2. The other SPH10 (C) may join the intercom by making an intercom call to you (A).

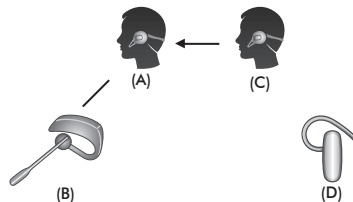

3. The non-Sena Bluetooth headset (D) may join the conference intercom by making an intercom call to the SPH10 (C).

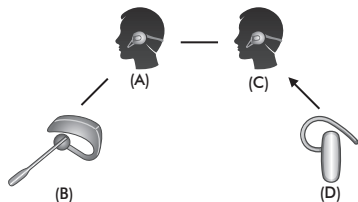


4. Now two SPH10 headsets (A & C) and two non-Sena Bluetooth headsets (B & D) are connected with the four-way Universal Intercom.

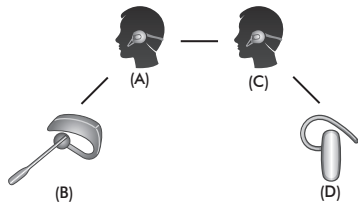

You may disconnect a four-way Universal Intercom using the same way as you do in a normal four-way intercom. Please refer to section, 15.2 “End Four-way Intercom”.

**16.4.2 Four-way Universal Intercom Case 2**

Three SPH10 headsets (A, C and D) and one non-Sena Bluetooth headset (B). The procedure is the same as the case 1 described in section 16.4.1.

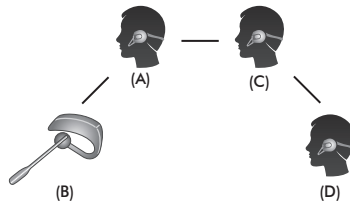

## 17. MUSIC SHARING

You can start sharing music with an intercom friend using Bluetooth stereo music during a two-way intercom conversation. When you terminate music sharing, you can go back to the intercom conversation. To start or terminate sharing music, press and hold the Jog Dial for 1 second during an intercom conversation until you hear a double beep and you and your intercom friend will listen to or terminate sharing music. To track forward or track back, rotate while pressing down the Jog Dial clockwise or counter clockwise.

### *Note:*

- 1. Both you and your intercom friend can remotely control music playback during music sharing such as track forward and track back.*
- 2. When you have an incoming call, make a phone call, or hear the turn-by-turn voice instruction of GPS during music sharing, the function will be paused.*
- 3. In order to share music, make sure that you update both headsets with the firmware that has the music sharing feature, and enable the EDR setting in the Sena Device Manager.*

## 18. THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT

You can have a three-way conference phone call by adding an intercom friend to the mobile phone conversation. While having a mobile phone call, make an intercom call to one of the intercom friends by tapping the Jog Dial to form a three-way conference call with the person on the mobile phone line. To disconnect the intercom first and go back to your private mobile phone call, terminate the intercom by tapping the Jog Dial. To end the mobile phone call first and maintain the intercom conversation, press the Jog Dial for 2 seconds, or tap the phone button, or wait for the person on the mobile phone line to end the call.

Start	Tap Jog Dial while having a mobile phone call
End intercom first	Tap Jog Dial
End phone call first	Press Jog Dial for 2" or Tap Phone Button or Wait for the called person to end the call

#### Start & End Three-way Conference Phone Call

## 19. INTERCOM FAILURE

When you try to start an intercom conversation with an intercom friend who is already having a conference intercom with other riders or a mobile phone call, you will hear a low tone double beep signifying an intercom busy signal. In this case, you have to try again later.

## 20. INTERCOM RECONNECTION


If your intercom friend goes out of range while having an intercom conversation, you may hear static noise and eventually the intercom will be disconnected. In this case, the SPH10 automatically tries to reconnect the intercom every 8 seconds and you will hear high tone double beeps until the intercom is reestablished. If you don't want to make a reconnection, tap the Jog Dial to stop the attempt.

## 21. RESET TO FACTORY DEFAULT SETTINGS

1. To restore the SPH10 to factory default settings, press and hold the Phone Button for 12 seconds until the LED shows solid red and you hear double beeps. You will hear a voice prompt saying **“Factory reset”**.
2. Within 5 seconds, press the Jog Dial to confirm reset. The headset will be restored to factory setting and switched off automatically. You will hear a voice prompt saying **“Headset reset, good-bye”**.
3. If you don't press the Jog Dial within 5 seconds, the reset attempt is canceled and the headset returns to stand-by mode. You will hear a voice prompt saying **“Canceled”**.

## 22. FAULT RESET

When the SPH10 is not working properly or is in faulty status for any reason, you may reset by pushing the pin-hole reset button at the back of the headset main unit. Insert a paper clip into the reset pin-hole and press the reset button for a second with light pressure. The SPH10 will be switched off, and you have to turn the system back on and try again. However, this will not restore the headset to factory default settings.

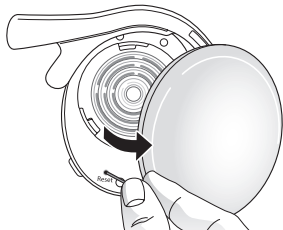


## 23. FIRMWARE UPGRADE

The SPH10 supports firmware upgrade function.



## 24. SENA BLUETOOTH CONNECTION CASE STUDIES

### Case 1

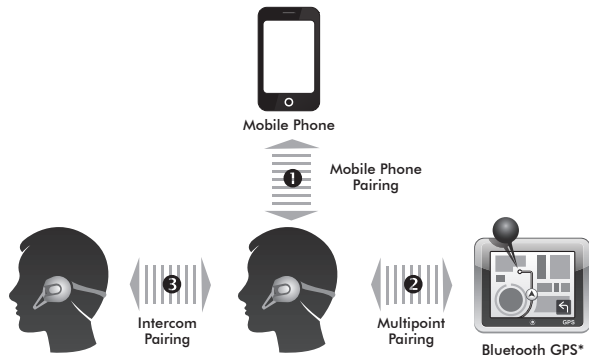

### Bluetooth Pairing Procedure

- 1 Mobile Phone Pairing
- 2 Multipoint Pairing
- 3 Intercom Pairing


### Bluetooth GPS\*

zumo 220/350/550/660/665, TomTom Rider

### Usage

- Mobile phone: phone call, listening to music
- GPS: GPS instruction
- Intercom

**Case 2**

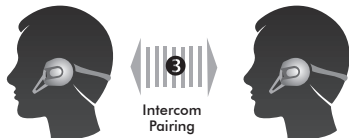

**Bluetooth Pairing Procedure**

- ❶ GPS - Mobile Phone Pairing
- ❷ Mobile Phone Pairing
- ❸ Intercom Pairing


**Bluetooth GPS\***

zumo 550/660/665, TomTom Rider

**Usage**

- GPS
  - zumo 660/665: GPS instruction, phone call, listening to music
  - zumo 550, TomTom Rider: GPS instruction, phone call
- Intercom

## Case 3

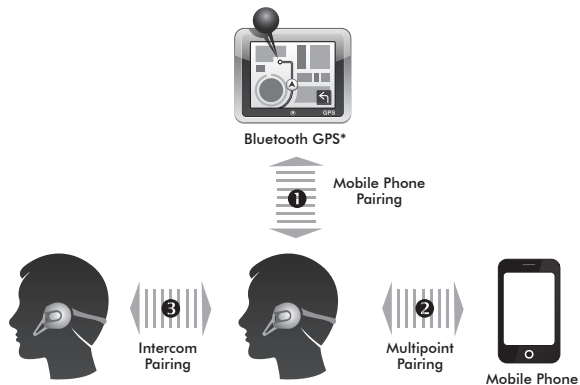**Bluetooth Pairing Procedure**

- 1 Mobile Phone Pairing
- 2 Multipoint Pairing
- 3 Intercom Pairing


**Bluetooth GPS\***

zumo 220/350/550/660/665, TomTom Rider

**Usage**

- Mobile Phone: phone call
- GPS
  - zumo 660/665: GPS instruction, listening to music
  - zumo 220/350/550, TomTom Rider: GPS instruction
- Intercom

Case 4

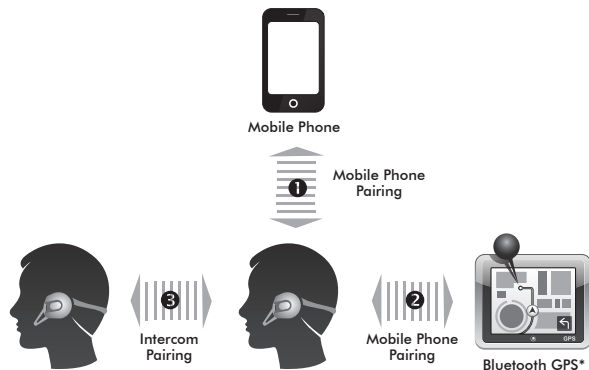

**Bluetooth Pairing Procedure**

- 1 Mobile Phone Pairing
- 2 Mobile Phone Pairing
- 3 Intercom Pairing


**Bluetooth GPS\***

Yupiteru, smartphone apps

**Usage**

- Mobile Phone: phone call
- GPS: GPS instruction
- Intercom

## Case 5

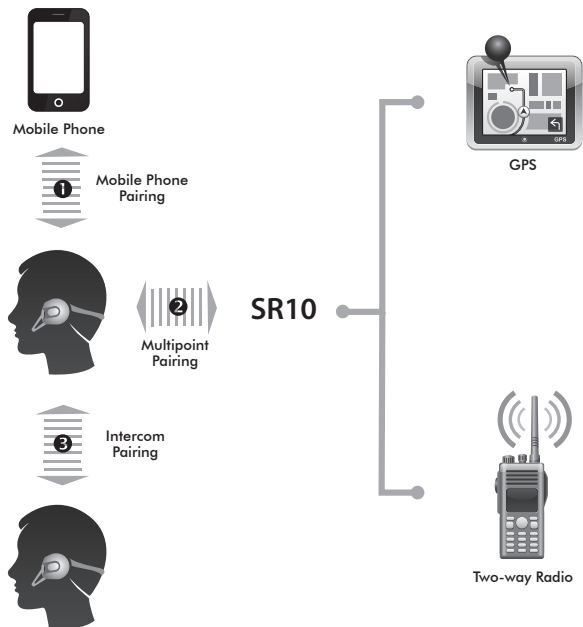


## Bluetooth Pairing Procedure

- 1 Mobile Phone Pairing
- 2 Multipoint Pairing
- 3 Intercom Pairing

## Usage

- Mobile Phone: phone call
- SR10: two-way radio, GPS guidance
- Intercom

Case 6

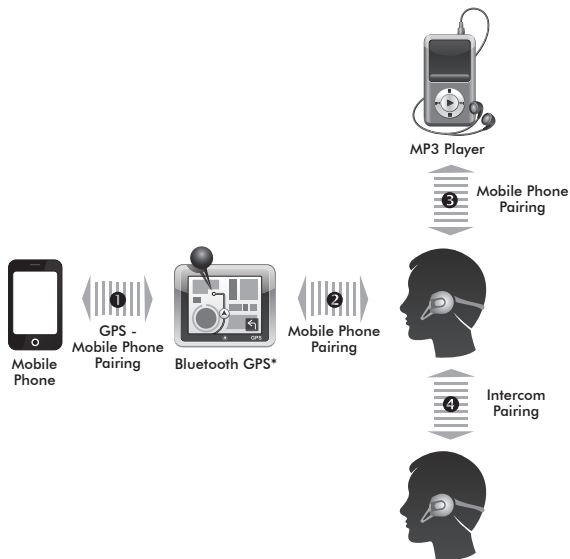

**Bluetooth Pairing Procedure**

- 1 GPS - Mobile Phone Pairing
- 2 Mobile Phone Pairing
- 3 Mobile Phone Pairing
- 4 Intercom Pairing


**Bluetooth GPS\***

zumo 220/350/550/660/665, TomTom Rider

**Usage**

- GPS: phone call, GPS instruction
- MP3 Player: listening to music
- Intercom

## Case 7

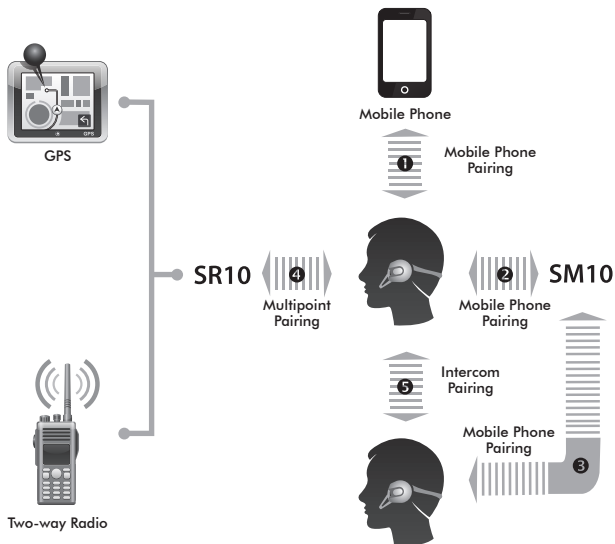

## Bluetooth Pairing Procedure

- ① Mobile Phone Pairing
- ② Mobile Phone Pairing
- ③ Mobile Phone Pairing
- ④ Multipoint Pairing
- ⑤ Intercom Pairing

## Usage

- Mobile Phone: phone call
- SR10: two-way radio, GPS instruction
- SM10: listening to music/sharing
- Intercom

## 25. OPERATION QUICK REFERENCE

Button	Description	Duration	LED	Beep
Phone Button + Jog Dial	Power-on	1 sec	Solid blue	Ascending beeps
	Power-off	Tapping	Solid red	Descending beeps
Phone Button	Mobile phone pairing	5 secs	Blue & red alternatively flashing	High tone multiple beeps
	MP3, GPS pairing	5 secs	Blue & red alternatively flashing	High tone multiple beeps
	Call transfer	2 secs	-	High tone single beep
	Factory reset	12 secs	Solid red	High tone double beeps
	Make & answer phone call	Tapping	-	-
	Speed dial	Double tapping	-	-

Button	Description	Duration	LED	Beep
	Intercom pairing	5 secs	Red flashing	Double tone beeps
		Jog Dial of any one of the two headsets		
	Multipoint pairing	5 secs	Red flashing	Multiple beeps
		Phone Button within 2 secs		
	Universal intercom pairing	8 secs	Blue flashing	-
	Start/end intercom conversation	Tapping	-	-
Jog Dial	Lock intercom conversation	Rotating while pressing	-	Mid-tone single beep
	Unlock intercom conversation	Rotating while pressing	-	Double tone beeps
	End conference intercom	1 sec	Blue flashing	Mid-tone single beep
	Reject incoming call	2 secs	-	-
	Volume adjustment	Rotating	-	-
	Track forward/back	Rotating while pressing	-	-
	Play/pause Bluetooth music	1 sec	-	Mid-tone double beeps



# CERTIFICATION AND SAFETY APPROVALS

## FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae

- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. The antenna used for this transmitter must not transmit simultaneously with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.

## FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

## CE Declaration of Conformity

This product is CE marked according to the provisions of the R&TTE Directive (1999/5/EC). Hereby, Sena declares that this product is in compliance with the essential requirements and other relevant provisions of Directive

1999/5/EC. Please note that this product uses radio frequency bands not harmonized within EU. Within the EU this product is intended to be used in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom and within EFTA in Iceland, Norway and Switzerland.

### **Industry Canada Statement**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

### **Bluetooth License**

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. Other trademarks and trade names are those of their respective owners.

The product is compliant with and adopts the Bluetooth® Specification 3.0 and has successfully passed all interoperability tests that are specified in the Bluetooth® specification. However, interoperability between the device and other Bluetooth®-enabled products is not guaranteed.

### **WEEE (Waste Electrical and Electronic Equipment )**



The crossed-out wheel bin symbol on the product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please do not dispose of these products as unsorted municipal waste, but hand it in at an official collection point for recycling.

## **SAFETY INFORMATION**

Please ensure that the product is properly used by observing the warnings and cautions below to prevent any risk and/or damage to property.

### **Product Storage and Management**

- Keep the product free of dust. It may damage mechanical and electronic parts of the product.
- Do not store the product in high temperatures as this may reduce the life span of electronic devices, damage the battery, and/or melt plastic parts of the product.
- Do not store the product in cold temperatures. Abrupt changes in temperatures may cause condensation and damage electronic circuits.
- Do not clean the product with cleaning solvents, toxic chemicals, or strong detergents as this may damage the product.
- Do not paint the product. Paint may obstruct moving parts or interfere with the normal operation of the product.
- Do not drop or otherwise shock the product. It may damage the product or its internal electronic circuits.

- Do not disassemble, repair or modify the product as this may damage the product and invalidate the product warranty.
- Do not store the product in humid environments, especially for long time storage.

### **Product Use**

- In some regions, it is prohibited by law to ride motorcycles while wearing headsets or earbuds. Therefore be certain to comply with all relevant laws in the region before using the product.
- The headset is for motorcycle helmets only. To install the headset, you must follow the installation instructions shown in the User's Guide.
- Use of the product at a high volume for a long period of time may damage your eardrums or hearing ability. Keep the volume at a modest level to prevent damage.
- Do not cause impact to the product or touch it with sharp tools as this may damage the product.
- Do not use the product in high-temperatures or apply heat to the product as this may cause damage, explosion, or fire.
- Keep product away from pets or small children. It may damage the product.

- In any place where wireless communication is prohibited, such as hospitals or airplanes, turn off the power and refrain from using the product. In a place where wireless communication is prohibited, electromagnetic waves may cause hazards or accidents.
- Do not use the product near hazardous explosives. When it is near any explosion hazards, turn off the power and heed any regulations, instructions, and signs in the area.
- When using the product, be certain to conform to laws regarding the use of communications devices while riding.
- Do not put the product where it may hamper the rider's vision or manipulate it while riding. This may cause traffic accidents.
- Before riding, fasten the product to the helmet, and double-check that it is fastened. Separation of the product while riding may cause damage to the product or accidents.
- If the product is damaged, stop using it immediately. It may cause damage, explosion, or fire.

## **Battery**

This product has an irreplaceable rechargeable battery inside. Therefore, when using the product, make sure to adhere to the following:

- Never separate the battery from the product as this may damage the product.
- The battery performance may be reduced over time with usage.
- In recharging the battery, make sure to use an approved charger provided by the manufacturer. Use of a non-approved charger may cause fire, explosion, leakage, and other hazards may also reduce the life time or performance of the battery.
- Any 3rd party USB charger can be used with Sena products if the charger is approved by either the FCC, CE, IC or other locally approved agencies that Sena accepts.
- Do not use cigarette chargers other than the included cigarette charger to charge the headset.
- Store the battery at temperatures of 15°C~25°C (59°F~77°F). Higher or lower temperatures may reduce the capacity and life of the battery, or may cause temporary non-operation. Do not use the product in sub-zero temperature, because it may cause serious reduction of the battery performance.

- If you apply heat to the battery or throw it into fire, it may explode.
- Do not use the product with a damaged battery. It may explode and/or cause accidents.
- Never use a damaged charger. It may explode and/or cause accidents.
- Battery life may vary depending on conditions, environmental factors, functions of the product in use, and devices used with it.