




TUFFTALK

Industrial Bluetooth® Communication System

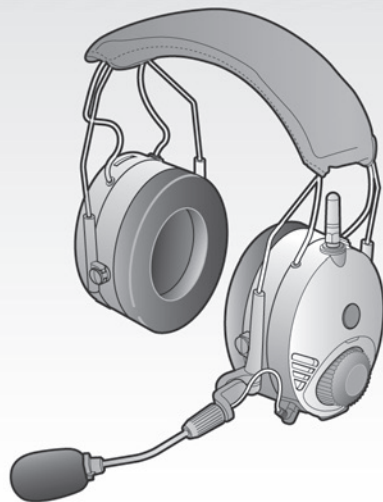

© 1998-2016 Sena Technologies, Inc. All rights reserved.

Sena Technologies, Inc reserves the right to make any changes and improvements to its product without providing prior notice.

Sena™ is a trademark of Sena Technologies, Inc. or its subsidiaries in the USA and other countries. Prism™, Bluetooth Audio Pack for GoPro®, Tufftalk™, 20S™, 10S™, 10C™, 10U™, 10R™, 3S™, SMH10™, SMH10R™, SMH5™, SMH5-FM™, SMH3™, SPH10™, SPH10H™, SPH10H-FM™, SPH10S™, Expand™, Bluetooth Mic&Intercom™, Handlebar Remote™, Wristband Remote™, SM10™, SR10™, SR10i™ are trademarks of Sena Technologies, Inc. or its subsidiaries. These trademarks may not be used without the express permission of Sena.

GoPro® is a registered trademark of Woodman Labs of San Mateo, California. Sena Technologies, Inc. (“Sena”) is not affiliated with Woodman Labs. The Sena Bluetooth Pack for GoPro® is an after-market accessory specially designed and manufactured by Sena Technologies, Inc. for the GoPro® Hero3 and Hero4 allowing for Bluetooth capabilities.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. iPhone, iPod touch are registered trademarks of Apple Inc. Zumo™ is a trademark of Garmin Ltd. or its subsidiaries. TomTom™ is the trademark or registered trademark owned by TomTom International B.V. Other trademarks and tradenames are those of their respective owners.

CONTENTS

1	INTRODUCTION	5
2	PACKAGE CONTENTS	6
2.1	Over-the-Head Earmuff Type	6
2.2	Hard Hat Mount Earmuff Type	7
3	INSTALLING THE TUFFTALK	8
3.1	Over-the-Head Earmuff Type	8
3.2	Hard Hat Earmuff Type	10
4	GETTING STARTED	13
4.1	Button Operation	13
4.2	Powering On and Off	15
4.3	Charging	15
4.4	Low Battery Warning	15
4.5	Checking the Battery Level	15
4.6	Volume Adjustment	16
4.7	Sena Softwares	16
5	PAIRING THE TUFFTALK WITH BLUETOOTH DEVICES	17
5.1	Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device	17
5.2	Second Mobile Phone Pairing - Second Mobile Phone and SR10	18
5.3	Intercom Pairing - Other Tufftalk headsets	19
6	MOBILE PHONE	20
6.1	Mobile Phone Call Making and Answering	20
6.2	Speed Dialing	20
7	STEREO MUSIC	21
8	INTERCOM	22
8.1	Two-way Intercom	22
8.2	Three-way Intercom	23
8.3	Four-way Intercom	25
8.4	Microphone Mute	26
9	THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT	26
10	UNIVERSAL INTERCOM	27
10.1	Universal Intercom Pairing	28
10.2	Two-way Universal Intercom	29
10.3	Three-way Universal Intercom	29
10.4	Four-way Universal Intercom	31
11	GROUP INTERCOM	33
12	AMBIENT MODE	33
13	TWO-WAY RADIO	34
13.1	Wired Two-way Radio	34
13.2	Wireless Two-way Radio	34
14	FM RADIO	35
14.1	FM Radio On and Off	35
14.2	Preset Stations	35
14.3	Seek and Save	35
14.4	Scan and Save	36
14.5	Temporary Preset	36
14.6	Region Selection	36
15	FUNCTION PRIORITY	37

16	CONFIGURATION SETTING	37
16.1	Assigning Speed Dial	38
16.2	Enabling/Disabling Audio Boost	39
16.3	Enabling/Disabling Voice Activated Phone Answering	39
16.4	Enabling/Disabling Voice Activated Intercom	40
16.5	Enabling/Disabling HD Intercom	40
16.6	Enabling/Disabling Voice Prompts	41
16.7	Enabling/Disabling RDS AF	41
16.8	Enabling/Disabling Sidetone	41
16.9	Enabling/Disabling Advanced Noise Control™	42
16.10	Delete All Bluetooth Pairing Information	42
16.11	Universal Intercom Pairing	42
16.12	Exit Voice Configuration Menu	43
17	FIRMWARE UPGRADE	44
18	TROUBLESHOOTING	44
18.1	Intercom Failure	44
18.2	Intercom Reconnection	44
18.3	Fault Reset	45
18.4	Factory Reset	45
19	OPERATION QUICK REFERENCE	46

CERTIFICATION AND SAFETY APPROVALS	47
• FCC Compliance Statement	47
• FCC RF Exposure Statement	48
• FCC Caution	48
• CE Declaration of Conformity	48
• Industry Canada Statement	48
• Bluetooth License	49
• NRR Information	49
• WEEE (Waste Electrical and Electronic Equipment)	50
SAFETY INFORMATION	51
• Product Storage and Management	51
• Product Use	51
• Battery	52

1 INTRODUCTION

Thank you for choosing the Sena Tufftalk, Industrial Bluetooth Communication System. Tufftalk allows you to communicate effectively in high-noise industrial environments. The Tufftalk offers passive noise cancellation with the level of noise entering a person's ear attenuated with up to the NRR of 24. Using the Ambient Mode feature, you can efficiently hear nearby voice signals without having to take off the headset. Using the PTT feature, you can make two-way radio calls through the headset. Using its Bluetooth features, you can call handsfree on your Bluetooth mobile phone, listen to stereo music, or have intercom conversations in full duplex with other members.

The Tufftalk is compliant with the Bluetooth 4.1 supporting the following profiles: Headset Profile, Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), and Audio Video Remote Control Profile (AVRCP). Please check with the manufacturers of other device to determine their compatibility with this headset.

The Tufftalk features:

- Bluetooth 4.1
- Multi-way intercom up to 4 connections
- Bluetooth intercom up to 1.4 kilometers (0.85 miles) using long antenna, 0.8 kilometers (0.5 miles) using short antenna*
- Passive noise cancellation with up to the NRR of 24
- Ambient Mode that intakes nearby voice signals
- Built-in two-way radio adapter
- Smartphone App for iPhone and Android
- Universal Intercom™
- Intuitive voice prompts
- Advanced Noise Control™
- Easy operation by versatile Jog Dial
- Water resistant for use in inclement weather
- Built-in FM radio tuner with a station scan and save function
- Firmware upgradeable

* in open terrain


Key Specifications:

- Bluetooth 4.1
- Supporting profiles: Headset Profile, Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP), and Audio Video Remote Control Profile (AVRCP)

2 PACKAGE CONTENTS

2.1 Over-the-Head Earmuff Type

- **Headset**

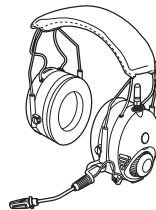

- **Long Antenna**



- **USB Power & Data Cable**



- **Li-ion Rechargeable Battery (2)**



- **Dual Battery Charger**




- **Microphone Sponge (2)**



2.2 Hard Hat Mount Earmuff Type


- **Headset Main Units**

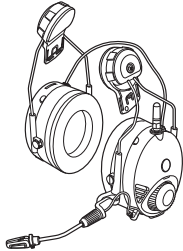


- **Long Antenna**



- **USB Power & Data Cable**



- **Li-ion Rechargeable Battery (2)**



- **Dual Battery Charger**



- **Microphone Sponge (2)**




- **Rubber Pad (2)**




3 INSTALLING THE TUFFTALK

3.1 Over-the-Head Earmuff Type

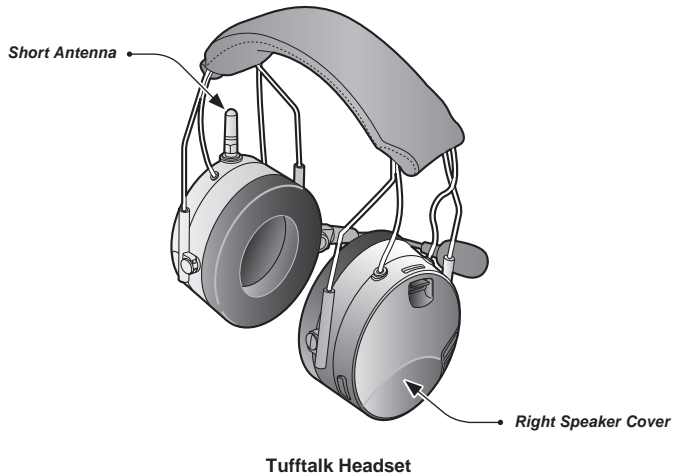


3.1.1 Installing the Battery


1. Open the right speaker cover by lowering the slide lock.

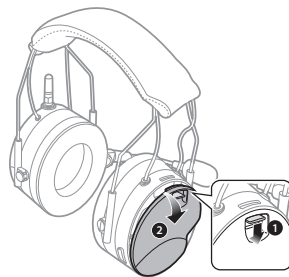

2. Place the Li-ion rechargeable battery inside the battery compartment. You can use three AAA batteries (sold separately) as an alternative power source for the Tufftalk.

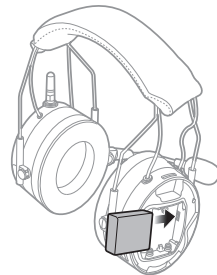


3. Close the cover and lock it into place by raising the slide lock.

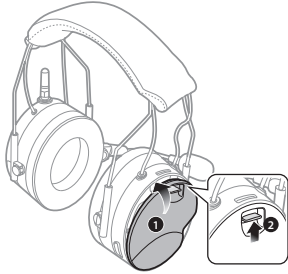


3.1.2 Replacing the Antenna

A short antenna is installed on the headset by default. However, if you wish to have an increased intercom distance, you may replace the short antenna with the long antenna.


1. Unfasten the short antenna by rotating it counter clockwise.

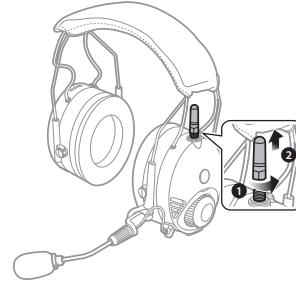

2. Take the long antenna and fasten it tightly into position.

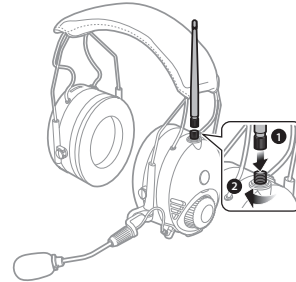


3.2 Hard Hat Earmuff Type

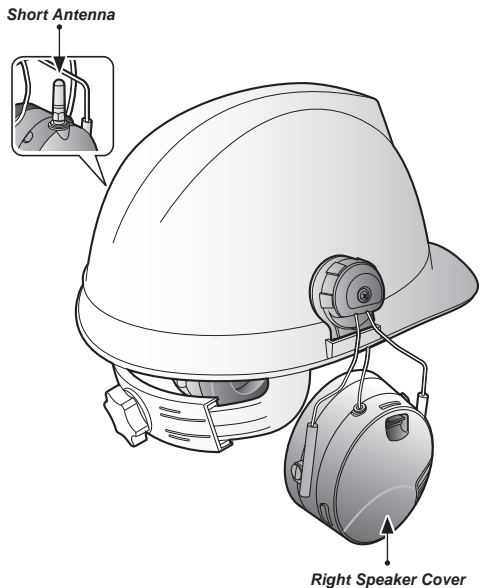

Tufftalk Headset

3.2.1 Installing the Headset

1. Attach the headsets to each side of the hard hat by sliding them into the left and right slots of the hard hat. The headset with the microphone and the antenna should be mounted on the left side of the hard hat.

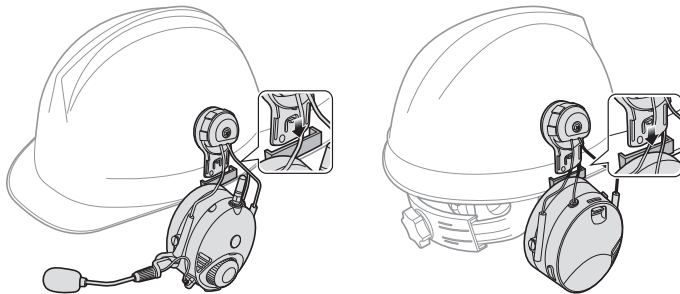


2. Organize the cables under the hard hat suspensions.

Note:


If the rubber pad on the inner surface of the bracket-top begins to fray, replace it with the included pad.

3.2.2 Installing the Battery


1. Open the right speaker cover by lowering the slide lock.

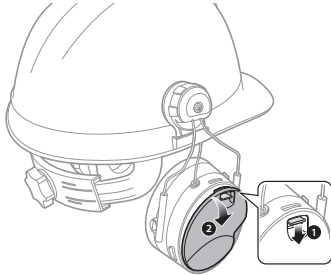

2. Place the Li-ion Rechargeable Battery inside the battery slot. You can use three AAA batteries (sold separately) as an alternative power source for the Tufftalk.

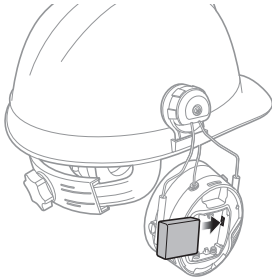


3. Close the cover and lock it into place by raising the slide lock.

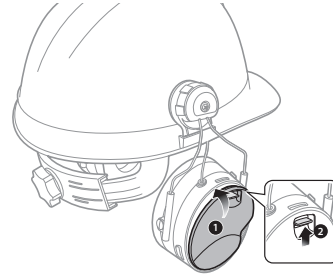


3.2.3 Replacing the Antenna

A short antenna is installed on the headset by default. However, if you wish to have an increased intercom distance, you may replace the short antenna with the long antenna.

1. Unfasten the short antenna by rotating it counter clockwise.

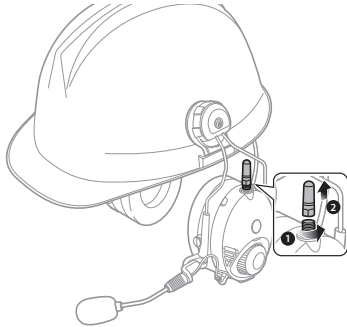


2. Take the long antenna and fasten it tightly into position.

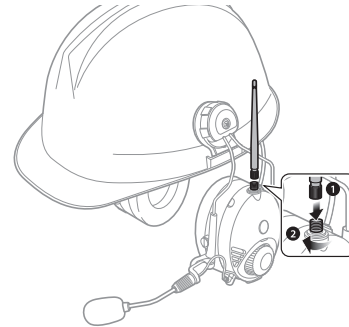


4 GETTING STARTED

4.1 Button Operation

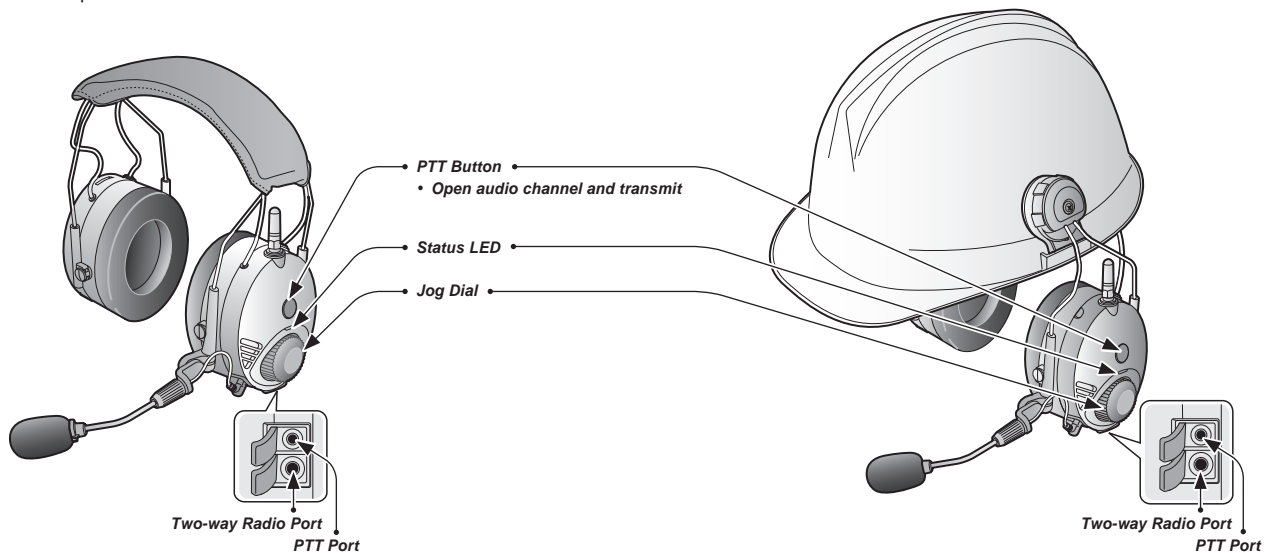

Tufftalk Headset Buttons

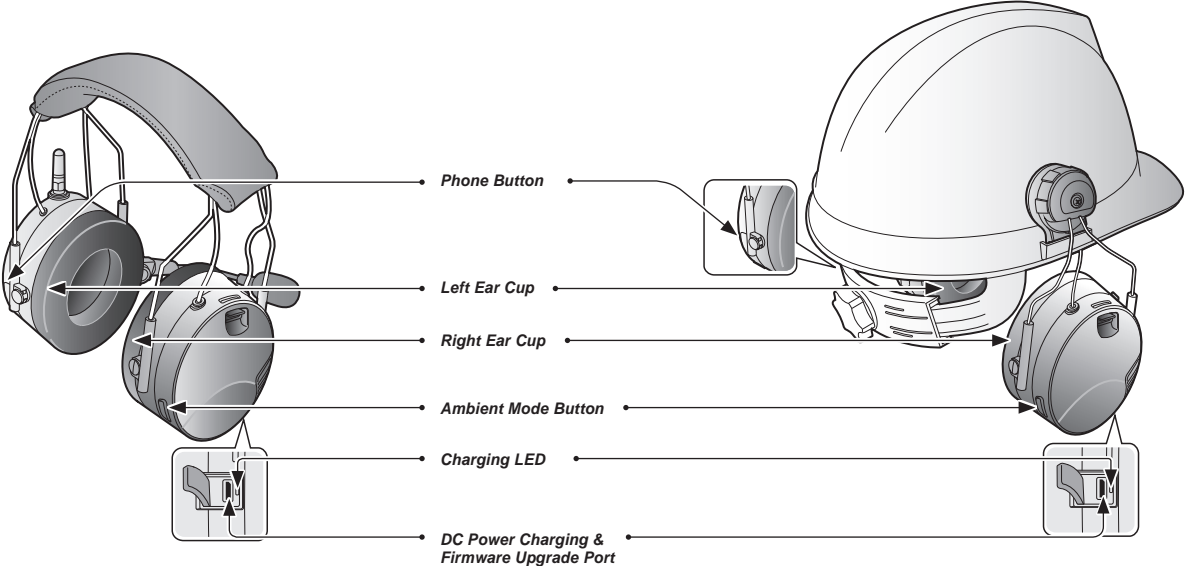


Tufftalk Headset Buttons

4.2 Powering On and Off

To power on the headset, press the Phone Button and the Jog Dial at the same time while hearing ascending beeps and a voice prompt, **“Hello”**. To power off the headset, press the Phone Button and the Jog Dial at the same time while hearing descending beeps and a voice prompt, **“Goodbye”**.

4.3 Charging

You can charge the headset by connecting the supplied USB power & data cable into a computer's USB port or USB wall charger. You can use any standard micro USB cable to charge the units. The charging LED turns red while charging and turns blue when fully charged. You can also use the dual battery charger included in the package. It takes about 2.5 hours to be completely charged.

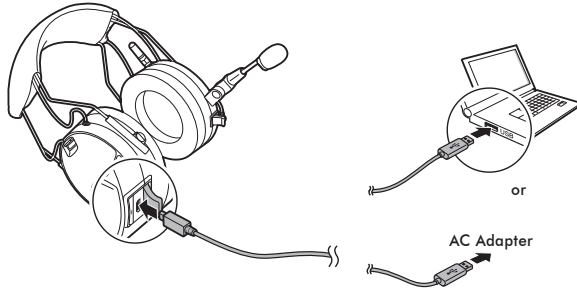

4.4 Low Battery Warning

When the battery is low, the blinking blue LED in stand-by mode turns to red and you will hear mid-tone triple beeps and a voice prompt, **“Low battery”**.

4.5 Checking the Battery Level

You can check the battery level in two different ways when the headset is powering on.

4.5.1 LED Indicator

When the headset is powering on, the red LED flashes rapidly indicating the battery level.

4 flashes = High, 70 ~ 100%

3 flashes = Medium, 30 ~ 70%

2 flashes = Low, 0 ~ 30%

4.5.2 Voice Prompt Indicator

When you power on the headset, keep pressing the Phone Button and the Jog Dial simultaneously for about 5 seconds until you hear three, high toned beeps. Then you will hear a voice prompt indicating the battery level. However, if you release the buttons as soon as the headset turns on, you will not hear a voice prompt for the battery level indication.

4.6 Volume Adjustment

You can easily adjust the volume by rotating the Jog Dial. You will hear a beep when the volume reaches the maximum or minimum level. The volume is set and maintained independently at different levels for each audio source even when you reboot the headset. For example, once you set the volume for mobile phone handsfree, it will not change even if you adjust the volume for your Bluetooth MP3 music. However, if you adjust the volume during stand-by mode, it will affect volume levels of every audio source.

4.7 Sena Softwares

4.7.1 Sena Device Manager

The Sena Device Manager allows you to upgrade the firmware and configure the device settings directly from your PC. Using this software, you can assign speed dial presets, FM radio frequency presets and more. It is available for both Windows and Mac.

4.7.2 Sena Smartphone App

The Sena Smartphone App allows you to configure device settings and read the User's Guide and the Quick Start Guide. Pair your phone with your Tufftalk headset (please refer to *section 5.1, "Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device"*). Run the Sena Smartphone App and you can configure its settings directly from your smartphone.

5 PAIRING THE TUFFTALK WITH BLUETOOTH DEVICES

Before using the Tufftalk Bluetooth headset with any other Bluetooth devices for the first time, you will need to pair them together. You can pair the Tufftalk with Bluetooth mobile phones, Bluetooth stereo devices such as MP3 players and with other Sena Bluetooth headsets. The pairing operation is required only once for each Bluetooth device. The headset remains paired with the devices and automatically reconnects to them when they are within range. You will hear a high toned single beep and a voice prompt whenever the headset reconnects to the paired device: **“Phone connected”** to a mobile phone, **“Media connected”** to a Bluetooth stereo device.

- ### 5.1 Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device
1. Press and hold the Phone Button for 5 seconds until you hear a voice prompt, **“Phone pairing”**.
 2. Search for Bluetooth devices on your mobile phone. Select the Sena Tufftalk in the list of the devices detected on the mobile phone.
 3. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.
 4. The mobile phone confirms that pairing has been completed and the Tufftalk is ready to use. You will hear a voice prompt, **“Your headset is paired”**.
 5. If the pairing process is not completed within three minutes, the Tufftalk will return to stand-by mode.

Note:

1. If the Bluetooth connection between the headset and a mobile phone is disconnected, tap the Phone Button to recover the Bluetooth connection immediately.
2. If the Bluetooth connection between the headset and a media player is disconnected, press the Jog Dial for 1 second to recover the Bluetooth connection and play.

5.2 Second Mobile Phone Pairing - Second Mobile Phone and SR10

Typical Bluetooth headsets can connect with only one Bluetooth device, but a second mobile phone pairing allows the headset to connect with another Bluetooth device such as a second mobile phone, an MP3 Player, or the Sena SR10, the Bluetooth adapter.

1. To pair the second mobile phone, press and hold the Jog Dial for 5 seconds until the red LED flashes rapidly and you hear a voice prompt, **“Intercom pairing”**.
2. Within 2 seconds, tap the Phone Button again, then the LED flashes blue rapidly and you will hear a voice prompt, **“Second mobile phone pairing”**.
3. Search for Bluetooth devices on your mobile phone. Select the Sena Tufftalk in the list of the devices detected on the mobile phone.
4. Enter 0000 for the PIN. Some mobile phones may not ask for the PIN.
5. The mobile phone confirms that the pairing has completed and the Tufftalk is ready to use. You will hear a voice prompt, **“Your headset is paired”**.


Note:

1. *If you have two audio (A2DP) devices connected to your headset then the audio from one device will interrupt the audio from the other device. For example, if you are playing music from the primary mobile phone, then it can be interrupted by playing music from the secondary mobile phone and vice versa.*
2. *The Sena SR10 is a Bluetooth two-way radio adapter for group communication, and uses Hands-Free Profile. The incoming audio from the two-way radio via SR10 is heard in the background while having an intercom conversation or a mobile phone call.*

5.3 Intercom Pairing - Other Tufftalk headsets

The Tufftalk can be paired with up to three other headsets for Bluetooth intercom conversation.

1. Turn on the two Tufftalk headsets (A and B) that you would like to pair with each other.
2. Press and hold the Jog Dial of the headset A and B for 5 seconds until red LEDs of the both units start to flash rapidly. You will hear a voice prompt, “**Intercom pairing**”.
3. Tap the Jog Dial on any one of the two headsets A and B, and wait until the LEDs of both headsets turn to blue and intercom connection is automatically established. The two Tufftalk headsets A and B are paired with each other for intercom conversation. If the pairing process is not completed within one minute, the Tufftalk will return to stand-by mode.

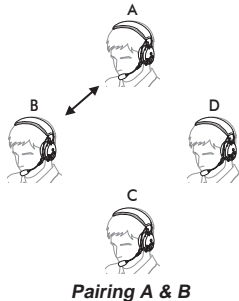

4. You can make other pairing between headsets A and C, and between headsets A and D by following the same procedure as above.
5. The intercom pairing queue is ‘**Last-Come, First-Served**’. If a headset has multiple paired headsets for intercom conversations, the last paired headset is set as **first intercom friend**. The previous intercom friend becomes **second intercom friend**, and **third intercom friend**.

Note:

*For example, after the pairing procedures listed above, headset D is the **first intercom friend** of headset A. Headset C is the **second intercom friend** of headset A, and headset B is the **third intercom friend** of headset A.*

6 MOBILE PHONE

6.1 Mobile Phone Call Making and Answering

1. When you have an incoming call, simply tap the Phone Button or the Jog Dial to answer the call.
2. You can also answer the incoming call by loudly speaking any word of your choice if Voice Activated Phone Answering (VOX Phone) is enabled, unless you are connected to intercom.
3. To end a call, tap the Phone Button or press the Jog Dial for 2 seconds until you hear a mid-tone single beep, or wait for the called person to end the call.
4. To reject a call, press the Jog Dial for 2 seconds until you hear a beep while the phone is ringing.
5. There are several ways to make a phone call:
 - Enter numbers on your mobile phone's keypad and make a call. Then the call is automatically transferred to the headset.
 - Tap the Phone Button in stand-by mode to activate the voice dialer of your mobile phone. For this, the voice dialing function must be available on the mobile phone. Refer to *your mobile phone manual* for further instruction.

Note:

If you have two phones connected to your headset and you have an incoming call from the second phone during the call of the first phone, then you may still receive the call from the second phone. In this case, the call from the first phone is on waiting mode. If you end a call, then it will automatically guide you to the first phone call.

6.2 Speed Dialing

You can quickly make a phone call by using the voice speed dial menu.

1. To enter into the voice speed dial menu, double tap the Phone Button and you will hear a mid-toned single beep and a voice prompt, “**Speed dial**”.
2. Rotate the Jog Dial clockwise or counter clockwise to navigate between the menus. You will hear voice prompts for each menu item.
3. Tap the Phone Button or the Jog Dial to select a voice menu among the followings:

(1) Last number redial

(2) Speed dial 1

(3) Speed dial 2

(4) Speed dial 3

(5) Cancel

4. After selecting the last number redial menu, you will hear a voice prompt, “**Last number redial**”. Then, to redial the last phone call number, tap the Phone Button or the Jog Dial.
5. To call one of the speed dials, rotate the Jog Dial clockwise or counter clockwise to navigate between the menus until you hear a voice prompt, “**Speed dial (#)**”. Then, tap the Phone Button or the Jog Dial.
6. If you want to exit the speed dial immediately, rotate the Jog Dial until you hear voice prompt, “**Cancel**”, and tap the Phone Button or the Jog Dial. If you do not press any button within 15 seconds, the Tufftalk will exit the voice speed dial menu and go back to stand-by mode.


Note:

1. Make sure that you connect the mobile phone and the headset to use the speed dial function.
2. You need to assign speed dial numbers before using the speed dial (please refer to section 16.1, “Assigning Speed Dial”).


7 STEREO MUSIC

The Bluetooth audio device must be paired with the Tufftalk by following the *section 5.1, “Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device”* procedure. The Tufftalk supports the Audio/Video Remote Control Profile (AVRCP), so if your Bluetooth audio device also supports the AVRCP, you can use the Tufftalk to remotely control music playback. Not only can you adjust the volume but you can also use functions such as play, pause, next track and previous track.


1. To play or pause music, press and hold the Jog Dial for 1 second until you hear a double beep.

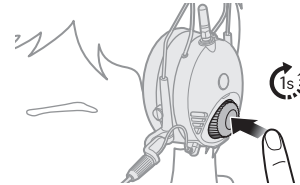

2. To adjust the volume, rotate the Jog dial.

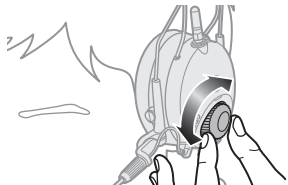

3. To track forward or track back, rotate while pressing the Jog Dial clockwise or counter clockwise.

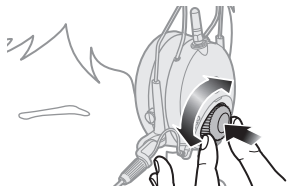

8 INTERCOM

Please make sure your intercom devices are paired as described in section 5.3, “Intercom Pairing - Other Tufftalk headsets”.


8.1 Two-way Intercom

8.1.1 Starting Two-way Intercom

You can start an intercom conversation with one of any intercom friends by tapping the Jog Dial. Tap the Jog Dial once to intercom with the **first intercom friend**, tap the Jog Dial twice to intercom with the **second intercom friend**, and tap the Jog Dial three times to intercom with the **third intercom friend**.

8.1.2 Ending Two-way Intercom

You can end an intercom conversation by using the Jog Dial. Press and hold the Jog Dial for 1 second to end any intercom. Or, you can single tap to end intercom with the **first intercom friend**, double tap to end intercom with the **second intercom friend**, and triple tap to end intercom with the **third intercom friend**.

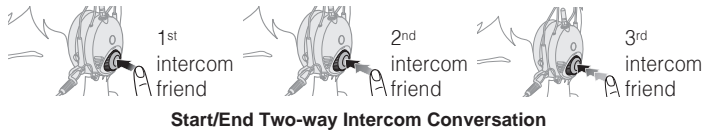


8.2 Three-way Intercom


8.2.1 Starting Three-way Intercom

You (A) can have a three-way conference intercom with two other Tufftalk friends (B & C) by establishing two intercom connections simultaneously. While a three-way conference intercom is in progress, mobile phone connection of all three participants is temporarily disconnected. However, as soon as the conference intercom terminates or one of the participants leaves the intercom, all mobile phones automatically reconnect to their headsets. If you have an incoming mobile phone call during the conference intercom, terminate the conference intercom to automatically reconnect and receive the phone call.


1. You (A) need to be paired with two other friends (B & C) for three-way conference intercom.

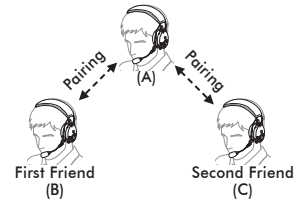


2. Start an intercom conversation with one of the two friends in your intercom group. For example, you (A) may start an intercom conversation with the intercom friend (B). Or intercom friend (B) may start an intercom call with you (A).

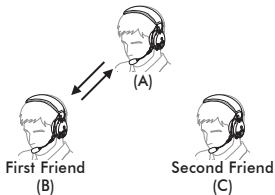

3. You (A) can call the second intercom friend (C) by double tapping the Jog Dial, or the second intercom friend (C) may join the intercom by making an intercom call to you (A).

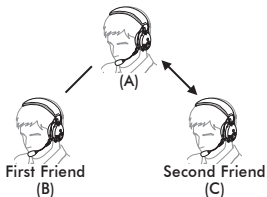

4. Now you (A) and two Tufftalk intercom friends (B & C) are having a three-way conference intercom.

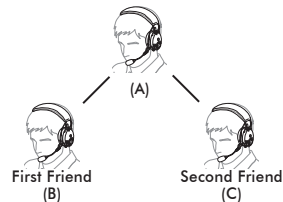

8.2.2 Ending Three-way Intercom

You can completely terminate the conference intercom or just disconnect an intercom connection with one of your active intercom friends.

1. Press the Jog Dial for 1 second until you hear a beep to terminate three-way conference intercom completely. It terminates both intercom connections with (B) and (C).
2. Tap or double tap the Jog Dial to disconnect intercom connection with one of the two intercom friends accordingly. For example, by single tapping the Jog Dial, you can terminate the intercom connection with just the first intercom friend (B). However, you still have the intercom connection with your second intercom friend (C).

Jog Dial Operation	Result
Press for 1 second	Disconnect (B) & (C)
Single tap	Disconnect (B)
Double tap	Disconnect (C)

End Three-way Intercom

8.3 Four-way Intercom

8.3.1 Starting Four-way Intercom

You can have four-way conference intercom with three other Tufftalk users by adding one more intercom participant to the three-way intercom. While you are having a three-way intercom as above in *section 8.2, "Three-way Intercom"*, a new participant (D), who is an intercom friend of your intercom friend (C), may join the conference intercom by making an intercom call to your intercom friend (C). Please note that in this case, the new participant (D) is an intercom friend of (C), not of you (A).

8.3.2 Ending Four-way Intercom

As same in the case of three-way intercom, you can completely get out of the four-way conference intercom or just disconnect a single intercom connection.

1. Press the Jog Dial for 1 second until you hear a beep to terminate four-way conference intercom. It terminates the intercom connections between you (A), and your intercom friends (B) and (C).
2. Tap or double tap the Jog Dial to disconnect the intercom connection with one of the two intercom friends accordingly. However, when you disconnect the second friend (C) by double tapping the Jog Dial, you will be disconnected with the third participant (D) as well. This is because the third participant (D) is connected with you via the second friend (C).

Jog Dial Operation	Result
Press for 1 second	Disconnect (B), (C) & (D)
Single tap	Disconnect (B)
Double tap	Disconnect (C) & (D)

End Four-way Intercom

Note:

Multiple headsets are connected during multi-way intercom. With various signals interfering each other, the intercom distance of multi-way intercom is relatively shorter than that of two-way intercom.

8.4 Microphone Mute

You can mute or unmute your microphone during an intercom conversation by double tapping the Ambient Mode Button. If you disconnect intercom, the microphone mute effect will be turned off as well.

9 THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT

1. When you have an incoming mobile phone call during an intercom conversation, you will hear a ringtone. You can choose whether to *1) answer the mobile phone call and stop the intercom conversation, or 2) reject the phone call and stay on the intercom conversation.*
 - 1) To answer the phone call and stop the intercom conversation, tap the Phone Button or the Jog Dial. The VOX Phone feature does not work if you are connected to intercom. When you hang up the phone call, the intercom will automatically be recovered.
 - 2) To reject the phone call and stay on the intercom conversation, press the Jog Dial for 2 seconds until you hear a beep.
2. When you have an incoming intercom call during a mobile phone call, you will hear 4 high toned beeps, alerting you that there is an incoming intercom call. You will also hear a voice prompt, **“Intercom requested”**. In this case, the intercom call does not override the mobile call because intercom has lower priority than mobile call. You have to hang up the mobile phone call to make or receive an intercom call.

3. You can have a three-way conference phone call by adding an intercom friend to the mobile phone conversation. During a mobile phone conversation, tap the Jog Dial to invite one of the intercom friends to the mobile phone line. To disconnect the intercom first and go back to your private mobile phone call, terminate the intercom by tapping the Jog Dial. To end the mobile phone call first and maintain the intercom conversation, tap the Phone Button, or press the Jog Dial for 2 seconds, or wait for the person on the mobile phone line to end the call.

10 UNIVERSAL INTERCOM

You can have an intercom conversation with non-Sena Bluetooth headsets using the Universal Intercom function. Non-Sena Bluetooth headsets can be connected to the Sena Bluetooth headset if they support the Bluetooth Hands-Free Profile (HFP). The working distance may differ depending on the performance of Bluetooth headset that it is connected to. In general, it is shorter than normal intercom distance since it uses the Bluetooth Hands-Free Profile. The Universal Intercom affects both the phone call connection and the multipoint connection (devices paired via Second Mobile Phone Pairing). You cannot use a multipoint connection device while you are using the Universal Intercom in case as below.

1. If a non-Sena headset does not support a multipoint connection, it cannot use a phone call connection while using the Universal Intercom.
2. As for Sena headsets, the Universal Intercom affects the multipoint connection.

3. If non-Sena headset (already paired as Universal Intercom with Sena) is turned on, then the multipoint connection is automatically deactivated. And the non-Sena headset is automatically connected to Sena headset as a Universal Intercom. So you cannot use multipoint connection devices, while a non-Sena headset is turned on.
4. Even though you disconnect the non-Sena headset as a Universal Intercom, it will not automatically restore the multipoint connection. To restore the multipoint connection, you should turn off the non-Sena headset first, then try to connect to multipoint device manually from the device screen or simply reboot the device so that it automatically connects to the Sena headset.

10.1 Universal Intercom Pairing

The Tufftalk can be paired with non-Sena Bluetooth headsets for Bluetooth intercom conversation. You can pair the Tufftalk with only one non-Sena Bluetooth headset so if you pair with a different non-Sena Bluetooth headset, the previous pairing will be removed.

1. Turn on the Tufftalk and a non-Sena Bluetooth headset that you want to pair with.
2. Press the Jog Dial for 10 seconds to enter the configuration menu. Rotate the Jog Dial until you hear a voice prompt, **“Universal intercom pairing”**. Tap the Phone Button to enter into Universal Intercom Pairing mode and the blue LED will flash rapidly and you will hear multiple beeps. Please refer to *section 16.11, “Universal Intercom Pairing”* for more details.
3. Perform the operation required for handsfree pairing on the non-Sena Bluetooth headset (refer to *the User’s Guide for the headsets* you want to use). The Tufftalk will automatically pair with a non-Sena Bluetooth headset when each are in pairing mode.

10.2 Two-way Universal Intercom


You can initiate the Universal Intercom connection with non-Sena Bluetooth headsets using the same intercom connection method as you would between other Sena headsets. You may single tap the Jog Dial to begin an intercom conversation with the first intercom friend, double tap with the second intercom friend, and triple tap with the third intercom friend.

Non-Sena Bluetooth headsets may initiate the Universal Intercom connection, by activating the voice dialer or using the redialing operation. You may also disconnect the existing connection by using the operation to end a call (refer to *the User's Guide of the headsets* for voice dialer, redialing, and ending a call).


10.3 Three-way Universal Intercom

You may make a three-way Universal Intercom connection with two Tufftalk headsets and one non-Sena Bluetooth headset. If the intercom connection is made, all headsets connected cannot use the mobile phone call function since the connection between the headset and the phone is disconnected temporarily. If you disconnect the intercom call, the mobile phone connection is made again automatically so that you can use a mobile phone call function.


1. You (A) need to be paired with a non-Sena Bluetooth headset (B) and another Tufftalk headset (C) for the three-way conference intercom.

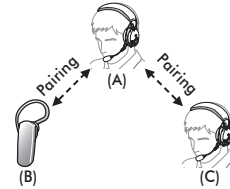


2. Start an intercom conversation with non-Sena Bluetooth headset (B) in your intercom group. For example, you (A) may start an intercom conversation with non-Sena Bluetooth headset (B). The non-Sena Bluetooth headset (B) may also start an intercom call with you (A).

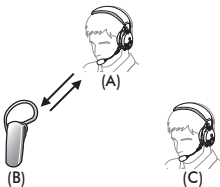

3. The other Tufftalk (C) may join the intercom by making an intercom call to you (A).

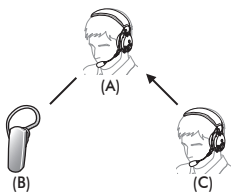

4. Now you (A), non-Sena Bluetooth headset (B), and the other Tufftalk (C) are having a three-way conference intercom.

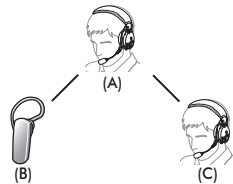

5. You may disconnect three-way Universal Intercom using the same way as you do in normal three-way intercom. Please refer to *section 8.2.2, "Ending Three-way Intercom"*.

10.4 Four-way Universal Intercom


You may make a four-way Universal Intercom connection with a couple of different configurations, 1) *three Tufftalk headsets and one non-Sena Bluetooth headset* or 2) *two Tufftalk headsets and two non-Sena Bluetooth headsets*.

You may have a couple of other Four-way Universal Intercom configurations, 1) *your headset (A), a non-Sena Bluetooth headset (B), another Tufftalk (C), and a non-Sena Bluetooth headset (D)*, 2) *your headset (A), a non-Sena Bluetooth headset (B), and two other Tufftalk headsets (C and D)*. You may make the four-way Universal Intercom call the same way as a normal four-way intercom call.


10.4.1 Four-way Universal Intercom Case 1

Two Tufftalk headsets (A and C) and two non-Sena Bluetooth headsets (B and D)


1. You (A) may start an intercom conversation with the non-Sena Bluetooth headset (B).

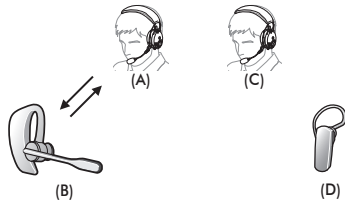


2. The other Tufftalk (C) may join the intercom by making an intercom call to you (A).

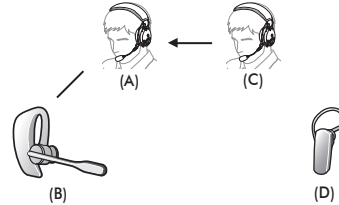

3. The non-Sena Bluetooth headset (D) may join the conference intercom by making an intercom call to the Tufftalk (C).

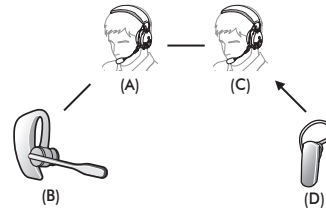

4. Now two Tufftalk headsets (A & C) and two non-Sena Bluetooth headsets (B & D) are connected with the four-way Universal Intercom.

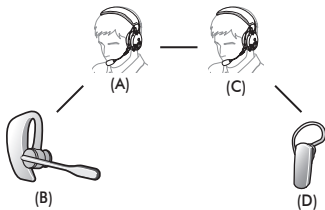


You may disconnect a four-way Universal Intercom using the same way as you do in a normal four-way intercom. Please refer to *section 8.3.2, "Ending Four-way Intercom"*.

10.4.2 Four-way Universal Intercom Case 2

Three Tufftalk headsets (A, C and D) and one non-Sena Bluetooth headset (B)

The procedure is the same as case 1 described in *section 10.4.1, "Four-way Universal Intercom Case 1"*.

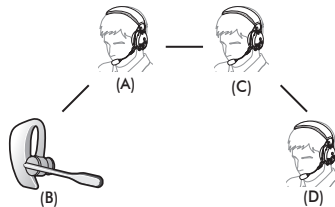


11 GROUP INTERCOM

Group Intercom allows you to instantly create a multi-way conference intercom with three other most recently paired headsets.

1. Go through intercom pairing with up to three headsets you want to have Group Intercom with.
2. Press the Jog Dial for 3 seconds to begin Group Intercom. The LED will flash green and you will hear a voice prompt, “**Group intercom**”.
3. To terminate Group Intercom, press the Jog Dial for 1 second during Group Intercom. You will hear a voice prompt, “**Group intercom terminated**”.

12 AMBIENT MODE

By activating the Ambient Mode, you can hear outside sounds such as voices of other people, without having to take off the headset. To activate the Ambient Mode, tap the Ambient Mode Button, which is placed on the right speaker. To deactivate the Ambient Mode, tap the Ambient Mode Button again.

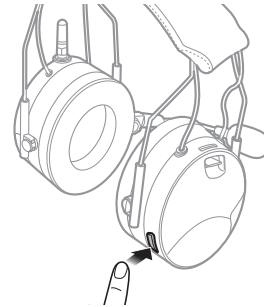


Note:

The Ambient Mode has higher priority than the intercom, so you cannot listen to music, or have an intercom conversation if the Ambient Mode is activated. Only mobile phone calls are allowed during the Ambient Mode.

13 TWO-WAY RADIO

13.1 Wired Two-way Radio

You can connect a two-way radio with the Tufftalk and talk with the other person using the PTT Button. The PTT Button is for wired two-way radio only. You cannot use wired two-way radio during intercom. Also, you cannot listen to music when two-way radio cable is connected to the two-way radio port.

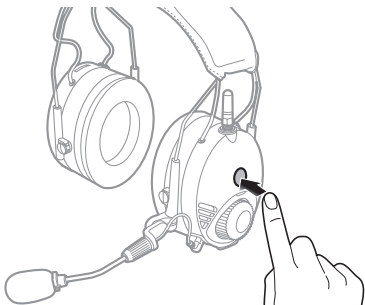

1. Connect the two-way radio with the Tufftalk using the two-way radio cable (sold separately) and port.
2. Press and hold the PTT Button near the Jog Dial to open the audio channel and talk to the other person.
3. Release the PTT Button to receive radio signals.

Note:

You can also create a cable that wires the Tufftalk and the two-way radio. Follow the diagram below to correctly wire the cable.



13.2 Wireless Two-way Radio

Sena SR10 (sold separately) is a two-way radio adapter that allows a second two-way radio to be connected with the Tufftalk (please refer to section 5.2, “Second Mobile Phone Pairing - Second Mobile Phone and SR10”). Incoming audio from the two-way radio will not interrupt an intercom conversation but is heard in the background.

14 FM RADIO

14.1 FM Radio On and Off

To turn on the FM radio, press the Phone Button for 1 second until you hear a mid-toned double beep sound. You will then hear a voice prompt, **“FM on”**. To turn off the FM radio, press the Phone Button for 1 second until you hear a voice prompt, **“FM off”**. When you power it off, the Tufftalk will remember the last station frequency. When you power it on, the last station frequency will be playing.

14.2 Preset Stations

You can listen to preset stations while listening to the FM radio. Tap the Phone Button once to go upward to your next saved preset station.

14.3 Seek and Save

“Seek” is the function that searches for station to station frequencies. To use the “Seek” function, please follow the procedure below:

1. Rotate while pressing the Jog Dial clockwise or counter clockwise to search down or up the station dial.
2. If the tuner finds a station while searching frequencies, it stops the seek function.
3. To save the current station, press and hold the Jog Dial for 1 second until you hear a voice prompt, **“Preset (#)”**.
4. Rotate the Jog Dial in order to select which preset number you want for that specific station. You can save up to 10 preset stations. (You may cancel the preset operation by waiting approximately 10 seconds. You will then hear **“Save preset cancelled”**. You can also rotate the Jog Dial until you hear **“Cancel”**. Tap the Jog Dial to confirm cancellation. You will then hear **“Save preset cancelled”**.)
5. To save the current station, tap the Jog Dial again. You will then hear a voice prompt, **“Save preset (#)”**.
6. To delete the saved station in the preset number, tap the Phone Button. You will then hear a voice prompt, **“Delete preset (#)”**.

Note:

1. You can save FM stations to presets before using FM radio. Connect the Tufftalk to your PC and open the Sena Device Manager. It allows you to save up to 10 FM station frequency presets on the Tufftalk settings menu. You may do the same operation by using the Sena Smartphone App.
2. You can still answer an incoming phone call and intercom while listening to the FM radio.

14.4 Scan and Save

“Scan” is the function that automatically searches station frequencies, starting from the current frequency and up. To use the scan function, please follow the procedures below:

1. Double tap the Phone Button. Then the current station frequency moves upward to find other station frequencies.
2. If the tuner finds a station, it stays at the station frequency for 8 seconds, then scanning to the next station frequency.
3. Scan function stops when you double tap the Phone Button again.
4. To save a station while scanning frequencies, tap the Phone Button when at that station. You will hear a voice prompt from the Tufftalk, “**Save preset (#)**”. The station will be saved as the next preset number.
5. All stations preset during “Scan”, will overwrite previously set stations.

14.5 Temporary Preset

With the temporary preset function, you may temporarily preset stations automatically without changing the existing preset stations. Tap the Phone Button three times to automatically scan for 10 temporary preset stations. The temporary preset stations will be cleared when the system is powered off.

14.6 Region Selection

You can select the proper FM frequency region from the Sena Device Manager. With the region setting, you may optimize the seek function to avoid unnecessary frequency ranges (factory default: worldwide).

Region	Frequency range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
Americas	87.5 ~ 107.9 MHz	± 200 kHz
Asia	87.5 ~ 108.0 MHz	± 100 kHz
Australia	87.5 ~ 107.9 MHz	± 200 kHz
Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

15 FUNCTION PRIORITY

The Tufftalk operates in the following order of priority:

(highest)	Ambient Mode, Mobile phone Intercom FM Radio
(lowest)	Bluetooth stereo music

A lower priority function is always interrupted by a higher priority function. For example, stereo music is interrupted by intercom call, and an intercom conversation is interrupted by an incoming mobile phone call.


16 CONFIGURATION SETTING

You can set the configuration of the Tufftalk by the voice menu instruction described below.

1. To enter into voice configuration menu, press and hold the Jog Dial for 10 seconds until the LED shows solid blue and you hear high toned double beeps. You will also hear a voice prompt, **“Configuration menu”**.
2. Rotate the Jog Dial to navigate between the menus. You will hear voice prompts for each menu item as below.
3. You can enable the feature or execute the command by tapping the Phone Button, or disable the feature by tapping the Jog Dial.
4. If no button is pressed within 10 seconds, the Tufftalk will exit the configuration and go back to stand-by mode.
5. If you want to exit the configuration immediately, rotate the Jog Dial until you hear a voice prompt, **“Exit configuration”**, and tap the Phone Button.

The voice prompt for each menu item is as below:

- | | |
|-------------------------|--|
| (1) <i>Speed dial</i> | (7) <i>RDS AF setting</i> |
| (2) <i>Audio boost</i> | (8) <i>Sidetone</i> |
| (3) <i>VOX phone</i> | (9) <i>Noise control</i> |
| (4) <i>VOX intercom</i> | (10) <i>Delete all pairings</i> |
| (5) <i>HD intercom</i> | (11) <i>Universal intercom pairing</i> |
| (6) <i>Voice prompt</i> | (12) <i>Exit configuration</i> |

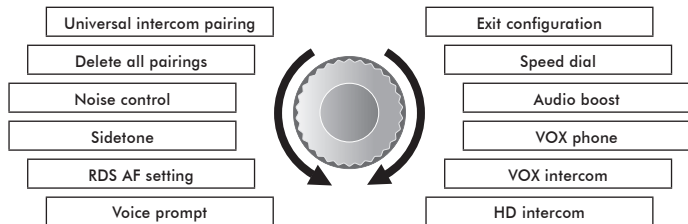

16.1 Assigning Speed Dial

Voice Prompt	"Speed dial"
Factory Default	N/A
Execute	Tap the Phone Button

- To assign a phone number as a speed dial, rotate the Jog Dial until you hear a voice prompt, "**Speed dial**".
- Tap the Phone Button, and you will hear a voice prompt, "**Speed dial one**" and "**Phone connected**".
- Rotate the Jog Dial to select one of three speed dial numbers and you hear a voice prompt, "**Speed dial (#)**".
- Call a phone number you want to assign and you will hear a voice prompt, "**Save speed dial (#)**". The phone number is automatically assigned to the selected speed dial number. Then the phone call will hang up before being connected.
- To exit the menu, rotate the Jog Dial until you hear a voice prompt, "**Cancel**", and tap the Phone Button to confirm. You will then hear a voice prompt, "**Cancel**". If no button is pressed within 1 minute, the Tufftalk will exit the configuration menu and go back to stand-by mode.

Note:

1. After assigning a phone number to one of three speed dials, you can continually assign another phone number to the rest of two speed dials.
2. You can also assign phone numbers for speed dialing by using the Sena Device Manager software or the Sena Smartphone App.

16.2 Enabling/Disabling Audio Boost

Voice Prompt	“Audio boost”
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

Enabling Audio Boost increases the overall maximum volume. Disabling Audio Boost reduces the overall maximum volume, but delivers more balanced sound.

16.3 Enabling/Disabling Voice Activated Phone Answering

Voice Prompt	“VOX phone”
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

If this feature is enabled, you can answer incoming calls by voice. When you hear a ringtone for an incoming call, you can answer the phone by saying a word such as **“Hello”** loudly or by blowing air into the microphone. VOX phone is temporarily disabled if you are connected to intercom. If this feature is disabled, you have to tap the Phone Button to answer an incoming call.

16.4 Enabling/Disabling Voice Activated Intercom

Voice Prompt	“VOX intercom”
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

If this feature is enabled, you can initiate an intercom conversation with the last connected intercom friend by voice. When you want to start intercom, say a word such as **“Hello”** loudly or blow air into the microphone. If you start an intercom conversation by voice, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the Phone Button, you have to terminate the intercom conversation manually.

However, if you start intercom by voice and end it manually by tapping the Jog Dial, you will not be able to start intercom by voice temporarily. In this case, you have to tap the Jog Dial to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. After rebooting the Tufftalk, you can start intercom by voice again.

16.5 Enabling/Disabling HD Intercom

Voice Prompt	“HD intercom”
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

HD Intercom enhances the two-way intercom audio from normal quality to HD quality. HD Intercom will become temporarily disabled when you enter into a multi-way intercom. If this feature is disabled, the two-way intercom audio will change to normal quality.

Note:

The intercom distance of HD Intercom is relatively shorter than that of normal intercom.

16.6 Enabling/Disabling Voice Prompts

Voice Prompt	“Voice prompt”
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

You can disable voice prompts by configuration setting, but the following voice prompts are always on.

- Voice prompts for configuration setting menu
- Voice prompts for battery level indicator
- Voice prompts for speed dial
- Voice prompts for FM radio functions

16.7 Enabling/Disabling RDS AF

Voice Prompt	“RDS AF setting”
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

RDS AF allows a receiver to re-tune to the second frequency location when the first signal becomes too weak. With RDS AF enabled on the receiver, a radio station with more than one frequency can be used.

16.8 Enabling/Disabling Sidetone

Voice Prompt	“Sidetone”
Factory Default	Disable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

Sidetone is audible feedback of your own voice. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

16.9 Enabling/Disabling Advanced Noise Control™

Voice Prompt	“Noise control”
Factory Default	Enable
Enable	Tap the Phone Button
Disable	Tap the Jog Dial

When Advanced Noise Control is enabled, the background noise is reduced during an intercom conversation. When it is disabled, the background noise is mixed with your voice during intercom.

Note:

If you use your Tufftalk with the Bluetooth Audio Pack for GoPro, you can enable or disable this feature only during Normal Audio Recording Mode. This feature is automatically disabled while in Ultra HD (UHD) Audio Mode.

16.10 Delete All Bluetooth Pairing Information

Voice Prompt	“Delete all pairings”
Factory Default	N/A
Execute	Tap the Phone Button

To delete all Bluetooth pairing information of the Tufftalk, rotate the Jog Dial until you hear a voice prompt, **“Delete all pairings”**, and tap the Phone Button to confirm.

16.11 Universal Intercom Pairing

Voice Prompt	“Universal intercom pairing”
Factory Default	N/A
Execute	Tap the Phone Button

To enter into Universal Intercom Pairing mode, rotate the Jog Dial until you hear a voice prompt, **“Universal intercom pairing”**. Then press the Phone Button to enter into Universal Intercom Pairing mode. The headset will automatically exit from the configuration menu.

16.12 Exit Voice Configuration Menu

Voice Prompt	“Exit configuration”
Factory Default	N/A
Execute	Tap the Phone Button

To exit voice configuration menu and get back to stand-by mode, rotate the Jog Dial until you hear a voice prompt, **“Exit configuration”**, and tap the Phone Button to confirm.

Rotate Jog Dial	Tap Phone Button	Tap Jog Dial
Speed Dial	Execute	N/A
Audio Boost	Enable	Disable
VOX Phone	Enable	Disable
VOX Intercom	Enable	Disable
HD Intercom	Enable	Disable
Voice Prompt	Enable	Disable
RDS AF Setting	Enable	Disable
Sidetone	Enable	Disable
Advanced Noise Control	Enable	Disable
Delete All Pairings	Execute	N/A
Universal Intercom Pairing	Execute	N/A
Exit Configuration	Execute	N/A

Voice Configuration Menu & Button Operations

17 FIRMWARE UPGRADE

The Tufftalk supports firmware upgrades. You can update the firmware using the Sena Device Manager (please refer to *section 4.7.1, "Sena Device Manager"*).

18 TROUBLESHOOTING

18.1 Intercom Failure


When you try to start an intercom conversation with an intercom friend who is unavailable within range or already having a conference intercom with others or a mobile phone call, you will hear a low tone double beep signifying an intercom busy signal. In this case, you have to try again later.

18.2 Intercom Reconnection

If your intercom friend goes out of range while having an intercom conversation, you may hear static noise and eventually the intercom will be disconnected. In this case, the Tufftalk automatically tries to reconnect the intercom every 8 seconds and you will hear high tone double beeps until the intercom is reestablished. If you do not want to make a reconnection, tap the Jog Dial to stop the attempt.

18.3 Fault Reset

When the Tufftalk is not working properly or is in faulty status for any reason, you may reset by pushing the pin-hole reset button located below the left ear cup. Separate the left ear cup and insert a paper clip into the reset pin-hole and press the reset button for a second with light pressure. The Tufftalk will be switched off. Restart the system and try again. This will not restore the headset to factory default settings.

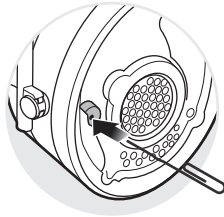

18.4 Factory Reset

1. To restore the Tufftalk to factory default settings, press and hold the Phone Button for 10 seconds until the LED shows solid red and you hear **“Factory reset”**.
2. Within 10 seconds, press the Jog Dial to confirm reset. The headset will be restored to factory setting and switched off automatically. You will hear, **“Headset reset, goodbye”**.
3. If you press the Phone Button or the Jog Dial for 10 seconds, the reset attempt is cancelled and the headset returns to stand-by mode. You will hear a voice prompt, **“Cancelled”**.

19 OPERATION QUICK REFERENCE

Type	Function	Button Command	LED	Beep
Basic Function	Power on	Press the Phone Button and the Jog Dial for 1 second	Solid blue	Ascending beeps
	Power off	Press the Phone Button and the Jog Dial	Solid red	Descending beeps
	Volume adjustment	Rotate the Jog Dial	-	-
	Ambient Mode	Tap the Ambient Mode Button	-	-
	Two-way Radio	Press and hold the PTT Button	-	-
Mobile Phone	Mobile phone pairing	Press the Phone Button for 5 seconds	Blue & red alternatively flashing	High tone multiple beeps
	Second mobile phone pairing	Press the Jog Dial for 5 seconds	Red flashing	Multiple beeps
		Tap the Phone Button within 2 seconds		
	Answer mobile phone call	Tap the Phone Button or the Jog Dial	-	-

Type	Function	Button Command	LED	Beep
Mobile Phone	End mobile phone call	Tap the Phone Button or press the Jog Dial for 2 seconds	-	-
	Voice dial	Tap the Phone Button	-	-
	Speed dial	Double tap the Phone Button	-	Mid-tone single beep
	Reject incoming call	Press the Jog Dial for 2 seconds	-	-
Intercom	Intercom pairing	Press the Jog Dial for 5 seconds	Red flashing	Mid-tone single beep
		Tap the Jog Dial of any one of the two headsets		
	Start/End each intercom	Tap the Jog Dial	-	-
	End all intercoms	Press the Jog Dial for 1 second	Blue flashing	Mid-tone double beeps
	Start Group intercom	Press the Jog Dial for 3 seconds	Green flashing	-
End Group intercom	Press the Jog Dial for 1 second	-	-	
Music	Play/Pause Bluetooth music	Press the Jog Dial for 1 second	-	Mid-tone double beep
	Track forward/back	Rotate the Jog Dial while pressing	-	-

Type	Function	Button Command	LED	Beep
FM Radio	FM radio on/off	Press the Phone Button for 1 second	-	Mid-tone double beeps
	Select preset	Tap the Phone Button	-	Mid-tone single beep
	Seek stations	Rotate the Jog Dial while pressing	-	High tone triple beeps
	Scan up FM band	Double tap the Phone Button	-	-
	Stop scanning	Double tap the Phone Button	-	High tone double beeps
	Save preset while scanning	Tap the Phone Button	-	High tone double beeps
Reset	Factory reset	Press the Phone Button for 10 seconds	Solid red	High tone double beeps
		Tap the Jog Dial within 10 seconds		
	Fault reset	Press the Reset Button	-	-

CERTIFICATION AND SAFETY APPROVALS

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennae
- Increase the separation between the equipment and the receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC RF Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. The antenna used for this transmitter must not transmit simultaneously with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.

FCC Caution

Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

CE Declaration of Conformity

This product is CE marked according to the provisions of the R&TTE Directive (1999/5/EC). Hereby, Sena declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Please note that this product uses radio frequency bands not harmonized within EU. Within the EU this product is intended to be used in Austria, Belgium, Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, The Netherlands, Portugal, Spain, Sweden, United Kingdom and within EFTA in Iceland, Norway and Switzerland.

Industry Canada Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Bluetooth License

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sena is under license. Other trademarks and trade names are those of their respective owners.

The product is compliant with and adopts the Bluetooth® Specification 4.1 and has successfully passed all interoperability tests that are specified in the Bluetooth® specification. However, interoperability between the device and other Bluetooth®-enabled products is not guaranteed.

NRR Information

The Tufftalk has been tested according to ANSI S3. 19-1974, EN 352-1 and EN 352-3.

Model (Over-the-Head Earmuff Type) Attenuation Characteristics

	Frequency in Hz								
Subject	125	250	500	1000	2000	3150	4000	6300	8000
Mean	19.2	20.6	28.7	34.1	35.4	41.3	43.9	45.4	44.5
Standard Deviation	4.0	2.7	2.4	3.1	3.1	3.4	3.2	3.5	2.9

Overall device NRR when property fitted is 24dB.

Model (Hard Hat Mount Earmuff Type) Attenuation Characteristics

	Frequency in Hz								
Subject	25	250	500	1000	2000	3150	4000	6300	8000
Mean	17.4	18.9	25.5	30.1	34.7	37.9	40.2	34.9	36.3
Standard Deviation	2.8	2.7	2.7	3.0	2.5	2.7	3.3	4.1	3.7

Overall device NRR when property fitted is 22dB.

Note:

Improper fit of this device will reduce its effectiveness in attenuating noise.

Important Earmuff Fitting Instructions

1. Inspect the Tufftalk for dirt damage and foreign objects each time before you place the headset on your head.
2. Ear muffs offer excellent protection if the earpieces are fitted and adjusted properly. Your ears should be completely enclosed by the ear cushions.
3. Never attempt to physically modify, bend, or overstress the headband which may compromise the NRR rating, proper fit and void the product warranty.

4. Regularly check the ear cushions for wear and clean them occasionally as necessary with a damp cloth or distinct ear cushion surface with non-alcohol PPE wipes (Do not use harsh detergents or any solvents which may damage the ear cushion over time). Check the ear cushions for wear. If the cushions become hard, damaged or otherwise deteriorate, they should be replaced promptly (Contact Sena or your authorized dealer for exact replacement parts).

Warning

Hats, balaclavas, glasses or other items worn on the head may potentially prevent proper sealing and reduce the level of hearing protection significantly which can possibly cause hearing damage.

Although hearing protectors can be recommended for protection against the harmful effects of impulsive noise, the Noise Reduction Rating (NRR) is based on the attenuation of continuous noise and may not be an accurate indicator of the protection attainable against impulsive noise such as gunfire.

NRR example

1. The environmental noise level as measured at the ear is 92 dBA.
2. The NRR is (value on label) decibels (dB).
3. The level of noise entering the ear is approximately equal to [92 dB(A) - NRR dB(A)].

Caution

For noise environments dominated by frequencies below 500 Hz “the C weighted environmental noise level should be used.”

WEEE (Waste Electrical and Electronic Equipment)



The crossed-out wheel bin symbol on the product, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies to the European Union and other locations where separate collection systems are available. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please do not dispose of these products as unsorted municipal waste, but hand it in at an official collection point for recycling.

SAFETY INFORMATION

Please ensure that the product is properly used by observing the warnings and cautions below to prevent any risk and/or damage to property.

Product Storage and Management

- Keep the product free of dust. It may damage mechanical and electronic parts of the product.
- Do not store the product in high temperatures as this may reduce the life span of electronic devices, damage the battery, and/or melt plastic parts of the product.
- Do not store the product in cold temperatures. Abrupt changes in temperatures may cause condensation and damage electronic circuits.
- Do not clean the product with cleaning solvents, toxic chemicals, or strong detergents as this may damage the product.
- Do not paint the product. Paint may obstruct moving parts or interfere with the normal operation of the product.
- Do not drop or otherwise shock the product. It may damage the product or its internal electronic circuits.
- Do not disassemble, repair or modify the product as this may damage the product and invalidate the product warranty.

- Do not store the product in humid environments, especially for long time storage.
- Inspect your earpieces and microphone sponge frequently for wear. If you see any defect such as holes or cracks in the earpieces, ear cushions, or headband, the headset should be immediately repaired or replaced.

Product Use

- Use of the product at a high volume for a long period of time may damage your eardrums or hearing ability. Keep the volume at a modest level to prevent damage.
- Do not cause impact to the product or touch it with sharp tools as this may damage the product.
- Do not use the product in high-temperatures or apply heat to the product as this may cause damage, explosion, or fire.
- Keep the product dry and away from water. It may damage the product.
- Keep product away from pets or small children. It may damage the product.
- The headset may hold small objects in the area of the earpiece. Before use, check that the earpiece area is free of staples, clips or any other small metallic objects or foreign matter.

- Do not use the product near a microwave oven or a wireless LAN device as this may cause malfunction or interference with the product.
- In any place where wireless communication is prohibited, such as hospitals or airplanes, turn off the power and refrain from using the product. In a place where wireless communication is prohibited, electromagnetic waves may cause hazards or accidents.
- Do not use the product near hazardous explosives. When it is near any explosion hazards, turn off the power and heed any regulations, instructions, and signs in the area.
- When using the product, be certain to conform to laws regarding the use of communications devices while riding.
- Do not put the product where it may hamper the rider's vision or manipulate it while riding. This may cause traffic accidents.
- Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.
- If the product is damaged, stop using it immediately. It may cause damage, explosion, or fire.

Battery

This product has a replaceable rechargeable battery inside. Therefore, when using the product, make sure to adhere to the following:

- The battery performance may be reduced over time with usage.
- In recharging the battery, make sure to use an approved charger provided by the manufacturer. Use of a non-approved charger may cause fire, explosion, leakage, and other hazards may also reduce the life time or performance of the battery.
- Store the battery at temperatures of 15°C ~ 25°C (59°F ~ 77°F). Higher or lower temperatures may reduce the capacity and life of the battery, or may cause temporary non-operation. Do not use the product in sub-zero temperature, because it may cause serious reduction of the battery performance.
- If you apply heat to the battery or throw it into fire, it may explode.
- Do not use the product with a damaged battery. It may explode and/or cause accidents.
- Never use a damaged charger. It may explode and/or cause accidents.
- Battery life may vary depending on conditions, environmental factors, functions of the product in use, and devices used with it.